

# DU MONT INDUSTRIAL CATHODE-RAY TUBES

Second Edition

INDUSTRIAL TUBE SALES DEPARTMENT
ALLEN B. DU MONT LABORATORIES, INC.
PASSAIC NEW JERSEY

#### Copyright 1956

### Industrial Tube Sales Department ALLEN B. DU MONT LABORATORIES, INC.

Passaic, New Jersey, U.S.A.

## GENERAL INFORMATION

#### TABLE OF CONTENTS

#### GENERAL INFORMATION

| Considerations in Choice of Cathode-ray Tubes  Deflection-plate Capacitances        | 1     |
|---|-------|
| Retma Screen Phosphors  | 1     |
|   |       |
| DILMONT CATHODE DAY THRE CORES CHARACTERISTICS                                      |       |
| DU MONT CATHODE-RAY TUBE SCREEN CHARACTERISTICS                                     |       |
| P1 Screen   | 9     |
| P2 Screen   |       |
| P7 Screen   |       |
| P11 Screen  | 14    |
| P19 Screen  | 16    |
|   |       |
|   |       |
| DU MONT CATHODE-RAY TUBES   |       |
|   |       |
| Type 3ABP- Cathode-ray Tube   |       |
| Type 3ACP- Cathode-ray Tube   | 22    |
| Type 3ADP- Cathode-ray Tube Type 3GP-A Cathode-ray Tube                             | . 26  |
| Type 3GP-A Cathode-ray Tube   | . 30  |
| Type 3JP- Cathode-ray Tube  | 33    |
| Type 3RP-A Cathode-ray Tube Type 3WP- Cathode-ray Tube                              | 37    |
| Type 4DP- Cathode-ray Tube  Type 4DP- Cathode-ray Tube                              | 40    |
| Type 5ADP- Cathode-ray Tube  Type 5ADP- Cathode-ray Tube                            | 44    |
| Type 5AFP- Cathode-ray Tube  Type 5AFP- Cathode-ray Tube                            | 52    |
| Type 5AHP- Cathode-ray Tube   | 56    |
| Type 5AMP- Cathode-ray Tube   | 58    |
| Type 5AQP- Cathode-ray Tube   | 62    |
| Type 5ARP- Cathode-ray Tube   | 66    |
| Type 5ARP- Cathode-ray Tube Type 5ATP- Cathode-ray Tube                             | 69    |
| Type 5AWP- Cathode-ray Tube   | 73    |
| Type 5AWP- Cathode-ray Tube Type 5BDP- Cathode-ray Tube Type 5BP-A Cathode-ray Tube | 77    |
| Type 5BP-A Cathode-ray Tube   | . 82  |
| Type 5CP-A Cathode-ray Tube   | . 85  |
| Type 5FP- Cathode-ray Tube  |       |
| Type 5JP-A Cathode-ray Tube   |       |
| Type 5LP-A Cathode-ray Tube   | 96    |
| Type 5RP-A Cathode-ray Tube   | . 99  |
| Type 5SP-A Cathode-ray Tube   |       |
| Type 5XP-A Cathode-ray Tube Type 5XP-B Cathode-ray Tube                             | 107   |
| Type 5YP- Cathode-ray Tube  Type 5YP- Cathode-ray Tube                              | 112   |
| Type 51F- Cathode-ray Tube  | 111   |
| Type 7ABP-/7ABP-A Cathode-ray Tubes Type 7ACP- Cathode-ray Tube                     | 121   |
| Type 7AEP- Cathode-ray Tube   | 127   |
| Type 7BP- Cathode-ray Tube  | 131   |
| Type 7BP- Cathode-ray Tube Type 7MP- Cathode-ray Tube                               | 134   |
| Type 7UP7- Cathode-ray Tube   | 137   |
| Type 7UP7- Cathode-ray Tube Type 7YP- Cathode-ray Tube                              | . 139 |
| Type 10KP- Cathode-ray Tube   | . 144 |
| Type 10WP- Cathode-ray Tube   | 147   |
| Type 12ABP-/12ABP-A Cathode-ray Tubes   | . 149 |
| Type 12DP-A Cathode-ray Tube  | . 151 |
| Type 12SP-/12SP-B Cathode-ray Tubes   | 154   |
|   |       |
| BULLACUE DAS TRIONES O SPECIAL CARLIANS BAY THE                                     |       |
| DU MONT GAS TRIODES, & SPECIAL CATHODE-RAY TUBES                                    |       |
| Type 2B4 Gas Triode   | 150   |
| Type 6Q5G Gas Triode  Type 6Q5G Gas Triode  |       |
| Special Cathode-ray Tubes   |       |
| Special Camboo kay kaooo  |       |
|   |       |

## CONSIDERATIONS INVOLVED IN THE CHOICE AND USE OF CATHODE-RAY TUBES FOR OSCILLOGRAPHS AND FOR SPECIAL APPLICATIONS

In choosing a cathode-ray tube for any particular application, points which should be considered are type of screen to be used, operating potentials which can be supplied conveniently or economically, spot size and intensity required, deflection sensitivity required, and the importance of deflection-plate and grid capacitance.

#### Operating Potentials, Spot Size, Intensity, Deflection Sensitivity

In most applications, high deflection sensitivity, high intensity, small spot-size, and minimum operating potentials are desirable. Since there are several conflicting factors involved, compromise is usually necessary. In general, intensity and spot size must be considered together. With a given tube, the spot size decreases and brilliance improves with increasing accelerating voltage, but the deflection sensitivity decreases. Furthermore, high accelerating voltages are, from the standpoint of economy and simplicity, undesirable. The particular application will, therefore, determine the tube to be used and the conditions of its operation. Where maximum intensity and minimum spot size are most important, high accelerating volt-

ages are indicated. Where maximum deflection sensitivity is the most important requirement, lower accelerating potentials should be used. For applications where maximum deflection sensitivity and maximum brilliance are required, intensifier-type cathode-ray tubes should be used, since a high final accelerating potential can be used with a minimum of effect on the deflection sensitivity. The intensifier-type cathode-ray tube also simplifies the power supply probblem for a given overall accelerating potential by reducing the maximum voltage for which the power supply must be insulated from ground.

#### **Deflection-plate Capacitances**

For applications where high-frequency potentials are supplied to the deflection plates, minimum deflection-plate lead lengths and capacitances are essential. For such applications, special high-frequency cathode-ray tubes are made in which the leads are brought from the deflection plates directly to terminal caps on the neck of the cathode-ray tube opposite the plates. In this way the total effective capacitance between two plates of a deflection-plate pair can be lowered to one or two  $\mu\mu$ f.

#### RETMA SCREEN PHOSPHORS

#### Screens

The screen is the part of the cathode-ray tube where the energy of the electron beam is transformed into useful light output. Particular attention must be given, therefore, to the proper choice of the screen material according to the desired application.

Du Mont can supply any phosphor with any cathode-ray tube. However, the phosphors listed as standard with each oscillograph in the Du Mont Instrument Catalog' are those which have proved themselves most satisfactory for the instrument in question, and which provide the best performance over the range of applications for which that instrument was designed. It is only in the most unusual circumstances that a phosphor other than those recommended for use with the instrument is required.

A brief description of various screen types and their applications is given in the following paragraphs.

#### **Common Oscillographic Phosphors**

While many of the RETMA phosphors were developed specifically for oscillographic applications, only five of them are currently in general use: the P1, P2, P5, P7, and P11. Other RETMA phosphors either find little application in oscillography, or, like the Type P3, have been made obsolete by more recent developments.

The P15 and P19 phosphors are not found in general oscillographic work. However, with the possibility that they will find broader application in the future, a description of them here is not out of place.

#### Type P1

The P1 phosphor is probably the most commonly used for general-purpose oscillography, where the usual application is the visual observation of repetitive phenomena. The P1 is an efficient screen material, producing a relatively brilliant green trace at low accelerating potentials. The spectral

 $<sup>^{1}\</sup>mathrm{See}$  Du Mont Catalog of Cathode-ray Instruments,  $10\mathrm{th}$  Edition.

# STANDARD RETMA PHOSPHORS

| Designation               | C.<br>Fluorescent   | Color<br>Phosphorescent  | Spectral Range<br>Between 10% Points | Spectral Peak              | Persistence           | Applications   |
|---------------------------|---|--|--------------------------------------|----------------------------|-----------------------|--|
| . P1                      | Green   | Green  | 4900 - 5800                          | 5250                       | Medium                | High visual efficiency; general screen for oscillographs.  |
| P2                        | Blue-green  | Green  | 4500 - 6400 .                        | 5430                       | Long                  | General purpose. By the use of filters either short or long persistence characteristics may be utilized.   |
| P3                        | Yellow  | Yellow   | 5040 - 7000                          | 6020                       | Medium                | No longer in general use.  |
| P4, Sulfide               | White   | White  | 3900 - 6630                          | 2 components<br>5650, 4400 | Short                 | Used primarily for television picture tubes.   |
| P4, Silicate<br>(See P18) | White   | Blue   | 3260 - 7040                          | 2 components<br>5400, 4100 | Medium                | Used primarily for television picture tubes.   |
| P4, Silicate<br>Sulfide   | White   | Yellow   | 3300 - 6990                          | 5400, 4350                 | Medium                | Used primarily for television picture tubes.   |
| PS                        | Blue  | Blue   | 3480 - 5750                          | 4300                       | Very Short            | Used primarily for photography on continuous-motion film for frequencies above 200 KC. Not as actinic as P11.  |
| Ъ6                        | White   | White  | 4160 - 6950                          | 2 components<br>5630, 4600 | Short                 | No longer in general use.  |
| <b>P</b> 7                | Blue-White  | Yellow   | 3900 - 6500                          | 2 components<br>5580, 4400 | One Short<br>One Long | Developed for radar. Similar in characteristics to P2, but has longer persistence. Useful for radar, low speed transients, and integrating repetitive phenomena. |
| P8                        | No longer in general use.   | general use.   |                                      |                            |                       |  |
| Р9                        | No longer in general use.   | general use.   |                                      |                            |                       |  |
| <b>P</b> 10               | Dark trace: color depends upon absorption character tics and type of illumination | Dark trace: color depends upon absorption characteristics and type of illumination | 4000 - 5500                          |                            | Very Long             | Used chiefly for radar. Pattern erased by infra-red radiation.   |
| P11                       | Blue  | Blue   | 4000 - 5500                          | 4600                       | Short                 | Used primarily for oscillographic recording; has higher visual and photographic efficiency than P5, but persistence is greater.                                  |
| P12                       | Orange  | Orange   | 5450 - 6800                          | 5900                       | Medium Long           | Used primarily for fire-control radar for scanning rates of from 2 to 5 scans per second.  |

| P13         No longer in general use.         3900 - 7100         2 components on 6010, 4000         One Short sites.         Similar to P7 b 6010, 4000         One Medium Long sites.         Similar to P7 b 6010, 4400         One Medium Long sites.         Similar to P7 b 6010, 4400         One Medium Long sites.         Similar to P7 b 1940 bit sites.         Similar to P7 bit sites.         P7 bit sites. | Designation                  | Fluorescent           | Color<br>Fluorescent Phosphorescent | Spectral Range<br>Between 10% Points | Spectral Peak                       | Persistence  | Applications  |
|--|------------------------------|-----------------------|-------------------------------------|--------------------------------------|-------------------------------------|--|---|
| Purple   Orange   3900 - 7100   2 components   One Short   | P13                          | No longer in          | n general use.                      |                                      |                                     |  |   |
| Blue-green   Blue-green   3360 - 6050   5040, 3910   Extremely Short   | P14                          | Purple                | Orange                              | 3900 - 7100                          | 2 components<br>6010, 4400          | One Short<br>One Medium Long                       | Similar to P7 but of shorter decay characteristics.   |
| P. Violet and near UV inclet inclet.         Violet and near UV inclet and near UV inclet.         Asson - 6350         4500, 5540         Two components one include, one include, one include include.           Se P4, viite         Blue         3260 - 7040         5400, 4100         Medium increte.           Orange         Orange         5450 - 6650         5950         Very long include.           Vellow- green         4600 - 6490         5550         Short include.           Tri-color         Tri-color         5540 - 6500         6060         Very long include.           White         White         4000 - 7200         2 components include.         Short include.           Blue-green         Blue-green         4260 - 6400         5070         Extremely Short include.           Orange         Orange         5300 - 7100         5070         Very Long   | P15                          | Blue-green            | Blue-green                          | 3700 - 6050                          | 5040, 3910                          | Extremely Short                                    | Used primarily for flying-spot scanners; or for high-resolution, high-frequency continuous motion recording. Not as actinic as P11. |
| Greenish- Yellow         Yellow Sano - 6350         4500, 5540         Two components one long, one extremely short articles.           Pet P4, icate)         White         Blue         3260 - 7040         5400, 4100         Medium articles.           Orange         Orange         Orange         5450 - 6650         5950         Very long articles.           Yellow- green         Yellow- green         4600 - 6490         5550         Short long articles.           - Tri-color         Tri-color         3300 - 6800         6060         Very long articles.           White         White         4000 - 7200         2 components articles.         Short articles.           Blue-green         Blue-green         4260 - 6400         5070         Extremely Short articles.           Orange         Orange         5300 - 7100         5070         Very Long  | P16                          | Violet and<br>near UV | Violet and near UV                  | 3350 - 4370                          | 3940                                | Extremely Short                                    | Flying spot scanner applications. Shortest persistence screen at present time.  |
| ee P4, cate)         White         Blue         3260 - 7040         5400, 4100         Medium           cate)         Orange         Orange         5450 - 6650         5950         Very long           Yellow-         Yellow-         4600 - 6490         5550         Short           Orange         Orange         5540 - 6500         6060         Very long           Tri-color         Tri-color         3300 - 6800         3 components 4500         Two Medium 4500           White         White         4000 - 7200         2 components 5750, 4600         Two Medium 5750, 4600           Blue-green         Blue-green         4260 - 6400         5070         Extremely Short           Orange         Orange         Orange         5300 - 7100         6100         Very Long  | P17                          | Greenish-<br>Yellow   | Yellow                              | 3800 - 6350                          | 4500, 5540                          | Two components<br>one long, one<br>extremely short | Similar to P7 except for extremely short fluorescence.  |
| Vellow-         Yellow-         4600 - 6490         5550         Very long           orange         Orange         5540 - 6500         6060         Very long           Tri-color         Tri-color         3900 - 6800         3 components 6430, 5260, 4500         Two Medium 4500           White         White         4000 - 7200         2 components 5750, 4600         Short 5750, 4600           Blue-green         Blue-green         4260 - 6400         5070         Extremely Short 6100           Orange         Orange         5300 - 7100         6100         Very Long  | P18<br>(See P4,<br>Silicate) | White                 | Blue                                | 3260 - 7040                          | 5400, 4100                          | Medium   | Used primarily for television picture tubes.  |
| Yellow- green         Yellow- green         4600 - 6490         5550         Short           Orange         Orange         5540 - 6500         6060         Very long           Tri-color         3900 - 6800         3 components 6430, 5260, 4500         Two Medium 4500           White         4000 - 7200         2 components 5750, 4600         Short 5750, 4600           Blue-green         Blue-green         4260 - 6400         5070         Extremely Short           Orange         Orange         5300 - 7100         6100         Very Long   | P19                          | Orange                | Orange                              | 5450 - 6650                          | 5950                                | Very long  | Radar indication, particularly for night application.   |
| Tri-color         3900 - 6800         3 components 6430, 5260, 5750, 4600         Two Medium 4500           White         White         4000 - 7200         2 components 5750, 4600         Short 5750, 4600           Blue-green         Blue-green         4260 - 6400         5070         Extremely Short 5750, 4600           Orange         Orange         5300 - 7100         6100         Very Long  | P20                          | Yellow-<br>green      | Yellow-<br>green                    | 4600 - 6490                          | 5550                                | Short  | Similar in decay to P11; has high visual efficiency.  |
| Tri-color         3900 - 6800         3 components 6430, 5260, 4500         Two Medium 4500           White         4000 - 7200         2 components 5750, 4600         Short 5750, 4600           Blue-green         Blue-green         4260 - 6400         5070         Extremely Short 5070           Orange         Orange         5300 - 7100         6100         Very Long  |                              | Orange                | Orange                              | 5540 - 6500                          | 0909                                | Very long  | Used where both PPI and sector scan are viewed simultaneously; has double decay rate: initial decay, medium, changing to long.      |
| White         White         4000 - 7200         2 components 5750, 4600         Short 5750, 4600           Blue-green         Blue-green         4260 - 6400         5070         Extremely Short           Orange         Orange         5300 - 7100         6100         Very Long   | P22                          | Tri-color             |                                     | ·                                    | 3 components<br>6430, 5260,<br>4500 | One Short<br>Two Medium                            | Used for color television.  |
| Blue-green         Blue-green         4260 - 6400         5070         Extremely Short           Orange         Orange         5300 - 7100         6100         Very Long  | P23                          | White                 | White                               | 4000 - 7200                          | 2 components<br>5750, 4600          | Short  | Used for television picture tubes where a sepia-tone effect is desired.   |
| Orange Orange 5300 - 7100 6100 Very Long   | P24                          | Blue-green            | Blue-green                          | 4260 - 6400                          | 5070                                | Extremely Short                                    | Flying-spot scanner use, particularly for color television. Similar to P15 but has wider spectral response in the red region.       |
| 3  | P25                          | Orange                | Orange                              | 5300 - 7100                          | 6100                                | Very Long  | Similar to P19; less efficient than P19 but more burn resistant.  |

distribution of the light output of the P1 screen lies in the region of maximum sensitivity of the human eye. Thus good contrast may be obtained, even under unfavorable conditions of ambient light. The P1 screen is also relatively efficient for photographic recording. Satisfactory oscillograms may be obtained of repetitive or transient phenomena, when there is no need for moving-film photography.

#### Type P2

The P2 phosphor is the most versatile screen material available for oscillographs operating with an accelerating potential of 4000 volts or more. The P2 is a dual-purpose screen, having a blue-green fluorescence of short persistence and a yellow-green phosphorescence of long persistence. The blue component has high photographic efficiency; and persistence of this component is sufficiently short that in almost all instances, it may be used satisfactorily for continuous-motion recording.

The persistence of the yellow component is, on the other hand, sufficiently long that visual observation of single transients and repetitive phenomena of low rates is possible. In most photographic applications, the yellow component serves to increase the photographic-writing-rate capabilities of the instrument. In continuous-motion recording, where the long-persistence phosphorescence would cause blurring, the yellow component may be eliminated by the use of a standard blue filter, such as the Du Mont Type 2560-E Color Filter. However, the P2 will not offer as satisfactory performance in continuous-motion-recording applications as a short-persistence phosphor. In cases where it is desired, the blue "flash" may be removed from the yellow component by means of a yellow filter, such as the Du Mont Type 2560-F. This practice is advantageous when visual observation of this screen over protracted periods is necessary.

When used at higher accelerating potentials, the P2 screen offers characteristics not unlike those of the P1 phosphor. This similarity between the P1 and P2 screens may be greatly increased by the use of a standard green filter such as the Du Mont Type 2560-D.

#### Type P5

The P5 phosphor produces a blue trace of very short persistence and high photographic efficiency. While the persistence of the P5 is somewhat shorter than that of the P11 screen, the efficiency of the P5 phosphor is lower. Thus the P5 screen is

recommended only for those few applications where the shorter persistence is absolutely necessary. In practice, the chief oscillographic application requiring this shorter persistence is the continuous-motion recording of signals containing frequency components above approximately 200 kc.

#### Type P7

The P7 screen, like the P2, is a dualpurpose one, producing a short-persistence blue fluorescence and a long-persistence yellow phosphorescence. As in the case of the P2 phosphor, either component may be eliminated by means of filtering. The Du Mont Types 2560-E and 2560-F filters are recommended. The P7 serves over a broad range of oscillographic applications, including visual observation, as well as photographic recording, of recurrent or transient phenomena. The P7 is more efficient than the P2 at accelerating potentials of less than 5000 volts and so is used primarily with instruments of low or medium accelerating potentials.

#### Type P11

The P11 phosphor produces a blue trace of high photographic efficiency. Its persistence is sufficiently short for the great majority of recording applications, and except for the very few applications where the slightly shorter persistence of the P5 is required, the P11 is recommended as the most practical short-persistence screen for general-purpose oscillography.

#### Type P15

The P15 screen is one of the shortest persistence phosphors presently available. It produces a light-blue-green trace at higher accelerating potentials, and tends to become somewhat more yellow as the accelerating potential is decreased. The P 15 has a decay time1 of less than 1.5 microseconds under normal operating conditions. Decay times of less than one microsecond are possible under special operating conditions. The P15 phosphor is used primarily in the scanning generator of flying-spot scanners, although there are a few oscillographic applications where the very short persistence of the P15 screen may be required. Chief among these applications is high-resolution, high-frequency continuous-motion recording. The P15 screen phosphor is not generally recommended for use at lower accelerating potentials.

<sup>&</sup>lt;sup>1</sup>Decay time is defined in this instance as the time required for the light output to drop to 30% of its initial value.

#### Type P19

The P19 screen is a long-persistence screen having an orange fluorescence and phosphorescence. Under normal circumstances the P19 is backed by an evaporated film of metal to improve light output and to retard deactivation of the screen material by the electron beam. The P19 is particularly well suited for night radar applications.

#### **Grid-drive Characteristics**

Due to unavoidable manufacturing tolerances, large variations occur in the gridvoltage versus screen-current¹ characteristics or the grid voltage versus light output characteristics of individual cathode-ray tubes of the same type. Average characteristics, plotted in the usual way as in Figure 1, are therefore of little help to equipment designers. A somewhat different method of approach has been found more satisfactory for cathode-ray tubes.

The designer of cathode-ray tube equipment is interested primarily in two characteristics insofar as the grid (control electrode) is concerned. First, he must know the cutoff bias limits in order that he may provide a sufficient range of negative d-c grid bias to cut the tube off (extinguish the

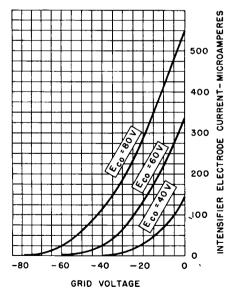


Figure 1. Typical grid-voltage vs. screencurrent characteristics for three different tubes of the same tube type

beam and spot) in all cases. Secondly, he is interested in the variation of screen current or brightness as the grid is made more positive with respect to the cutoff voltage2. In general, the modulating signal is a-c and is superimposed on the d-c grid voltage, so that the absolute value of grid voltage for a given brightness is not so important as the voltage above cutoff; the designer must know how much modulation signal (above cutoff) he needs to provide in order to produce the required screen current or brightness. This voltage above cutoff has become known as Grid Drive, and the characteristic of Grid Drive versus screen current or light output has become known as the Grid Drive Characteristic.

If Grid Drive is plotted against screen current for a large number of tubes, it is found that most of the tubes give approximately straight lines, at least over the part of the curve which is of interest. In tubes in which only a small part of the total cathode current is utilized, which includes most electrostatic deflection tubes, this curve has a slope of approximately 2, indicating an exponential of the form  $I = KE_d^2$ , for the grid drive versus screen current characteristic. Furthermore, on such tubes, the grid drive characteristic curves do not vary appreciably with cutoff bias. It is therefore possible to represent the average grid drive characteristic of an electrostatic deflection tube by a straight-line curve on log paper such as shown in Figure 2. To provide for manufacturing variations, a minimum curve can be drawn below the average curve.

The equipment designers approach then resolves into the following: (1) provide sufficient negative d-c bias at the intensity control to cut off the tube having the maximum cutoff bias permitted by the tube specifications; and (2) if grid modulation is used, provide sufficient grid-modulation voltage (grid drive) to drive the tube to the desired screen current or brightness.

Of course, each tube has a specified brightness, or beam-current rating, (specified for a given operating condition) and the equipment designer cannot depend upon the tube providing more than the specified value. The tube characteristic sheet also specifies the grid drive which must be provided in the equipment for the specified

<sup>&#</sup>x27;Current in the electron beam reaching the fluorescent screen.


<sup>&</sup>lt;sup>2</sup>Note that this does not mean that the grid is made positive, but only less negative.


screen current or light output. Thus, the answer is given immediately for the designer who is operating the tube under the conditions for which the light output or screen current is specified, and who wants to obtain the full, rated screen current or light output. He must be careful, however, to take precautions against the grid being driven positive with respect to the cathode.

For most magnetic deflection tubes, the grid drive characteristics differ from those of electrostatic tubes in that they vary appreciably with the cutoff bias of the particular tube as shown in Figure 3. However, this fact in no way precludes the tube manufacturer from specifying a maximum grid drive for the rated screen current, and the equipment designer proceeds exactly as for the electrostatic tube.

#### **Operating Notes**

Cathode-ray tube power supplies must usually provide between 1000 and 5000 volts d-c at from one to three milliamperes. In oscillographic applications, usual practice is to operate the accelerating electrode (second anode) at ground potential, in order that the deflection plates may be substantially at ground potential and thus facilitate their coupling to deflecting-signal circuits and reduce the hazard in making connections directly to the deflection plates. When this method of operation is used, it is necessary to insulate the transformer winding supplying heater power to the cathode-ray tube for the full accelerating voltage, since the heater and cathode are operated at a negative potential with respect to ground equal to this voltage.

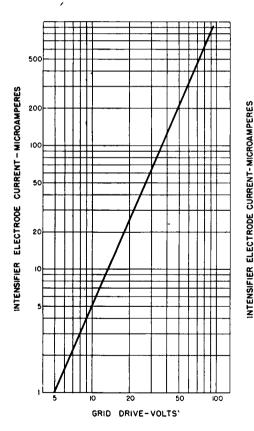



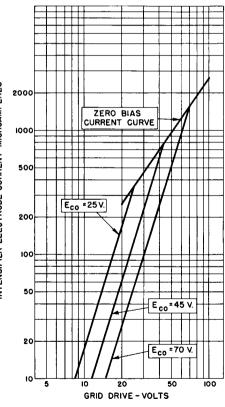


Figure 3. Average grid-drive characteristics for typical magnetic cathode-ray tubes

A voltage divider is ordinarily used to provide the required voltages for the control electrode (grid) and focusing electrode (first anode). The negative voltage is provided by a rheostat or potentiometer at the negative end of the voltage divider, and sufficient range should be provided to permit variation of grid bias from zero to a value at least equal to the maximum cut-off voltage for the tube at the accelerating voltage at which it is to be operated. The focusing voltage potentiometer should be capable of providing a range of voltage to the focusing electrode corresponding to the range over which the voltage required for focus is permitted to vary by the specification for the particular tube type involved.

In order to reduce defocusing of the spot to a minimum, positioning and signal voltages should be balanced whenever possible; that is, equal positive and negative voltages should be applied to the two plates of a deflection-plate pair.

The intensifier should ordinarily be operated at a potential 30% to 100% of the accelerating electrode potential. When lower

values of intensifier voltage are to be used, the intensifier can be connected to a 300- or 400-volt plate supply if such a supply is readily available. If a higher intensifier potential is desired, a separate rectifier, operating from the same high-voltage transformer winding as the accelerating voltage supply, with heater winding and a simple resistance-capacitance filter, are easily provided.

In a transformer designed for operating cathode-ray tube circuits, both the heater winding of the cathode-ray tube and the primary winding should be completely surrounded with grounded electrostatic shields. These shields are necessary to prevent electrostatic coupling to the heater winding which might cause intensity modulation of the cathode-ray beam, and to prevent electrostatic coupling from the high voltage winding to the power-line. It is advisable to ground the chassis of cathode-ray equipment to prevent any possibility of the chassis attaining a high potential with respect to ground. The potentials at which cathoderay tubes operate are dangerous, and precaution should be taken to prevent contact with them.

#### CATHODE-RAY TUBE WALL CHARTS

For the convenience of its customers, the Industrial Tube Sales Department has prepared two wall charts, one listing the complete line of RETMA tubes offered by Du Mont, and the other listing typical Special Cathode-ray Tubes. Complete mechanical and electrical specifications, and other pertinent information are set forth.

These charts are available free of charge by requesting them from the Industrial Tube Sales Department, 2 Main Avenue, Passaic, New Jersey, on your company letterhead.


# DU MONT SCREEN CHARACTERISTICS

#### DU MONT PI SCREEN CHARACTERISTICS


#### **General Description**


Medium-persistence green screen of high visual efficiency, suited for general-purpose

visual oscillographic and indicating applica-

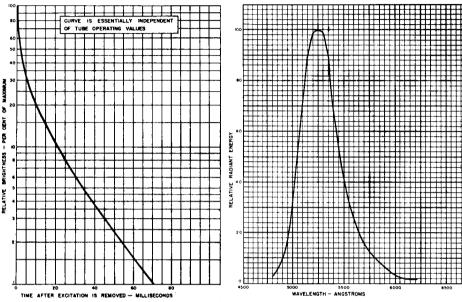


Persistence Characteristic of Phosphor P1



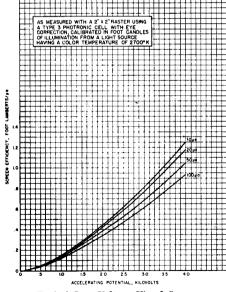


Typical Low Voltage Visual Screen Efficiency Phosphor P1

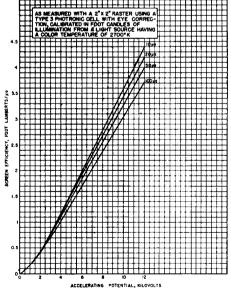


Typical Visual Screen Efficiency Phosphor P1

#### DU MONT P1 SCREEN CHARACTERISTICS (Cont'd)

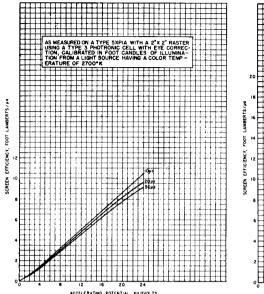

Typical High Voltage Visual Screen Efficiency Phosphor P1

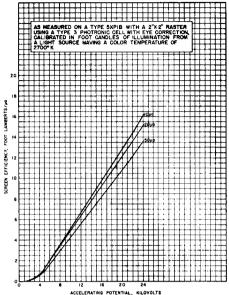


Typical High Voltage Visual Screen Efficiency Phosphor P1, Aluminized Screen

#### DU MONT P2 SCREEN CHARACTERISTICS

#### **General Description**


Long-persistence screen with a short persistence blue-green fluorescent characteristic, and a very long yellow-green phosphorescence, suited for applications requiring long persistence at high writing rates (short interval excitation).

Because the ratio of fluorescent to phosphorescent light is very high, the P2 screen may also be used for visual observation and photography in applications where it is desirable to have the characteristics of a short persistence screen. By the use of a suitable filter the fluorescent light only may be selected.

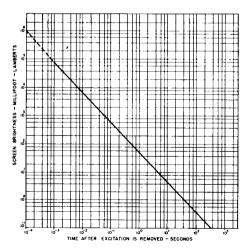


Persistence Characteristic of Phosphor P2


#### DU MONT P2 SCREEN CHARACTERISTICS (Cont'd)

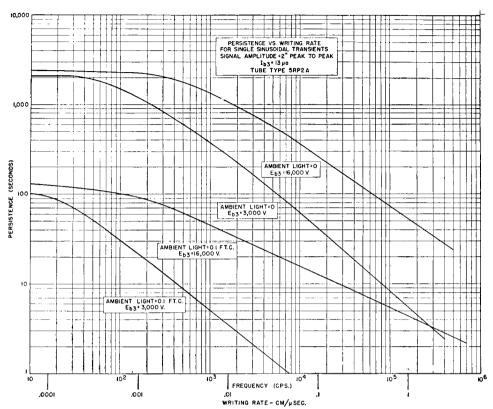


Persistence versus writing rate for single sinusoidal transients. (Eye adapted to ambient light condition.)

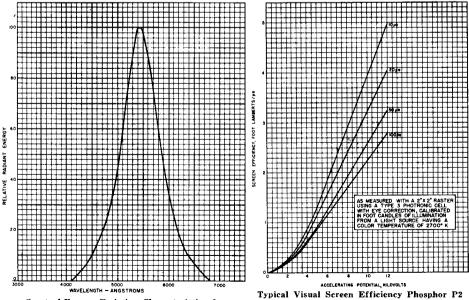

Spectral-Energy Emission Characteristic of Phosphor P2

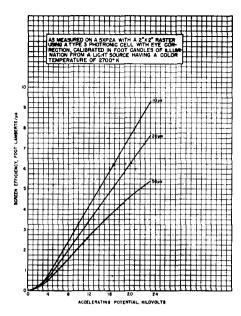

Typical High Voltage Visual Screen Efficiency Phosphor P2

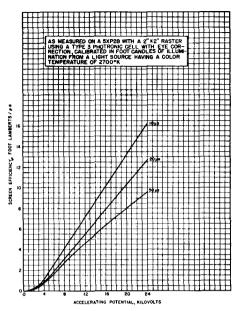

Typical High Voltage Visual Screen Efficiency Phosphor P2, Aluminized Screen

#### DU MONT P7 SCREEN CHARACTERISTICS

#### **General Description**

Long-persistence screen with blue fluorescence and yellow phosphorescence, suited for applications requiring long persistence at slow and intermediate writing rates, for applications where it is desirable to filter out the initial "flash," and for applications where high build-up of phosphorescent intensity as a result of repeated excitation is desired.

The P7 screen is also well suited for dualpurpose equipment where it is desirable to have available the characteristics of a long persistence screen and a short persistence screen in the same tube. By the use of suitable filters either the short persistent blue light, or the long persistent yellow light may be selected.

#### METHOD OF SPECIFYING DATA

#### **Light Output**

P7 light output is measured one second after the application of one or more 200 line rasters applied at one second intervals and at  $Q\,=\,20\,$  millimicrocoulombs/cm² where

$$Q = \frac{I_{\scriptscriptstyle b} \, * \, t}{A} \; (I_{\scriptscriptstyle b} \; = \text{microamps to screen, t} =$$

total excitation time in seconds = 1/60 second, A = area of raster in cm<sup>2</sup>). The light output generally used for indicating tube

quality is the light output from a standard screen area of 7.1 x 7.1 cm, one second after the fifth raster application. This value is known as  $\mathrm{Cb}_5$  and is expressed in units of the logarithmic centibel\* scale, with reference to the light output from a standard P7 light source prepared by the M.I.T. Radiation Laboratory.

\* Cb = 100 
$$\log_{10}$$
 — where — = ratio of L2 L2 L2

#### **Build-up Ratio**


The build-up ratio is the ratio of the light output measured one second after a pulse following the initial pulse, to the light output measured one second after the initial pulse. (Note: The word "pulse" as used here refers to application of the 200 line test raster for 1/60 second.)

Usually the ratio  $G_{5:1}$  is used, where  $G_{5:1}$  is the ratio of light output one second after the fifth pulse to the light output one second after the initial pulse.

#### Flash Ratio

Flash ratio is the ratio of the initial "flash" light output to the Cb<sub>3</sub> light output. It is usually expressed as the difference Cb<sub>1</sub>—Cb<sub>3</sub> in centibels.


The flash light output (Cb<sub>1</sub>) is the calculated Cb level which, if maintained constant for one tenth second, would integrate to give the same value as the integration of the light output one second following and including the initial excitation pulse.

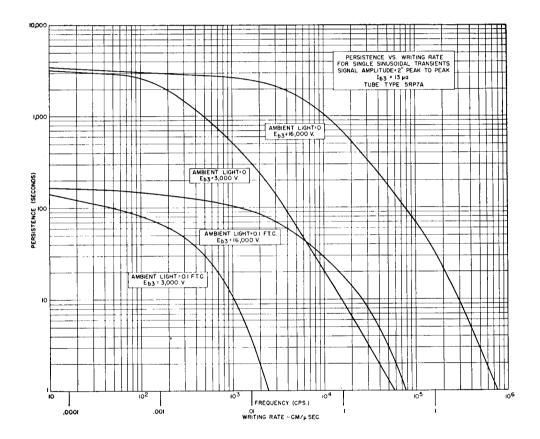

Persistence versus frequency for single sinusoidal transients. (No filter used; eye adapted to ambient light condition.)

#### Persistence Characteristic of P7 Screen


Excitation by a single 200 line raster in 1/60 of a second, and persistence characteristic after excitation by a large number of 200 line rasters applied 1 second apart.

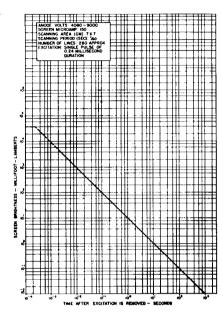

Persistence Characteristic of Phosphor P7

#### Representative Spectral Characteristic

Stationary spot excitation. The short wave length peak is representative of the blue fluorescence. The long wave length peak is representative of the yellow phosphorescence. The curve with filter is for the Wratten #15 filter which is recommended for filtering out the blue "flash" of the screen.

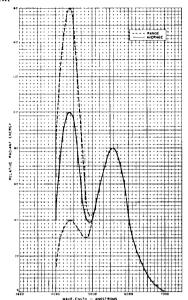


Spectral-Energy Emission Characteristic of Phosphor P7

#### DU MONT P11 SCREEN CHARACTERISTICS


#### **General Description**

A short-persistence blue screen material of very high photographic efficiency, suited for photography where the extremely short persistence of the P5 screen is not required.

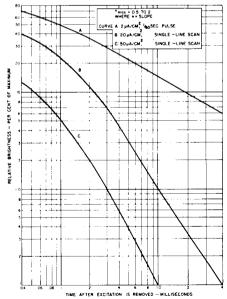


Persistence Characteristic of Phosphor P11

#### DU MONT P11 SCREEN CHARACTERISTICS (Cont'd)

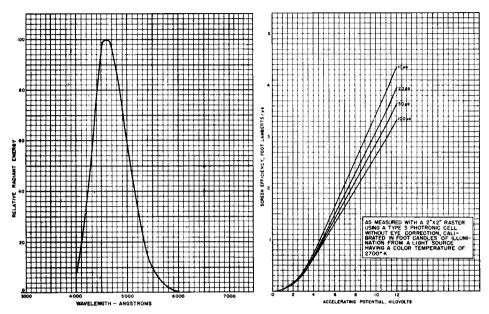


Spectral-Energy Emission Characteristic of Phosphor P11

Typical Screen Efficiency Phosphor P11 Screen

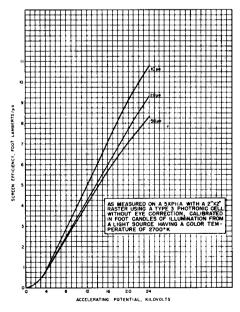

Typical High Voltage Screen Efficiency Phosphor P11, Aluminized

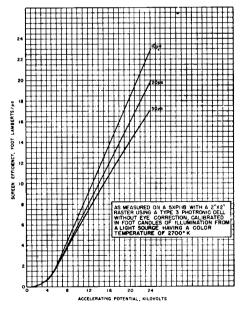

Typical High Voltage Screen Efficiency Phosphor P11


#### DU MONT P19 SCREEN CHARACTERISTICS


#### **General Description**


Very long-persistence orange screen, suited for the same applications, broadly speaking, as the P7 screen. However, the P19 screen has a considerably longer persistence than the P7 screen and no initial "flash."

The screen material of the P19 screen is magnesium fluoride, in contrast to the usual sulfide or silicate phosphors, such as the P7 or P1 screens. Magnesium fluoride is much more susceptible to burning than the usual screen materials. To prevent burning the highest possible accelerating potential and the minimum beam current should be employed.

For certain applications, especially in the radar indicator field, the P19 screen is well suited. However, because of its susceptibility to burning, it is recommended that other screen types be fully investigated before specifying the P19 screen.



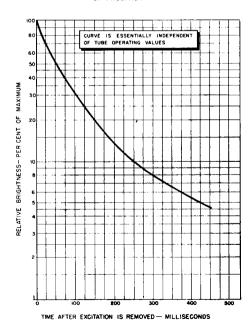

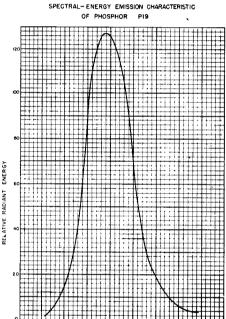

WAVELENGTH - ANGSTROMS

## DU MONT INDUSTRIAL CATHODE-RAY TUBES

Note: In the Cathode-ray Tube Section the following terms are employed interchangeably:

- 1. "Anode No. 3" and "Post-accelerator"
- 2. "Anode" (electromagnetic tubes), "Anode No. 2", and "Accelerator"
- 3. "Anode No. 1" and "Focusing"

#### **3ABP- CATHODE-RAY TUBE**

The Du Mont Type 3ABP- is a flat-faced electrostatically focused and deflected cathode-ray tube containing two separate electron-guns. Each electron beam is independent of the other except for the accelerator, heater and cathode connections. For high brightness with maximum deflection sensitivity, post-acceleration is utilized. The Type 3ABP- is one of the line of Du Mont tight-tolerance cathode-ray tubes.

The Type 3ABP- is used in applications requiring a two-beam presentation with high deflection sensitivity and good tracking accuracy on a short three-inch cathode-ray tube.

Deflection electrodes are designed for excellent deflection and tracking accuracy and are electrostatically shielded from each other to prevent interaction.

Both electron-guns employ a design requiring essentially zero focusing anode current.

All connections except for the accelerator and post-accelerator are brought out to the base pins to simplify the problem of connection. For insulation, the accelerator and post-accelerator connections are bulb terminals.



#### GENERAL CHARACTERISTICS (Note 1)

#### **Electrical**

| Heater Current (Both U<br>Focusing Method   | nits)      |                           | 1.2±10           |   |
|---|------------|---------------------------|------------------|---|
| Phosphor  | No. 1      | No. 2                     | No. 7            | No. 11                                    |
| Fluorescence  | Green      | Green                     | Blue             | Blue                                      |
| Phosphorescence   |            | Green                     | Yellow           |   |
| Persistence   | Medium     | Long                      | Long             | Short                                     |
| Direct Interelectrode Cap<br>Cathodes to all other<br>Grid No. 1 to all other<br>D1 to D2 | electrodes | Min.<br>4.8<br>3.7<br>1.7 | Max. 7.2 5.5 2.6 | μμf<br>μμf<br>μμf                         |
| D3 to D4  | des awaant | 1.7<br>D2 5.6             | 2.6<br>8.4       | μμf<br>μμ <b>f</b>                        |
| D1 to all other electro D2 to all other electro D3 to all other electro                   | des except | D1 5.6                    | 8.4<br>7.3       | μμ <b>f</b><br>μμ <b>f</b><br>μμ <b>f</b> |
| D4 to all other electro   | des except | D3 4.9                    | 7.3              | $\mu\mu \mathbf{f}$                       |

#### Mechanical

| Overall Length $10\frac{3}{4}\pm\frac{1}{4}$ Greatest Diameter of Bulb $3\pm\frac{1}{16}$ Minimum Useful Screen Diameter $2.62$ Bulb Contacts (Recessed Small Ball Caps)  Base (Medium shell diheptal, 14 Pin)  Basing | Inches<br>Inches<br>J1-22<br>B14-38 |
|--|-------------------------------------|
| Base Alignment  D3D4 trace aligns with Pin No. 5 and Tube Axis   |                                     |


| Positive voltage on D1 deflects beam approximately too<br>Positive voltage on D3 deflects beam approximately too<br>Bulb Contact Aligment | wards Pin No. 12                   |
|---|------------------------------------|
| J1-22 contacts align with D3D4 trace  | ±10 Degrees                        |
| J1-22 contacts on same side as Pin No. 5  |                                    |
| Trace Aligment Angle between D1D2 and D3D4 traces   | 00:11 D                            |
| Corresponding traces of each gun align with each other  | Within 1 Degree                    |
|   |                                    |
| MAXIMUM RATING  | iS .                               |
| Post-Accelerator Voltage  | 6,000 Max. Volts D-C               |
| Accelerator Voltage (Note 2)  | 2,000 Max. Volts D-C               |
| Ratio Post-Accelerator Voltage to   |                                    |
| Accelerator Voltage (Note 3)  | 3 Max.                             |
| Grid No. 1 Voltage  | 1,000 Max. Volts D-C               |
| Negative Bias Value   | 000 M XI II D G                    |
| Positive Peak Value   | O More Volts D.C                   |
| Positive Bias Value   | O Man Vale                         |
| Peak Voltage between Accelerator and any  | U Max. Voits                       |
| Deflection Electrode  | 550 May Volta                      |
|   |                                    |
| TYPICAL OPERATING CON   | IDITIONS                           |
| For Post-Accelerator Voltage of   | 4,000 Volts D-C                    |
| For Accelerator Voltage of  | 2,000 Volts D-C                    |
| Focusing Voltage  | 380 to 580 Volts D-C               |
| Grid No. 1 Voltage (Note 4)   | —45 to —75 Volts D-C               |
| Modulation Factor (Note 5)  | 40 Max. Volts D-C                  |
| Line Width "A" (Note 6) P1 Light Output (Note 6)  |                                    |
| Deflection Factors:   | 20 Ft. L. Min.                     |
| D1 and D2   | 164 to 109 Valte DC /I1            |
| D3 and D4   | 148 to 181 Volta DC/Inch           |
| Deflection Factor Uniformity (Note 7)   | 21/2% Maximum                      |
| Tracking Error (Note 8)   |                                    |
| Pattern Distortion @ 75% of Minimum   | 2 70                               |
| Useful Screen Diameter (Note 9)   | 2% May                             |
| Interaction Factor (Note 11)  | .000012 Max Inches/Volt            |
| Spot Position (Undeflected, Focused) (Note 12)  | Within a 1/4 Inch Radius Circle    |
| CIRCUIT DESIGN VAL  |                                    |
| Focusing Voltage 190 to 290 Volts p   | UES                                |
| Focusing Current for any operating condition  | er Kilovoit of Accelerator Voltage |
| Grid No. 1 Voltage (Note 4) — -22.5 to -37.5 Volts p  | -50 to +10 Microamperes            |
| Grid No. 1 Circuit Resistance   | TEMPORAL TO ACCELERATOR VOITage    |
| Deflection Factors:   | 1.5 Max. Megonms                   |
| Post-Accelerator Voltage = Accelerator Voltage  |                                    |
| D1 and D2 63 to 77 Volts D-C/Inch/KV of Accelerator   | · Voltage                          |
| D3 and D4 59.5 to 72.5 Volts D-C/Inch/KV of Acceler   | rator Voltage                      |
| Resistance in any Deflecting-Electrode Circuit (Note 13)  | ) 5.0 Max. Megohms                 |
| NOTES   |                                    |
|   |                                    |
| 1. Values are for each unit unless otherwise stated. 2. Accelerator power input (avg.) should be limited.                                 |                                    |
| 2. Accelerator power input (avg.) should be limited  This tube is designed for optimum performance wh                                     |                                    |


- This tube is designed for optimum performance when operating at an Eb3/Eb2 ratio of 2.0. Operation at other ratios of Eb3/Eb2 may result in increased deflection (non) , uniformity, pattern distortion and tracking error.

  4. For visual extinction of the focused undeflected spot.
- 5. The increase in Grid No. 1 voltage from cut-off to produce an Ib3 of 25  $\mu$ ADC.
- 6. Measured in accordance with MIL-E-1 specifications using an Ib3 of 25  $\mu$ ADC.
- The deflection factor (For both D1D2 and D3D4 plate pairs, separately) for deflections of less than 75% of the useful scan will not differ from the deflection factor for a deflection of 25% of the useful scan by more than the indicated value.

- 8. The positions of the spot of each beam, when deflected from the center by applied voltages proportional to the deflection factor will not deviate from each other by more than the indicated percentage of the deflection.
- 9. The edges of a raster pattern, whose mean dimensions are the indicated percentage of useful screen diameter, shall not deviate from the mean dimension rectangle by more than the specified amount.
- 10. Deflection accuracy may be obtained by combining angle between traces, deflection factor uniformity and pattern distortion characteristics. In general, for deflections less than those indicated the accuracy will improve.
- 11. The deflection of one beam when balanced DC Voltages are applied to the deflection electrodes of the other beam will not be greater than the indicated value.
- 12. Centered with respect to the tube face and with the tube shielded.
- 13. Deflection electrode circuit resistance should be equal.

TYPE 3ABP-AVERAGE CHARACTERISTICS

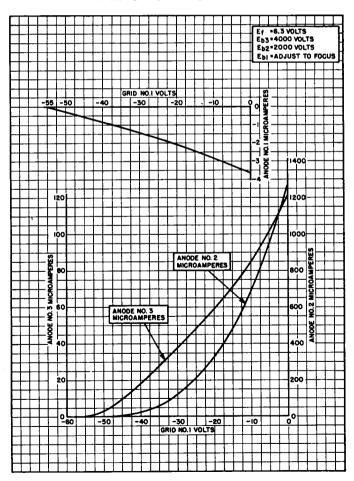

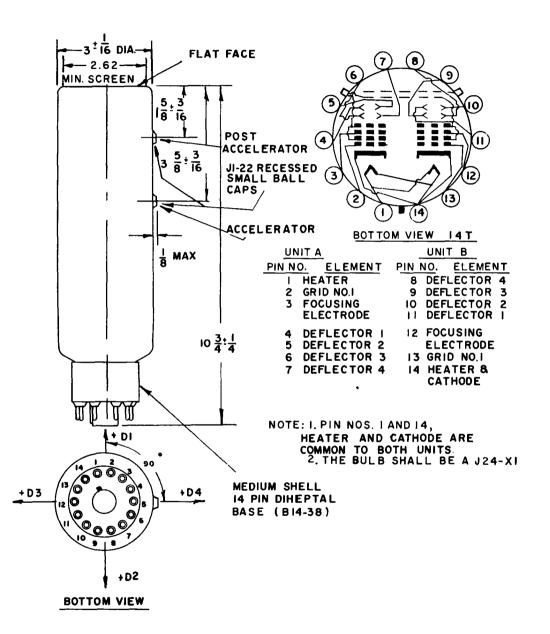

#### TYPE 3ACP-A CATHODE-RAY TUBES

The Du Mont Type 3ACP-A is a flat face, single beam, electrostatic deflection and focus Cathode-ray Tube. A combination of post-acceleration and a very efficient gun design results in high light output, high deflection sensitivity and small spot size. The deflection structure is designed so as to improve the deflection accuracy and is electrostatically shielded where possible in order to minimize interaction. The electron gun is so designed as to require no appreciable focus electrode current. The electrode connections are arranged to give maximum insulation yet retain simplicity of connection. The 3ACP-A is one of the line of Du Mont tight-tolerance cathode-ray tubes.



#### **GENERAL CHARACTERISTICS**

#### Electrical Data

| Focusing Method E                            | léctrost | atic                |
|--|----------|---------------------|
| Deflecting Method E                          | lectrost | atic                |
| Direct Interelectrode Capacitances - Maximum |          |                     |
| Cathode to all                               | 4.2      | $\mu\mu f$          |
| Grid No. 1 to all                            | 5.5      | $\mu\mu \mathbf{f}$ |
| D1 to D2                                     | 2.1      | $\mu\mu f$          |
| D3 to D4                                     | 1.5      | $\mu\mu f$          |
| D1 to all                                    | 5.8      | $\mu\mu f$          |
| D2 to all                                    | 5.8      | $\mu\mu f$          |
| D3 to all                                    | 4.5      | $\mu\mu f$          |
| D4 to all                                    | 4.5      | $\mu\mu f$          |

#### **Optical Data**

| Phosphor Number      | 1      | 2     | 7      | 11    |
|----------------------|--------|-------|--------|-------|
| Fluorescent Color    | Green  | Green | Blue   | Blue  |
| Phosphorescent Color |        | Green | Yellow | -     |
| Persistence          | Medium | Long  | Long   | Short |

#### Mechanical Data

| $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$        |
|---|
| Basing 14J  |
| Base Alignment  |
| D1D2 trace aligns with Pin No. 5 and tube axis 0 ± 10 Degrees |
| Positive voltage on D1 deflects beam                          |
| approximately toward Base Pin No. 5                           |
| Positive voltage on D3 deflects beam                          |
| approximately toward Base Pin No. 2                           |
| Bulb Contact Alignment  |
| J1-22 contact aligns with D1D2 trace                          |
| J1-22 contact on same side as Pin No. 5                       |
| Trace Alignment   |
| Angle between D3D4 and D1D2 traces 90 ± 1 Degrees             |

| Heater Voltage Heater Current at 6.3 Volts Post-Accelerator Voltage Accelerator Voltage Ratio Post-Accelerator Voltage to Accelerator Voltage (Note 1) Accelerator Input (Avg.) Focusing Electrode Voltage Grid No. 1 Voltage Negative Bias Value Positive Bias Value Positive Peak Value Peak Heater-Cathode Voltage | 0.6 ± 10% Ampere 6000 Max. Volts D-C 2000 Max. Volts D-C 3.0 6.0 Max. Watts 1500 Max. Volts D-C 200 Max. Volts D-C 0 Max. Volts D-C |
|---|---|
| Heater negative with respect to cathode   | 180 Max. Volts  |
| Heater positive with respect to cathode   |   |
| Peak Voltage between Accelerator and any Deflection Electrode   | 550 Max. Volts  |
| TYPICAL OPERATING CONDITIONS  |   |
| Post-Accelerator Voltage  |   |
| Accelerator Voltage   | 2000 Volts  |
| Focusing Electrode Voltage  | 390 to 550 Volts  |
| Grid No. 1 Voltage (Note 2)   |   |
| Anode No. 3 Current (Note 3)  |   |
| Cathode Current (Note 4)  |   |
| Cathode Current (Note 5)  |   |
| Deflection Factors:   |   |
| D1 and D2   |   |
| D3 and D4   | 158 Volts D-C per Inch  |
| Deflection Factor Uniformity (Note 6)   | 2% Max.   |
| Pattern Distortion (Note 7)   |   |
| Modulation (Note 8)   |   |
| Modulation (Note 9)   |   |
| Line Width "A" (Note 10)  |   |
| Line Width "A" (Note 9)   | 0.028 Max. Inches   |
| Light Output (Note 11)  | 00  |
| P1  |   |
| P11 3   | 5 Foot Lamberts Min.  |
| Focusing Electrode Current for any operating condition  Spot Position (focused and undeflected) (Note 12) within a  |   |
| For Accelerator Voltage not shown in the preceding table, the for   |   |
| a guide:  | mowing can be used as   |
| Focusing Electrode Voltage  | % of Accelerator Volts  |
| Grid No. 1 Voltage 2.2% to 3.8  | % of Accelerator Volts  |
| Ratio Post-Accelerator to Accelerator Voltage   | 1.0   |
| D1 and D2 71 to 81.5 Volts D-C per Inch per   | Kilovolt of Accelerator   |
| D3 and D4 55 to 63.5 Volts D-C per Inch per   | Kilovolt of Accelerator   |
| Ratio Post-Accelerator to Accelerator Voltage   |   |
| D1 and D2 87.5 to 102.5 Volts D-C per Inch per  |   |
| D3 and D4 69 to 79 Volts D-C per Inch per   | Kilovolt of Accelerator   |
| MAXIMUM CIRCUIT VALUES  |   |
| Grid No. 1 Circuit Resistance   | 1.5 Max. Megohms  |
| Resistance in any Deflecting Electrode Circuit (Note 13)  | 1.0 Max. Megohms  |


#### NOTES

- 1. This tube is designed for optimum performance when operating at an Eb3/Eb2 ratio of 2.0. Operation at other ratios of Eb3/Eb2 may result in changes in deflection uniformity and pattern distortion.
- 2. Visual extinction of undeflected focused spot.
- 3. For Ec1 = 0 VDC.
- 4. For an Ib3 of 50 μADC.
- 5. For an Ib3 of 200  $\mu$ ADC.
- 6. As per MIL-E-1B specifications.
- All portions of a raster pattern, adjusted so its widest points just touch the sides of a 1.938 inch square, will fall within the area bounded by the 1.938 inch square and
- an inscribed 1.862 inch square. 8. For an Ib3 of 25  $\mu ADC$  measured in accordance with MIL-E-1 specifications.
- 9. For an Ib3 of 200 µADC measured in accordance with MIL-E-1 specifications.


- 10. For an Ib3 of 50  $\mu$ ADC measured in accordance with MIL-E-1 specifications.
- 11. For an Ib3 of 100  $\mu$ ADC measured in accordance with MIL-E-1 specifications using a raster size of 1% x 1% inches. The P11 phosphor is measured with a photronic cell without eye correction.
- 12. Centered with respect to the tube face and with the tube shielded. Connect free deflecting electrodes to accelerator.
- 13. It is recommended that the deflecting-electrode circuit resistance be approximately equal. Higher resistance values up to five megohms may be used for low beam current operation.

#### TYPE 3ACP-

#### 2.68 MIN. SCREEN

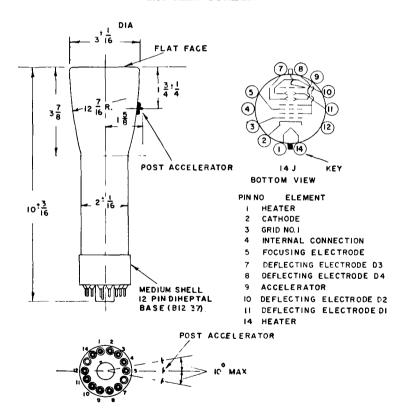

TYPE 3ACP-AVERAGE CHARACTERISTICS

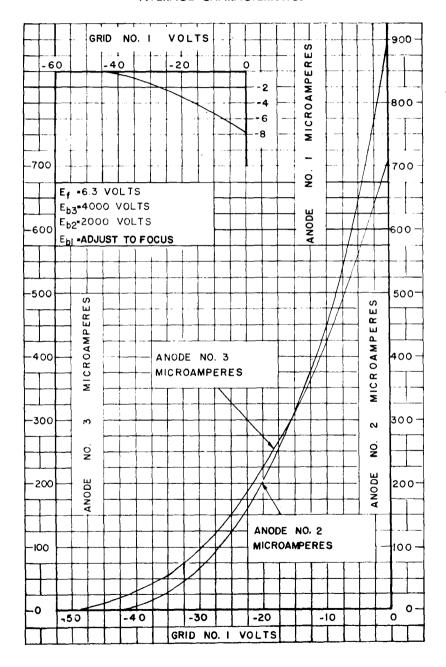

#### TYPE 3ADP- CATHODE-RAY-TUBES

The Du Mont Type 3ADP- is a 3 inch, flat face, single beam, electrostatic deflection and focus Cathode-ray Tube of compact design. Post-acceleration coupled with restricted deflection area provides high light output, very high deflection sensitivity, and small spot size. The electron gun is so designed as to require no appreciable focus electrode current. The deflector and anode leads are brought out directly through the bulb wall in order to provide maximum insulation while minimizing lead inductance and capacitance. The 3ADP- is one of the line of Du Mont Tight-tolerance Cathode-ray Tubes.



#### GENERAL CHARACTERISTICS

#### **Electrical Data**

| Focusing Method Deflecting Method  |      |      |                    |
|------------------------------------|------|------|--------------------|
| Direct Interelectrode Capacitances | Min. | Max. |                    |
| Cathode to all                     | 3.0  | 4.5  | $\mu\mu f$         |
| Grid No. 1 to all                  | 5.5  | 7.2  | $\mu\mu f$         |
| D1 to D2                           | 1.4  | 2.0  | $\mu\mu f$         |
| D3 to D4                           | 0.9  | 1.5  | $\mu\mu f$         |
| D1 to all                          | 3.6  | 4.6  | $\mu\mu f$         |
| D2 to all                          | 3.6  | 4.6  | $\mu\mu f$         |
| D3 to all                          | 2.7  | 3.6  | $\mu\mu f$         |
| D4 to all                          | 2.7  | 3.6  | $\mu\mu\mathbf{f}$ |

#### **Optical Data**

| Phosphor Number      | 1      | 2     | 7      | 11    |
|----------------------|--------|-------|--------|-------|
| Fluorescent Color    | Green  | Green | Blue   | Blue  |
| Phosphorescent Color |        | Green | Yellow |       |
| Persistence ·        | Medium | Long  | Long   | Short |

#### **Mechanical Data**

| Overall Length 10 : Greatest Diameter of Bulb 3 $\pm$ Minimum Useful Screen Diameter Bulb Number | 2.68 Inches |
|--|-------------|
| Bulb Contact   |             |
| Neck Contacts  |             |
| Base — Small Shell, 12 Pin Duodecal  |             |
| Basing   | 12 <b>Z</b> |
| Base Alignment   |             |
| D1D2 trace aligns with Pin No. 5 and tube axis ±   | 10 Degrees  |
| Positive voltage on D1 deflects beam approximately   |             |
| toward Base Pin No. 5  |             |
| Positive voltage on D3 deflects beam approximately   |             |
| toward Base Pin No. 2  |             |
| Bulb Contact Alignment   |             |
| J1-22 contact aligns with D1D2 trace ±   | 10 Degrees  |
| J1-22 contact on same side as Pin No. 5  |             |
| Trace Alignment  |             |
| Angle between D3D4 and D1D2 traces 90 =  | 1 Degrees   |


#### MAXIMUM RATINGS (Design Center Values)

| MAXIMOM RATINOS (Design Come   | 62 Volta                      |
|--|-------------------------------|
| Heater Voltage   | 0.5 + 100/ Ampana             |
| Heater Current at 6.3 Volts  | 0.0 ± 10% Ampere              |
| Post-Accelerator Voltage   | 6000 Max, Volts D-C           |
| Accelerator Voltage  | 3000 Max. Volts D-C           |
| Ratio Post-Accelerator Voltage to Accelerator Voltage (Note  | e 1) 2.0                      |
| Accelerator Input (Avg.)   | 6.0 Max. Watts                |
| Focusing Electrode Voltage   | 1000 Max. Volts D-C           |
| Grid No. 1 Voltage   |                               |
| Negative Bias Value  | 200 Max. Volts D-C            |
| Positive Bias Value  | U Max. Volts D-C              |
| Positive Peak Value  | U Max. Volts                  |
| Peak Heater-Cathode Voltage  |                               |
| Heater negative with respect to cathode  |                               |
| Heater positive with respect to cathode  | 180 Max. Volts                |
| Peak Voltage between Accelerator and any Deflection Electr   | ode 550 Max. Volts            |
|  |                               |
| TYPICAL OPERATING CONDITI  | IONS                          |
| Post-Accelerator Voltage   |                               |
| Accelerator Voltage  | 2000 Volts                    |
| Focusing Electrode Voltage   |                               |
| Grid No. 1 Voltage (Note 2)  | -52 to -87 Volts              |
| Deflection Factors:  |                               |
| D1 and D2  | to 155 Volts D-C per Inch     |
| D3 and D4  | 61 to 68 Volts D-C per Inch   |
| Deflection Factor Uniformity (Note 3)  | 2% Max                        |
| Useful Scan  | 2 /0 14441                    |
| D1 and D2  | ube face center) Min Inches   |
| D3 and D4 2.03 (= 1.515 Hom to $\frac{1.5}{1.5}$ and $\frac{1.5}{1.5}$ (= 0.750 from to $\frac{1.5}{1.5}$ | the face center) Min Inches   |
| Pattern Distortion (Note 4)  |                               |
| Modulation (Note 5)  |                               |
| Line Width "A" (Note 5)  |                               |
| Light Output (Note 6)  |                               |
| P1 (Note 7)  | 38 Foot Lamberts Min          |
| P11 (Note 8)   | 14 Foot Lamberts Min          |
| Focusing Electrode Current for any operating condition   | 15 to -15 "A                  |
| Spot Position (focused and undeflected) (Note 9)   |                               |
| For Accelerator Voltage not shown in the preceding table,  |                               |
|  | the following can be used as  |
| a guide: Focusing Electrode Voltage  | 22 Eff of Assoluteton Volta   |
| Grid No. 1 Voltage 2.6%  | t- 4.40% of Applementar Volta |
| Ratio Post-Accelerator to Accelerator Voltage  |                               |
| D1 and D2 70 to 78 Volts D-C per Inc   |                               |
| D3 and D4 30 to 34 Volts D-C per Incl  | h Vilit of Accelerator        |
| D3 and D4 30 to 34 voits D-C per Inci  | n per Kilovoit of Accelerator |
|  |                               |
| MAXIMUM CIRCUIT VALUE  | <del>-</del>                  |
| Grid No. 1 Circuit Resistance  |                               |
| Resistance in any Deflecting Electrode Circuit (Note 10)   | 1.0 Max. Megohms              |
|  |                               |


#### NOTES

- 1. This tube is designed for optimum performance when operating at an Eb3/Eb2 ratio of 2.0. Operation at other ratios of Eb3/Eb2 may result in changes in deflection uniformity and pattern distortion.
- 2. Visual extinction of undeflected focused spot.
- 3. As per MIL-E-1 specifications using useful scan as reference.
- 4. All portions of a raster pattern, adjusted so its widest points just touch the sides of a  $2.\overline{295}$  x 1.530 inch rectangle, will fall within the area bounded by the  $2.\overline{295}$  x 1.530inch rectangle and an inscribed  $2.205 \times 1.470$  inch rectangle. 5. For an Ib3 of 25  $\mu$ ADC measured in accordance with MIL-E-1 specifications.
- 6. Using a raster size of  $2\frac{1}{4} \times 1\frac{1}{2}$  inches and an Ib3 of 25  $\mu$ ADC.
- 7. Using a #594 Photronic cell with Viscor filter (for eye correction).
- 8. Using a #594 Photronic cell without Viscor filter (without eye correction).
- 9. Centered with respect to the tube face and with the tube shielded. Connect free deflecting electrodes to accelerator.
- 10. It is recommended that the deflecting-electrode circuit resistance be approximately equal.

#### TYPE 3ADP-AVERAGE CHARACTERISTICS

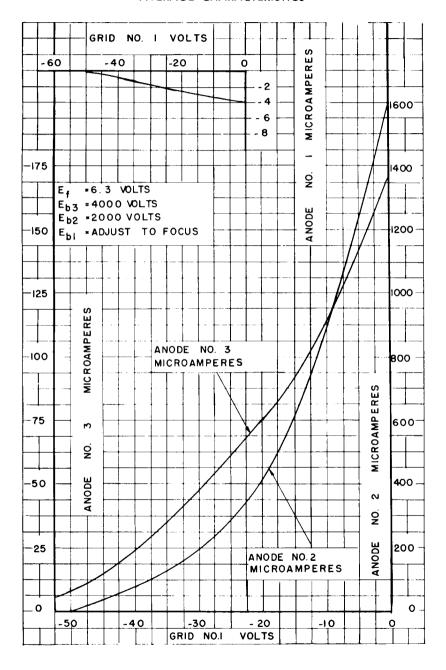

TYPE 3ADP-

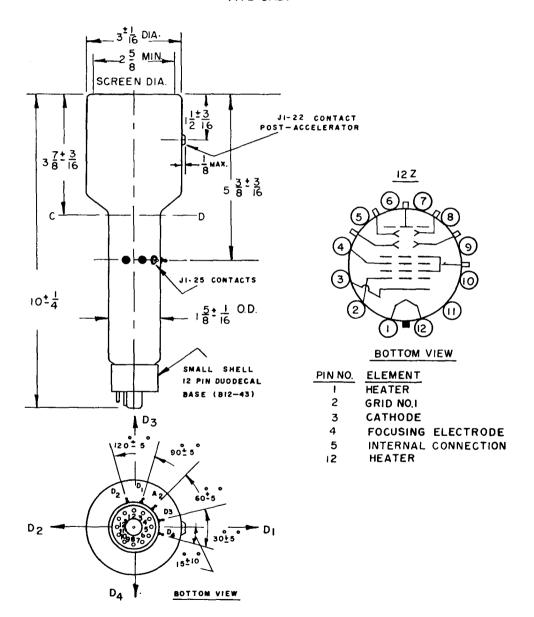

#### **3GP-A CATHODE-RAY TUBES**

The 3GP-A Cathode-ray Tubes are designed for oscillographic and other applications where small spot size, a brilliant trace, and a minimum of defocusing with deflection are required. The gun is designed to draw negligible focusing electrode cur rent.

The 3GP-A is recommended for replacement only.

#### **GENERAL CHARACTERISTICS**

| _ |    | - 4 | • |    |
|---|----|-----|---|----|
|   | ec |     | • | ~  |
| - | CL |     |   | чı |

| Heater Voltage               | 0.6 ± 10  | % Ampere<br>lectrostatic |
|------------------------------|-----------|--------------------------|
| Phosphor                     | No. 1     | No. 11                   |
| Fluorescence                 | Green     | Blue                     |
| Persistence                  | Medium    | Short                    |
| Direct Interelectrode Capaci | tances,   |                          |
| Nominal Grid No. 1 to all    | other     |                          |
| electrodes                   |           | 7 $\mu\mu$ f.            |
| D1 to D2                     |           |                          |
| D3 to D4                     |           | 1.5 $\mu\mu$ f.          |
| D1 to all other electrodes   | except D2 | 7 $\mu\mu$ <b>f</b> .    |
| D2 to all other electrodes   | except D1 | $\dots$ 6 $\mu\mu$ f.    |
| D3 to all other electrodes   |           |                          |
| D4 to all other electrodes   | except D3 | 5 $\mu\mu$ f.            |



#### Mechanical

| Overall Length  | $11\frac{1}{2} \pm \frac{3}{8}$ Inches |
|---|--|
| Greatest Diameter of Bulb   | 3 $\pm$ 1/16 Inches                    |
| Minimum Useful Screen Diameter  | 23/4 Inches                            |
| Base  | Medium Magnal                          |
| Basing  | 11 <b>N</b>                            |
| Base Alignment  |  |
| D3D4 trace aligns with Pin No. 6 and tube axis                        | +10 Degrees                            |
| Positive voltage on D1 deflects beam approximately toward Pin No. 3   |  |
| Positive voltage on D3 deflects beam approximately toward locating ke | ey .                                   |
| Angle between D3D4 and D1D2 traces                                    | 90 ±3 Degrees                          |

#### **MAXIMUM RATINGS—(Design Center Values)**

| Anode No. 2 Voltage <sup>1,2</sup>                            | 1500 Max. Volts D-C |
|---|---------------------|
| Anode No. 1 Voltage   | 1000 Max. Volts D-C |
| Grid No. 1 Voltage:   |                     |
| Negative Bias Value   | 125 Max. Volts D-C  |
| Positive Bias Value   |                     |
| Positive Peak Value   | 2 Max. Volts        |
| Peak Voltage between Anode No. 2 and any Deflection Electrode | 550 Max. Volts      |

#### TYPICAL OPERATING CONDITIONS

| For Anode No. 2 Voltage of      | 1000             | 1500         | Volts              |
|---------------------------------|------------------|--------------|--------------------|
| Anode No. 1 Voltage for focus   | 163 to 291       | 245 to 437   | Volts              |
| Grid No. 1 Voltage <sup>3</sup> | -16.5 to $-49.5$ | -25 to $-75$ | Volts              |
| Deflection Factors:             |                  |              |                    |
| D1 and D2                       | 64 to 96         | 96 to 144    | Volts D-C per Inch |
| D3 and D4                       | 56 to 84         | 84 to 126    | Volts D-C per Inch |


| Anode No. 1 Voltage for focus                   |
|---|
| Grid No. 1 Voltage <sup>3</sup>                 |
| Anode No. 1 Current for any operating condition |
| Spot Position (Undeflected)'                    |

#### MAXIMUM CIRCUIT VALUES


| Grid No. 1 Circuit Resistance                               | 1.5 | Max. | Megohms |
|---|-----|------|---------|
| Resistance in any Deflecting Electrode Circuit <sup>5</sup> | 5   | Max. | Megohms |

#### NOTES

- 1. The product of Anode No. 2 voltage and average Anode No. 2 current should be limited to 6 watts.
- 2. Anode No. 2 and Grid No. 2, which are connected together within the tube, are referred to herein as Anode No. 2.
- 3. Visual extinction of undeflected focused spot.
- 4. Centered with respect to the tube face with the tube shielded.
- 5. It is recommended that the deflecting electrode circuit resistances be approximately equal.
- For optimum focus the average potentials of the deflection plates and second anode should be the same.

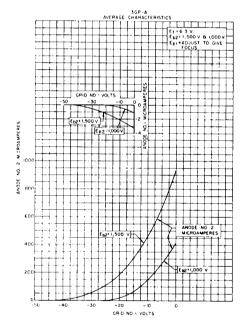

TYPE 3GP-

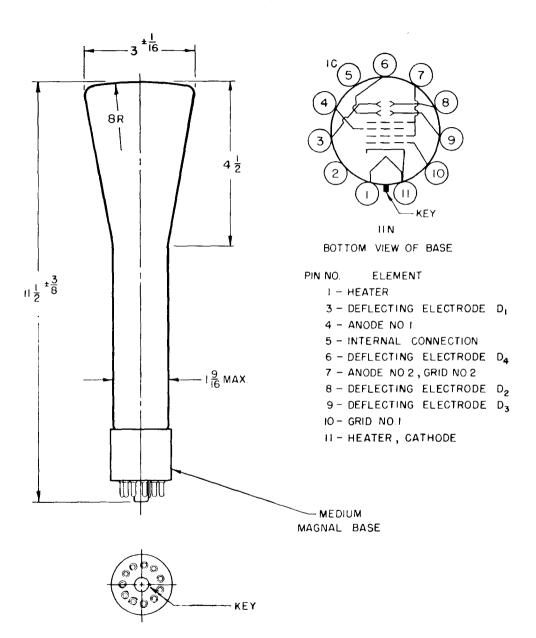

# 3JP- CATHODE-RAY TUBES

The Type 3JP- Cathode-ray Tubes are designed for oscillographic applications requiring a small short tube with very high light output and good deflection sensitivity. The intensifier electrode and extremely high current gun provide high excitation of the screen. The gun is designed so that the focusing electrode current under operating conditions is negligible. The 2" diameter neck and diheptal base provide adequate insulation between electrode leads for high altitude installation.

The four types differ only in the characteristics of the fluorescent screens. Other screen types may be obtained on special order.

### GENERAL CHARACTERISTICS

### Electrical

| $ \begin{array}{llllllllllllllllllllllllllllllllllll$   |       |                |        |      |
|---|-------|----------------|--------|------|
| Phosphor Fluorescence Phosphorescence Persistence   | Green | Green<br>Green | Yellow | Blue |
| Direct Interelectrode Capacitances, Nominal Cathode to all other electrodes $8 \mu\mu$ f. Grid No. 1 to all other electrodes $8 \mu\mu$ f. D1 to D2 $2.5 \mu\mu$ f. D3 to D4 $2 \mu\mu$ f. D1 to all other electrodes except D2 $8 \mu\mu$ f. D2 to all other electrodes except D1 $7 \mu\mu$ f. D3 to all other electrodes except D4 $7 \mu\mu$ f. D4 to all other electrodes except D3 $8 \mu\mu$ f. D4 to all other electrodes except D3 $8 \mu\mu$ f. |       |                |        |      |



#### Mechanical

| Overall Length   | 10 ± 1/4 Inches      |
|--|----------------------|
| Greatest Diameter of Bulb  | $.3 \pm 1/16$ Inches |
| Minimum Useful Screen Diameter   | 23/4 Inches          |
| Bulb Contact (Recessed Small Ball Cap)   | J1-22                |
| Base (Medium Shell Diheptal 12-Pin)  | B12-37               |
| Basing   | 14Ј                  |
| Base Alignment D1D2 trace aligns with Pin No. 5 and tube axis Positive voltage on D1 deflects beam approximately toward Pin No. 5 Positive voltage on D3 deflects beam approximately toward Pin No. 2 Angle between D3D4 and D1D2 traces |                      |
| Bulb Contact Alignment J1-22 Cap aligns with D1D2 trace J1-22 Cap on same side as Pin No. 5  | ±10 Degrees          |


# MAXIMUM RATINGS—(Design Center Values)


| MAXIMOM RATINGS—(Design Center Values)   |   |   |  |                                    |
|--|---|---|--|------------------------------------|
| Anode No. 3 Voltage (Accele<br>Anode No. 2 Voltage <sup>1,2</sup><br>Ratio Anode No. 3 Voltage to<br>Anode No. 1 Voltage | Anode No. 2 V                           | Voltage                                 | 2,000                                    | Max. Volts D-C                     |
| Grid No. 1 Voltage Negative Bias Value Positive Bias Value Positive Peak Value   |   | ·····                                   | 0  | Max. Volts D-C                     |
| Peak Heater Cathode Voltage<br>Heater Negative with respe<br>Heater positive with respec                                 | ct to cathode                           |   |  |                                    |
| Peak Voltage between Anode   | No. 2 and any                           | deflection Ele                          | ctrode                                   | 500 Max. Volts                     |
|  |   |   |  |                                    |
| TYPIC  | CAL OPERAT                              | TING COND                               | ITIONS                                   |                                    |
| For Anode No. 3 Voltage of For Anode No. 2 Voltage of  | 1,500<br>1,500                          | 3,000<br>1,500                          | 4,000<br>2,000                           | Volts<br>Volts                     |
| Anode No. 1 Voltage for focus<br>Grid No. 1 Voltage <sup>3</sup> —   |   | 300 to 515<br>-22.5 to -67.5            |  | Volts<br>Volts                     |
| Deflection Factors:<br>D1 and D2<br>D3 and D4  | 102 to 138<br>76 to 102                 | 127 to 173<br>94 to 128                 | 170 to 230 Volt<br>125 to 170 Volt       |                                    |
| Anode No. 1 Voltage for focus<br>Grid No. 1 Voltage <sup>3</sup><br>Anode No. 1 Current for any o                        |   | • | 1.5% to 4.59                             | of Eb2 Volts                       |
| Deflection Factors:  No 3rd Anode or Eb3 = Eb  D1 and D2  D3 and D4  | 68                                      | 8 to 92 Volts I<br>0 to 68 Volts I      | O-C per Inch per I<br>O-C per Inch per I | Kilovolt of Eb2<br>Kilovolt of Eb2 |
| Eb3 = Twice Eb2 D1 and D2 D3 and D4  | 85<br>62.5                              | to 115 Volts I<br>to 85 Volts D         | O-C per Inch per F<br>O-C per Inch per F | Kilovolt of Eb2<br>Kilovolt of Eb2 |
| Spot Position (Undeflected)4   | *************************************** | Wit                                     | thin a 6 millimete                       | r radius circle.                   |
|  |   |   |  |                                    |
| M  | AXIMUM C                                | RCUIT VAL                               | UES                                      |                                    |
| C 1137 4 C1 11 TO 11   |   |   |  |                                    |


| Grid No. 1 Circuit Resistance                               | 1.5 Max. Megohms |
|---|------------------|
| Resistance in any Deflecting Electrode Circuit <sup>3</sup> | 5 Max. Megohms   |

- 1. Anode No. 2 and Grid No. 2, which are connected together within the tube, are referred to herein as Anode No. 2.
- 2. The product of Anode No. 2 voltage and average Anode No. 2 current should be limited to 6 watts.
- 3. Visual extinction of undeflected focused spot.
- 4. Centered with respect to the tube face with the tube shielded.

- 5. It is recommended that the deflecting electrode circuit resistances be approximately equal.
- 6. For optimum focus the average potentials of the deflection plates and second anode should be the same.

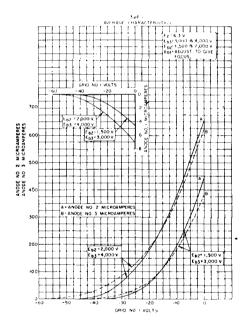

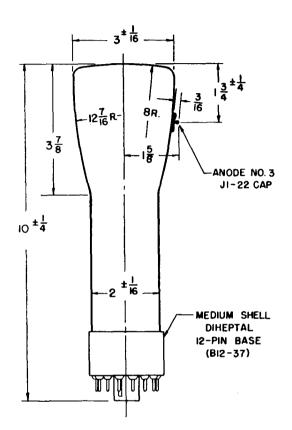

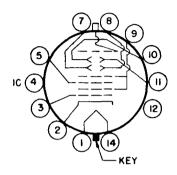

### BOTTOM VIEW OF BASE

PIN NO. ELEMENT

1 - HEATER

2 - CATHODE

3 - GRID NO I

4 - INTERNAL CONNECTION

5 - ANODE NO. !

7 - DEFLECTING ELECTRODE D3


8 - DEFLECTING ELECTRODE D4

9 - ANODE NO. 2, GRID NO. 2

IO - DEFLECTING ELECTRODE D2

II - DEFLECTING ELECTRODE D.

14 HEATER

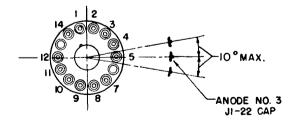

# 3RP-A CATHODE-RAY TUBES

The Type 3RP-A is a short, flat-face, 3" cathode-ray tube. High brilliance and definition at relatively low Anode No. 2 voltages, and negligible focusing electrode current, make the Type 3RP-A ideally suited for low- and medium-voltage oscillographic applications.

The Type 3RP-A features high deflection sensitivity with a maximum Anode No. 2 rating of 2500 volts. Special construction of deflection plates D1-D2 minimizes pin-cushion distortion, usually found in flat-face tubes of such short overall length.

Each deflection plate of the Type 3RP-A is connected to a separate pin of a 12-pin duo-decal base, permitting the use of balanced deflection voltages. This greatly reduces astigmatic distortion of both the spot and the pattern it describes.

The flat surface of its tube-face and new production techniques greatly improve the optical qualities of the Type 3RP-A.

### GENERAL CHARACTERISTICS

### Electrical

| $ \begin{array}{llllllllllllllllllllllllllllllllllll$                       |
|---|
| Phosphor  |
| Direct Interelectrode Capacitances, Approx. Cathode to all other electrodes |



#### Mechanical

| Overall Length  | $9\frac{1}{8} \pm \frac{1}{4}$ Inches |
|---|---------------------------------------|
| Greatest Diameter of Bulb   | $3 \pm 1/16$ Inches                   |
| Minimum Useful Screen Diameter                                      | 23/4 Inches                           |
| Base (Small Shell 12-Pin Duodecal)                                  |                                       |
| Basing  | 12 <b>E</b>                           |
| Base Alignment  |                                       |
| D3D4 trace aligns with Pin No. 1 and tube axis                      | ±10 Degrees                           |
| Positive voltage on D1 deflects beam approximately toward Pin No. 4 |                                       |
| Positive voltage on D3 deflects beam approximately toward Pin No. 1 |                                       |
| Angle between D3D4 and D1D2 traces                                  | 90 ± 3 Degrees                        |

# **MAXIMUM RATINGS—(Design Center Values)**

| Anode No. 2 Voltage   |                          |
|---|--------------------------|
| Grid No. 1 Voltage Negative Bias Value Positive Bias Value Positive Peak Value                                | 0 Max. Volts D-C         |
| Peak Heater-Cathode Voltage  Heater Negative with respect to Cathode  Heater Positive with respect to Cathode |                          |
| Peak Voltage between Anode No. 2 and any Deflection   | Electrode 500 Max. Volts |


# TYPICAL OPERATING CONDITIONS

| For Anode No. 2 Voltage of               | 1,000            | 2,000          | Volts                   |
|--|------------------|----------------|-------------------------|
| Anode No. 1 Voltage for focus            | 165 to 310       | 330 to 620     | Volts                   |
| Grid No. 1 Voltage <sup>3</sup>          | -22.5 to -67.5   | −45 to −135    | Volts                   |
| Deflection Factors:                      |                  |                |                         |
| D1D2                                     | 73 to 99         | 146 to 198     | Volts D-C per Inch      |
| D3D4                                     | <b>5</b> 2 to 70 | 104 to 140     | Volts D-C per Inch      |
| Anode No. 1 Voltage for focus            |                  | 16.5%          | to 31% of Eb2 Volts     |
| Grid No. 1 Voltage <sup>3</sup>          |                  | 2.25% to       | 6.75% of Eb2 Volts      |
| Anode No. 1 Current for any operating    | condition        | —15 to         | o +10 Microamperes      |
| Spot Position (Undeflected) <sup>4</sup> |                  | Within a 7½ mi | illimeter radius circle |


# **MAXIMUM CIRCUIT VALUES**

| Grid No. 1 Circuit Resistance                  | 1.5 Max. Megohms |
|--|------------------|
| Resistance in any Deflecting-Electrode Circuit |                  |

- Anode No. 2 and Grid No. 2, which are connected together within the tube, are referred to herein as Anode No. 2.
- The product of Anode No. 2 voltage and average Anode No. 2 current should be limited to 6 watts.
- 3. Visual extinction of undeflected focused spot.
- 4. Centered with respect to the tube face with the tube shielded.
- It is recommended that the deflecting electrode circuit resistances be approximately equal.
- For optimum focus the average potentials of the deflection plates and second anode should be the same.

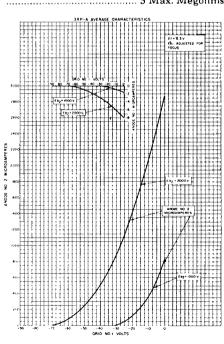

# TYPE 3RP-A

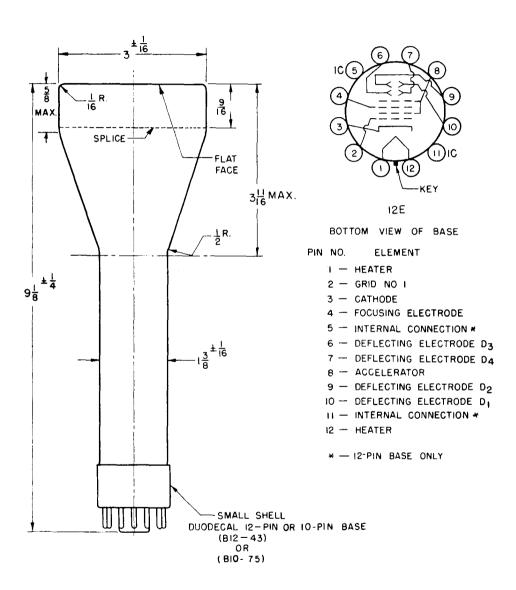

# **3WP-CATHODE-RAY TUBES**

The Type 3WP- Cathode-ray Tubes are designed for applications where tight tolerances and high sensitivity are important. Among the important features of this line of industrial tubes are: reduction by 50% in critical tolerances for deflection sensitivity and grid cutoff; improved perpendicularity with angle alignment between "X" and "Y" deflection plates held to  $90^{\circ} \pm 1^{\circ}$ ; greatly improved sensitivity on both axes without reduction in useful scan and a flat face to reduce parallactic error.

The inherently higher sensitivity of this line of "Tight-tolerance" cathode-ray tubes, such as the Type 3WP-, over previously available commercial tubes permits smaller, lower cost amplifiers, while tight tolerances afford greater freedom in cathoderay equipment design.

### **GENERAL CHARACTERISTICS**

#### **Electrical**

| Heater Voltage              |          | · · · · · · · · · · | 6.3 \  | <b>Volts</b>         |
|-----------------------------|----------|---------------------|--------|----------------------|
| Heater Current              | 0.6      | ± 10                | % Am   | pere                 |
| Focusing Method             |          | El                  | ectros | tatic                |
| Deflecting Method           |          | El                  | ectros | tatic                |
| Phosphor                    | P1       |                     | P11    |                      |
| Fluorescence                | Green    |                     | Blue   |                      |
| Persistence                 | Medium   |                     | Short  |                      |
| Direct Interelectrode Capa  | citances |                     |        |                      |
|                             |          | Min.                | Max.   |                      |
| Cathode to all other elect  | rodes    | 3.0                 | 5.7    | $\mu\mu\mathbf{f}$ . |
| Grid No. 1 to all other ele | ectrodes | 4.6                 | 8.7    | $\mu\mu\mathbf{f}$ . |
| D1 to D2                    |          | 1.7                 | 3.3    | $\mu\mu\mathbf{f}$ . |
| D3 to D4                    |          | 1.0                 | 2.0    | $\mu\mu\mathbf{f}$ . |
| D1 to all other electrodes  |          |                     |        |                      |
| except D2                   |          | 3.8                 | 7.2    | $\mu\mu\mathbf{f}$ . |
| D2 to all other electrodes  |          |                     |        |                      |
| except D1                   |          | 3.8                 | 7.2    | $\mu\mu\mathbf{f}$ . |
| D3 to all other electrodes  |          |                     |        |                      |
| except D4                   |          | 2.5                 | 4.8    | $\mu\mu f$ .         |
| D4 to all other electrodes  |          |                     |        |                      |
| except D3                   |          | 2.5                 | 4.8    | $\mu\mu\mathbf{f}$ . |



# Mechanical


| Overall Length  | $11\frac{1}{2} \pm \frac{1}{8}$ Inches |
|---|--|
| Greatest Diameter of Bulb   | $3 \pm 1/16$ Inches                    |
| Minimum Useful Screen Diameter                                    | 23/4 Inches                            |
| Base (Small Shell 12-pin Duodecal)                                | B12-43                                 |
| Basing  | 12 <b>T</b>                            |
| Base Alignment  |  |
| D1D2 trace aligns with Pin No. 3 and tube axis                    | ±10 Degrees                            |
| Positive voltage on D1 deflects beam approximately toward Pin No. | 3                                      |
| Positive voltage on D3 deflects beam approximately toward Pin No. | 12                                     |
| Angle between D3D4 and D1D2 traces                                | 90 ± 1 Degrees                         |

# MAXIMUM RATINGS—(Design Center Values)


| Accelerator Voltage <sup>1</sup>                      | 2.500 Max. Volts D-C        |
|---|-----------------------------|
| Focusing Voltage                                      |                             |
| Grid No. 1 Voltage                                    | ,                           |
| Negative Bias Value                                   | 200 Max. Volts D-C          |
| Positive Bias Value                                   | 0 Max. Volts D-C            |
| Positive Peak Value                                   |                             |
| Peak Heater-Cathode Voltage                           |                             |
| Heater Negative with respect to Cathode               | 180 Max. Volts D-C          |
| Heater Positive with respect to Cathode               | 180 Max. Volts D-C          |
| Peak Voltage between Accelerator and any Deflection I | Electrode 500 Max. Volts    |
| TYPICAL OPERATING CO                                  | NDITIONS                    |
| For Accelerator Voltage of                            |                             |
| Focusing Voltage                                      |                             |
| Grid No. 1 Voltage <sup>2</sup>                       |                             |
| Modulation <sup>3</sup>                               | 50 Volts Max.               |
| Line Width A <sup>3</sup>                             |                             |
| P1 Light Output <sup>3</sup>                          | 7 Ft. L. Min.               |
| Deflection Factors:                                   |                             |
| D1D2  | 62 to 76 Volts D-C per Inch |
| D3D4  | 43 to 52 Volts D-C per Inch |
| Deflection Factor Uniformity <sup>4</sup>             |                             |
| Useful Scan   | ,-                          |
| D1D2  | 2.50 Inches*                |
| D3D4  | 2.25 Inches**               |
| Pattern Distortion at 90% of Useful Scan <sup>5</sup> |                             |
| Spot Position (Undeflected)                           |                             |
| CIRCUIT DESIGN VA                                     | LUES                        |
| Focusing Voltage 165 to 310 Volts                     |                             |
| Focusing Current for any operating condition          |                             |
|   | ,                           |

- \* ± 1.25" minimum from tube face center
- \*\* ± 1.125" minimum from tube face center

- The product of Accelerator voltage and average Accelerator current should be limited to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- 3. Measured in accordance with MIL-E-1 specifications.
- 4. The deflection factor (for both D1D2 and D3D4 plate pairs, separately) for a deflection of less than 75% of the useful scan will not differ from the deflection factor for a deflection at 25% of the useful scan by more than the indicated value.
- 5. All portions of a raster pattern, adjusted so its widest points just touch the sides of a 2.295 x 2.065-inch rectangle, will fall within the area bounded by the 2.295 x 2.065-inch rectangle and an inscribed 2.205 x 1.985-inch rectangle.
- Deflection accuracy may be obtained by combining angle between traces, deflection factor uniformity and pattern distortion characteristics. In general, for deflections less than those indicated the accuracy will improve.
- 7. When the tube is operated at typical operating conditions (Eh = 6.3 V., Eb2 = 1500 V., Eb1 at focus); Ec1 adjusted to avoid damage to the screen; with each of the deflecting electrodes connected to the accelerator; and with the tube shielded against external influences, the spot will fall within a 3/16-inch radius circle centered on the tube face.
- It is recommended that the deflecting electrode circuit resistances be approximately
  equal.
- For optimum focus the average potentials of the deflection plates and second anode should be the same.

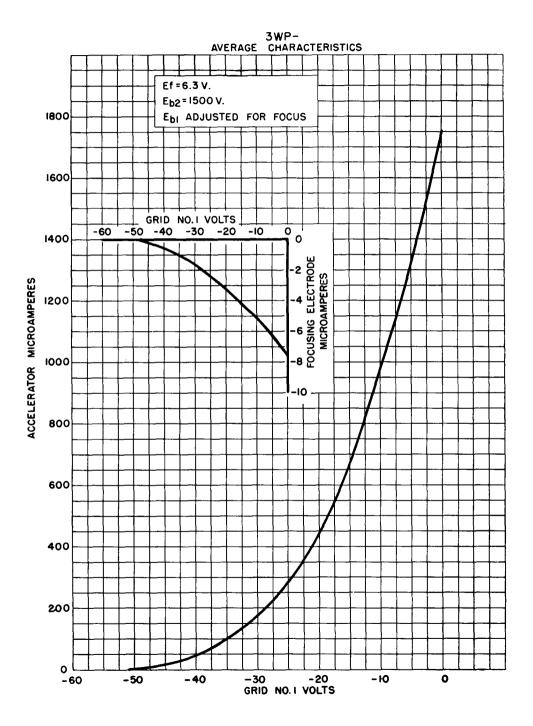

### TYPE 3WP-

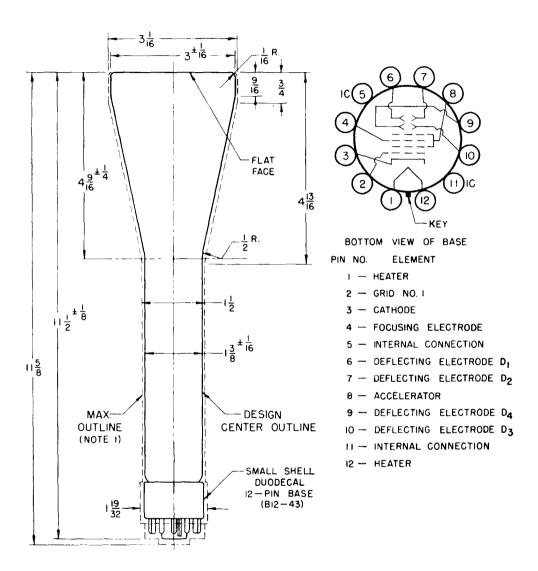

NOTE: I-NO TUBE WILL EXCEED MAXIMUM OUTLINE.

# **4DP- CATHODE-RAY TUBES**

The Du Mont Type 4DP- is a dual-beam cathode-ray tube featuring the usable screen area of 5-inch tubes without occupying the space a five-inch tube requires. The 3.5-inch square faceplate of the 4DP- is partly responsible for this feature. Short overall length adds further to the space-saving design.

The two electron guns mounted in the 4DPare completely independent of one another except for common accelerator and post-accelerator connections. In addition, deflection-plate and accelerator electrode leads are brought out through the tube wall for minimum capacitances and as insulation from other terminals.

Post-acceleration of the electron streams provides greater trace brilliance with minimum sacrifice in deflection sensitivity. Increased de-

flection sensitivity appreciably reduces the necessary gain of driver-amplifiers.

Du Mont's exclusive tight-tolerance manufacturing technique results in excellent tracking accuracy between beams.

Screen types other than those listed are available on order.



# GENERAL CHARACTERISTICS (Note 1)

#### Electrical Data

| Heater Voltage Heater Current Deflection Method Focusing Method |             | 0.     | 6 ± 10%<br>Elec | Ampere<br>trostatic |
|---|-------------|--------|-----------------|---------------------|
| Phosphor  | No. 1       | No. 2  | No. 7           | No. 11              |
| Fluorescence  | Green       | Green  | Blue            | Blue                |
| Phosphorescence   | _           | Green  | Yellow          |                     |
| Persistence   | Medium      | Long   | Long            | Short               |
| Direct Interelectrode C   | apacitances | Min.   | Max.            |                     |
| Cathode to all other  | electrodes  | 3.6    | 5.0             | $\mu\mu\mathbf{f}$  |
| Grid No. 1 to all ot  | her electro | des3.7 | 5.1             | $\mu\mu f$          |
| D1 to D2  |             | 1.5    | 2.3             | $\mu\mu f$          |
| D3 to D4  |             | 1.5    | 2.3             | $\mu\mu \mathbf{f}$ |
| D1 to all   |             | 4.0    | 5.3             | $\mu\mu f$          |
| D2 to all   |             | 4.0    | 5.3             | $\mu\mu f$          |
| D3 to all   |             | 4.8    | 6.5             | $\mu\mu \mathbf{f}$ |
| D4 to all   |             | 4.8    | 6.5             | $\mu\mu f$          |

### Mechanical Data

| Overall Length $12\frac{1}{4} \pm \frac{1}{4}$ Inches                 |
|---|
| Greatest Bulb Dimension (Diagonal) 41/4 ± 3/32 Inches                 |
| Minimum Useful Screen Dimensions (Rounded Corners) 27/8 x 27/8 Inches |
| Bulb Contacts (Post Accelerator)                                      |
| Recessed Small Ball Cap J1-22   |
| Bulb Contacts (Accelerator and Deflection Electrodes)                 |
| Small Ball Cap J1-25  |
| Base — Medium Shell Diheptal, 12 Pin B12-37                           |
| Basing 14Y  |
| Base Alignment  |
| D3D4 trace aligns with Base Key and Tube Axis ± 10 Degrees            |
| Positive Voltage on D1 deflects the beam                              |
| approximately toward Pin. No. 4                                       |
| Positive Voltage on D3 deflects the beam                              |
| approximately toward the Base Key                                     |

| Bulb Contact Alignment Post Accelerator and Accelerator Contacts align with D11 Bulb Contact (J1-22) on same side as Base Pin No. 4 Trace Alignment Angle between D1D2 and D3D4 traces Corresponding traces of each gun align within D1D2 trace aligns with bulb wall | 90 ± 2 Degrees ± 2 Degrees  |  |
|---|---|--|
| MAXIMUM RATINGS (Design Cent  | er Values)  |  |
| Post-Accelerator Voltage Accelerator Voltage Ratio Post-Accelerator Voltage to Accelerator Voltage (Not Focusing Voltage Grid No. 1 Voltage   | 6000 Max. Volts D-C<br>3000 Max. Volts D-C<br>te 2) 2.0 Max.  |  |
| Negative Bias Value Positive Bias Value Positive Peak Value Peak Heater to Cathode Voltage  | 0 Max. Volts D-C  |  |
| Heater Negative with respect to Cathode Heater Positive with respect to Cathode Peak Voltage between Accelerator and any Deflection Elec  | 180 Max. Volts  |  |
| TYPICAL OPERATING CONDIT  |   |  |
| For Post-Accelerator Voltage of For Accelerator Voltage of Focusing Voltage Grid No. 1 Voltage (Note 3) Modulation (Note 4) Line Width "A" (Note 5) Deflection Factors: D1 and D2 D3 and D4 Spot Position (Note 6)  | 2000 Volts D-C 335 to 615 Volts D-C —52 to —87 Volts D-C 35 Max. Volts D-C .024 Max. Inches  115 to 140 Volts D-C/Inch 90 to 115 Volts D-C/Inch |  |
| Tracking Error (Note 7)   |   |  |
| CIRCUIT DESIGN VALUE  | S   |  |
| Focusing Voltage  |   |  |
| Ratio Post-Accelerator Voltage to Accelerator Voltage  D1 and D2  | ch/KV of Accelerator Voltage<br>ch/KV of Accelerator Voltage<br>  |  |
| Resistance in any Deflection Electrode Circuit (Note 8)   |   |  |
| NOTES   |   |  |


- 1. The values shown are for each unit unless otherwise stated. All tests are to be made on each gun separately.
- This tube is designed for optimum performance when operating at an Eb3/Eb2 ratio of 2.0. Operation at other ratios of Eb3/Eb2 may result in changes in deflection uniformity, pattern distortion, and tracking accuracy.

- The visual extinction of the focused, undeflected spot.
   The increase in Grid No. 1 voltage from cut-off to produce an Ib3 of 25 μAD-C.
   Measured in accordance with MIL-E-1 specifications, using an Ib3 of 25 μAD-C.
- 6. When the tube is operated at typical operating conditions, and with (1) Eb1 adjusted for focus, (2) Ec1 set at such a value as will avoid damage to the screen, (3) each of the deflecting electrodes connected to the accelerator and (4) the tube shielded against external influences; the spots will fall within a 5/8 inch square, the center of which coincides with the geometric center of the tube face, and the sides of which are parallel to the traces produced by deflecting electrodes D1 and D2 and by deflecting electrodes D3 and D4 respectively.
- 7. The tracking accuracy over an area bounded by  $\pm$  1-7/16 inches from the geometric center of the tube in the D1D2 plane and  $\pm 1\frac{1}{8}$  inches in the D3D4 plane shall be such that if the two spots are made coincident at the tube face center and then each


is moved to any spot within above area by means of deflection voltages that should give corresponding deflections in the D1D2 or D3D4 direction from the tube face center, the two spots will lie within 0.043 of an inch of each other.

- 8. It is recommended that the deflection electrode circuit resistance be approximately equal. Higher resistance values up to 5.0 megohms may be used for low beam current operation.
- After compensation for deflection sensitivity and centering, the deviation of the D1D2 trace shall not vary from a straight line tangent to the trace by more than .050 of an inch at ± 1½ inches from the geometric center of the tube face.

TYPE 4DP-AVERAGE CHARACTERISTICS

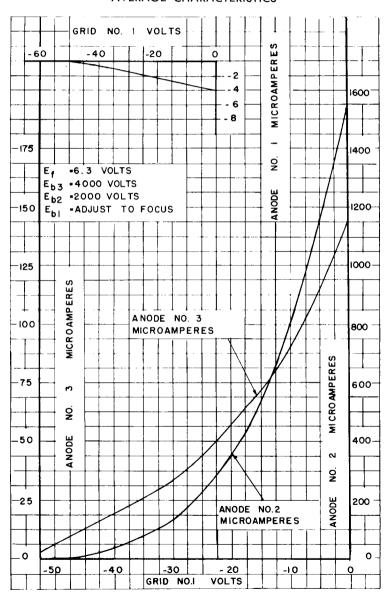

TYPE 4DP-

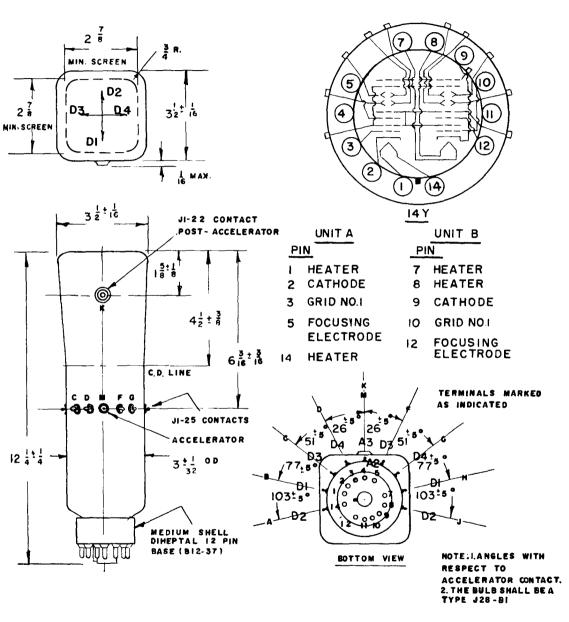

# **5ADP- CATHODE-RAY TUBES**

The Type 5ADP- Cathode-ray Tubes are flatfaced electrostatically focused and deflected cathode-ray tubes, designed for applications where tight tolerances and high sensitivity are important. The high sensitivity is achieved by the use of long deflection plates.

Tolerances are very closely controlled: angle alignment between the D1D2 and D3D4 traces is held to within 1°, while deflection factors are held to within 10% with low pattern distortion. Grid cutoff bias is maintained within 25%. A gun which draws negligible focussing electrode current is also employed.

Similar to the Type 3WP- Cathode-ray Tubes, the Type 5ADP- Cathode-ray Tubes permit smaller, lower cost amplifiers, while tight tolerances afford greater freedom in cathode-ray equipment design.

#### **GENERAL CHARACTERISTICS**

#### **Electrical**

| Heater Voltage      |            |          |               | 6.3   | Volts                                 |
|---------------------|------------|----------|---------------|-------|---------------------------------------|
| Heater Current      |            | 0.6      | ± 10          | % A   | mpere                                 |
| Focusing Method     |            |          | E             | lectr | ostatic                               |
| Deflecting Method   | d          |          | E             | lectr | ostatic                               |
| Phosphor            | No. 1      | No. 2    | No            | . 7   | No. 11                                |
| Fluorescence        | Green      | Green    | Bl            | ue    | Blue                                  |
| Phosphorescence     | е —        | Green    | Yel           | low   |                                       |
| Persistence         | Medium     | Long     | Lo            | ng    | Short                                 |
| Direct Interelectro | de Capac   | citances |               |       |                                       |
|                     |            |          | Min.          | Max   | ζ.                                    |
| Cathode to all oth  | er electro | des      | 3.1           | 5.8   | $\mu\mu\mathbf{f}$ .                  |
| Grid No. 1 to all o | other elec | trodes   | 4.2           | 7.9   | $\mu\mu\mathbf{f}$ .                  |
| D1 to D2            |            |          | 1.7           | 3.1   | $\mu\mu f$ .                          |
| D3 to D4            |            |          | .7            | 1.3   | $\mu\mu\mathbf{f}$ .                  |
| D1 to all other el  | ectrodes   | except 1 | D2            |       |                                       |
| D2 to all other e   | lectrodes  | except   | D1            |       | · · · · · · · · · · · · · · · · · · · |
| D3 to all other e   |            |          |               |       |                                       |
| D4 to all other e   | lectrodes  | except   | $\mathbf{D}3$ |       |                                       |

J1-22 contact on same side as Pin No. 5



..... 2.7

..... 2.1

2.1

μμf.

 $\mu\mu f$ .

 $\mu\mu f$ .

6.1  $\mu\mu f$ .

4.0

#### Mechanical


| $6\frac{3}{4} \pm \frac{3}{16}$ Inches |
|--|
| $3\frac{1}{4} \pm 3/32$ Inches         |
| 4½ Inches                              |
| J1-22                                  |
| B12-37                                 |
| 14J                                    |
|  |
| ±10 Degrees                            |
|  |
|  |
| 90 ± 1 Degrees                         |
|  |
| ± 10 Degrees                           |
|  |

### MAXIMUM RATINGS—(Design Center Values)


| MAXIMUM KATINGS—(Design C                               |   |
|---|---|
| Post Accelerator Voltage                                | 6,000 Max. Volts D-C                          |
| Accelerator Voltage <sup>1</sup>                        | 2,600 Max. Volts D-C                          |
| Ratio Post Accelerator Voltage to Accelerator Voltage . | 2.3 Max.                                      |
| Focusing Voltage  | 1,000 Max. Volts D-C                          |
| Grid No. 1 Voltage                                      |   |
| Negative Bias Value                                     | 200 Max. Volts D-C                            |
| Positive Bias Value                                     | 0 Max. Volts D-C                              |
| Positive Peak Value                                     | 0 Max. Volts                                  |
| Peak Heater-Cathode Voltage                             |   |
| Heater Negative with respect to Cathode                 | 180 Max. Volts D-C                            |
| Heater Positive with respect to Cathode                 | 180 Max. Volts D-C                            |
| Peak Voltage between Accelerator and any Deflection E.  | lectrode 500 Max. Volts                       |
| TYPICAL OPERATING CON                                   |   |
| For Post Accelerator Voltage of                         |   |
| For Accelerator Voltage of                              |   |
| Focusing Voltage  |   |
| Grid No. 1 Voltage <sup>2</sup>                         | -34 to -56 Volts                              |
| Modulation <sup>3</sup>                                 | 45 Volts Max                                  |
| Line Width A <sup>3</sup>                               |   |
| P1 Light Output <sup>3</sup>                            |   |
| Deflection Factors:                                     |   |
| D1 and D2   | 40 to 50 Volts D-C per Inch                   |
| D3 and D4   | 30.5 to 37.5 Volts D-C per Inch               |
| Deflection factor uniformity <sup>4</sup>               |   |
| Useful Scan <sup>5</sup>                                | _ / <sub>0</sub>                              |
| D1D2  | 4 Inches*                                     |
| D3D4  | 4 Inches*                                     |
| Pattern Distortion at 75% of useful scan <sup>6</sup>   |   |
| Spot Position (Undeflected)                             | Within a 5/16-inch radius circle <sup>8</sup> |
| CIRCUIT DESIGN VAI                                      |   |
| Focusing Voltage 187 to 345 Volts                       |   |
| Focusing Current for any operating condition            | -15 to   10 Microsmores                       |
| Grid No. 1 Voltage <sup>2</sup>                         | ner Kilevolt of Accelerator Voltage           |
| Grid No. 1 Circuit Resistance                           | 1.5 May Marches                               |
| Deflection Factors:                                     | 1.5 Max. Megonina                             |
| Post Accelerator Voltage = Accelerator Voltage          |   |
| D1 and D2 21.5 to 26.5 Volts D-                         | -C/Inch/KV of Accelerator Voltage             |
| 21.0 to 20.0 Voits D                                    | -C/ Inch/ IV v of Accelerator voltage         |

- The product of Accelerator Voltage and average Accelerator Current should be limited to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- 3. Measured in accordance with JAN-1A Specifications at Post Accelerator Current  $\pm$  25 ua.
- 4. The deflection factor (for both D1D2 and D3D4 plate pairs, separately) for any deflection of less than 75% of the useful scan will not differ from the deflection factor for a deflection at 25% of the useful scan by more than the indicated value.
- Reduction in useful scan when Post Accelerator Voltage is greater than Accelerator Voltage is determined by the ratio of these voltages measured with respect to cathode.
   Values shown are therefore applicable to any operating condition with the same voltage ratios.
- The edges of a raster pattern, whose mean dimensions are the indicated percentage of useful scan, shall not deviate from the mean dimension rectangle by more than the specified amount.
- 7. Deflection accuracy may be obtained by combining angle between traces, deflection factor uniformity and pattern distortion characteristics. In general, for deflections less than those indicated the accuracy will improve.

- 8. Centered with respect to the tube face with the tube shielded.
- 9. It is recommended that the deflecting electrode circuit resistances be approximately equal.
- For optimum focus the average potentials of the deflection plates and second anode should be the same.

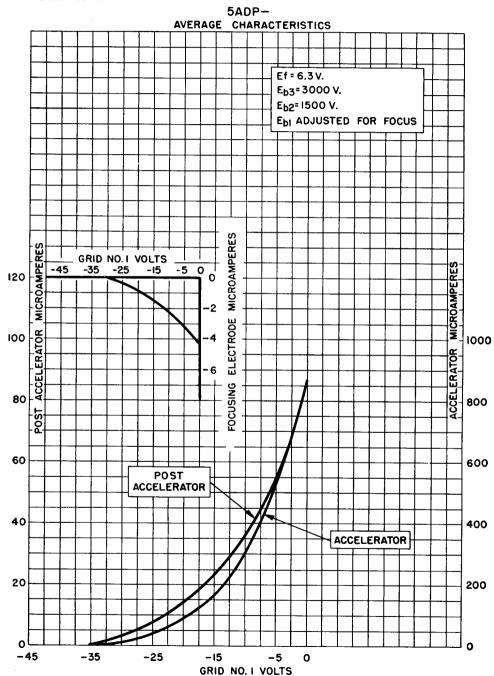

# TYPE 5ADP-

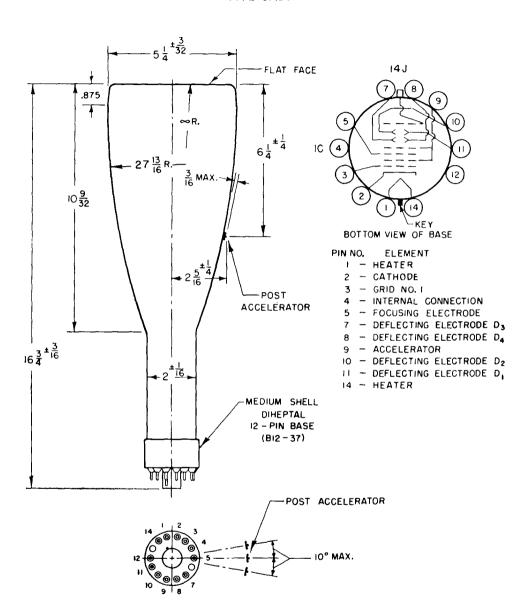

# **5AFP- CATHODE-RAY TUBE**

The Du Mont Type 5AFP- is a five-inch flatfaced electrostatically focused and deflected cathode-ray tube containing two independent beams. The Type 5AFP- features extremely low interaction between traces plus high deflection sensitivity and excellent deflection accuracy. It is one of the line of Du Mont tight-tolerance cathode-ray tubes.

The Type 5AFP- is designed for applications requiring a dual-beam presentation with high brightness level, excellent deflection accuracy, and minimum spot-size.

High brightness levels can be obtained because of the post-accelerator type of construction. Deflection sensitivity is maintained high, even at high accelerating potentials, by use of limited-scan deflection electrodes.

Termination of deflection electrodes and accelerators are made through the bulb wall, at a ring base, for ease of connection. This minimizes lead inductance and capacitance and improves insulation. The two accelerators, the intergun-shield and the first ring of the post-accelerator which are normally tied together, are provided with separate connections in the Type 5AFP. These independent and separate connections assure maximum versatility in specialized applications.



#### **GENERAL CHARACTERISTICS**

#### **Electrical**

| $\begin{array}{llllllllllllllllllllllllllllllllllll$ |              |       |        |                    |
|--|--------------|-------|--------|--------------------|
| Phosphor   | No. 1        | No. 2 | No. 7  | No. 11             |
| Fluorescence   | Green        | Green | Blue   | Blue               |
| Phosphorescence                                      |              | Green | Yellow | -                  |
| Persistence  | Medium       | Long  | Long   | Short              |
| Direct Interelectrode Capacitances Min. Max.         |              |       |        |                    |
| Cathode to all other                                 | electrodes   | 3.4   | 4.6    | $\mu\mu\mathbf{f}$ |
| Grid No. 1 to all othe                               | r electrodes | 3.2   | 4.0    | $\mu\mu f$         |
| D1 to D2   |              | 1.5   | 2.1    | $\mu\mu\mathbf{f}$ |
| D3 to D4   |              | 0.9   | 1.4    | $\mu\mu f$         |
| D1 to all  |              | 4.0   | 5.0    | $\mu\mu f$         |
| D2 to all  |              | 4.0   | 5.0    | $\mu\mu f$         |
| D3 to all  |              | 3.1   | 4.1    | $\mu\mu f$         |
| D4 to all  |              | 3.1   | 4.1    | $\mu\mu\mathbf{f}$ |


#### Mechanical

| Overall Length                      | $18\frac{1}{4}\pm\frac{1}{4}$ | Inches  |
|-------------------------------------|-------------------------------|---------|
| Greatest Diameter of Bulb           | $5\frac{1}{4}\pm 3/32$        | Inches  |
| Minimum Useful Screen Diameter      | 4.5                           | Inches  |
| Bulb Contacts                       |                               |         |
| Collar (12 Pin Diheptal)            |                               | Special |
| Base (Medium Shell Diheptal 12-pin) |                               | B12-37  |


| Basing Collar and Base Alignment                            | Special                         |
|---|---------------------------------|
| Collar Pin No. 1 and Base Key each aligns with the D3D4     | trace ±10 Degrees               |
| Positive Voltage on D1 deflects the beam approximately to   |                                 |
| Positive Voltage on D3 deflects the beam approximately to   |                                 |
| Bulb Contact Alignment                                      | towards Dasc Trey               |
| Bulb Contacts align with D3D4 trace                         | +10 Degrees                     |
| Bulb Contact is on the same side as the Base Key            | —                               |
| Trace Alignment   |                                 |
| D1D2 trace aligns with D3D4 trace                           | 90±1 Degrees                    |
| Corresponding traces align within                           |                                 |
| MAXIMUM RATINGS—(Design Cent                                | er Values)                      |
| Post Accelerator Voltage                                    |                                 |
| Accelerator Voltage (Note 2)                                |                                 |
| Ratio Post-Accelerator Voltage to Accelerator Voltage (Note |                                 |
| Focusing Voltage  |                                 |
| Grid No. 1 Voltage  |                                 |
| Negative Bias Value   |                                 |
| Positive Bias Value   |                                 |
| Positive Peak Value   | 0 Max. Volts D-C                |
| Peak Heater to Cathode Voltage                              | 100 M . W I. D G                |
| Heater Negative with respect to Cathode                     |                                 |
| Heater Positive with respect to Cathode                     |                                 |
|   |                                 |
| TYPICAL OPERATING CONDIT                                    |                                 |
| For Post-Accelerator Voltage of                             |                                 |
| Focusing Voltage  |                                 |
| Grid No. 1 Voltage (Note 5)                                 |                                 |
| Modulation Factor (Note 6)                                  |                                 |
| Line Width (Note 7)   |                                 |
| P1 Light Output (Note 7)                                    |                                 |
| Deflection Factors:   |                                 |
| D1 and D2   | 54 to 66 Volts D-C/Inch         |
| D3 and D4   |                                 |
| Deflection factor uniformity (Note 8)                       | 2% Max.                         |
| Useful Scan (Note 9)  |                                 |
| D1D2  |                                 |
| D3D4 Pattern Distortion @ 75% of useful scan (Note 10)      |                                 |
| Tracking Error (Note 11)                                    |                                 |
| Interaction Factor (Note 12)                                |                                 |
| Spot Position (Undeflected) (Note 9) W                      |                                 |
|   | ninimum from tube face center   |
|   |                                 |
| CIRCUIT DESIGN VALUES                                       | )<br>                           |
| Focusing Voltage  | Kilovolt of Accelerator Voltage |
| Grid No. 1 Voltage (Note 5)44 to -26 Volts per I            | 15 to +10 Microamperes          |
| Grid No. 1 Circuit Resistance                               | 1.5 May Magahme                 |
| Deflection Factors:   |                                 |
| Ratio Post-Accelerator Voltage to Accelerator Voltage       | 2.0                             |
| D1 and D2 27 to 33 Volts D-C/In                             | ch/KV of Accelerator Voltage    |
|   | ch/KV of Accelerator Voltage    |
| Resistance in any Deflecting-Electrode Circuit (Note 13)    | 5.0 Max. Megohms                |
| NOTES   |                                 |
| 1. Values are for each unit unless otherwise stated.        |                                 |
| 2. Accelerator power input (Avg.) should be limited to 6 W  | atts.                           |
| 3. This tube is designed for optimum performance when ope   |                                 |
| 2.0. Operation at other ratios of Eb3/Eb2 may result in in  | ncreased deflection (non) uni-  |
| formity, pattern distortion and tracking error.             |                                 |
|   |                                 |

- 4. Grid No. 4 and Grid No. 2 are connected internally and referred to herein as accelerator. The shield electrode and the accelerator electrodes are connected together in the normal operating condition. However, the accelerators as well as the first ring of the post-deflection accelerating system may be operated at different potentials if desired and the shield potential should then be adjusted for optimum performance.
- 5. Visual extinction of the focused, undeflected spot.
- 6. The increase in Grid No. 1 voltage from cutoff to produce an Ib3 of 25  $\mu$ ADC.
- 7. Measured in accordance with MIL-E-1 specifications using an Ib3 of 25 µADC.
- 8. The deflection factor (For both D1D2 and D3D4 plate pairs, separately) for deflections of less than 75% of the useful scan will not differ from the deflection factor for a deflection of 25% of the useful scan by more than the indicated value.
- 9. Centered with respect to the tube face and with the tube shielded.
- 10. The edges of a raster pattern, whose mean dimensions are the indicated percentage of useful scan, will not deviate from the mean dimension by more than the specified amount.
- 11. The positions of the spot of each beam, when deflected from the center by applied voltages proportional to the deflection factor will not deviate from each other by more than the indicated percentage of the deflection.
- 12. The deflection of one beam when balanced d.c. voltages are applied to the deflection electrodes of the other beam will not be greater than the indicated value.
- 13. Deflection electrode circuit resistances should be equal.
- The ratio of the deflection factors of corresponding deflection electrodes will not exceed 1.15.
- 15. Deflection accuracy may be computed from the angle between traces, deflection factor (non) uniformity and pattern distortion characteristics. In general, for deflections less than those indicated the accuracy will improve.
- 16. The deflection errors including those from pattern distortion and deflection factor (non) uniformity but not including that from angle between traces will not exceed 3.5% of the deflection.

TYPE 5AFP-AVERAGE CHARACTERISTICS

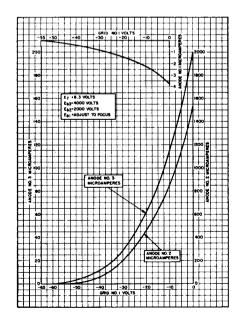

#### TYPE 5AFP-

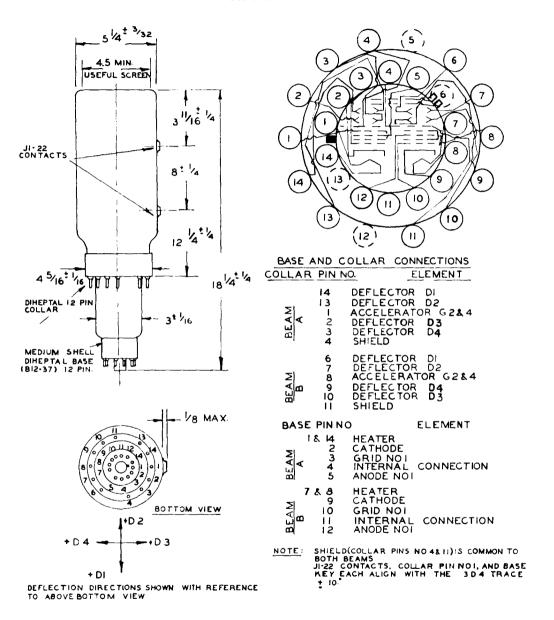

# TYPE 5AHP-, 5AHP-A CATHODE-RAY TUBE

The Type 5AHP- is a 5-in electrostatic focus and magnetic deflection cathode-ray tube suitable for radar applications. A low-voltage electrostatic focus lens is employed, designed to operate at or near cathode potential to afford substantially automatic focus, independent of accelerator voltage variations. In addition, the 5AHP- employs the Du Mont high-resolution electron gun. Spot size of the Self-focus Type 5AHP- is materially better than that of magnetically focused types, with a gain of approximately 20% in resolution over the magnetically focused types. Little sacrifice in internal light output is observed and weight and space are saved by the elimination of the focus coil.

The Type 5AHP-A utilizes an aluminized screen for greater light output and to minimize screen charging effects; it is otherwise identical to the 5AHP-. If a P19 screen is selected, the aluminized version should be used.

#### GENERAL CHARACTERISTICS

| <br>     |
|----------|
| ectrical |
| eciricai |

| Electrical            |                                     |                |                      |
|-----------------------|-------------------------------------|----------------|----------------------|
| Heater Voltage        |                                     |                | 6.3 Volts            |
| Heater Current        |                                     | $0.6 \pm 10\%$ | Ampere               |
| Focusing Method       | • • • • • • • • • • • • • • • • • • | Ele            | ectrostatic          |
| Deflecting Method     |                                     |                | Magnetic             |
| Deflecting Angle (ap) | prox.)                              | 53             | 3 Degrees            |
| Phosphor              | No. 7                               | No. 14         | No. 19               |
| Fluorescence          | Blue                                | Blue           | Orange               |
| Phosphorescence       | Yellow                              | Orange         | Orange               |
| Persistence           | Long                                | Medium-long    | Long                 |
| Direct Interelectrode | Capacitan                           | ces, Approx.   | -                    |
| Cathode to all other  | er electrod                         | es 5           | $\mu\mu\mathbf{f}$ . |
| Grid No. 1 to all o   | ther electr                         | rodes 6        | $\mu\mu f$ .         |

#### Mechanical

| Overall Length                         | $11\frac{1}{8} \pm \frac{1}{4}$ Inches |
|--|--|
| Greatest Diameter of Bulb              |  |
| Minimum Useful Screen Diameter         | 41/4 Inches                            |
| Bulb Contact (Recessed Small Ball Cap) | J1-22                                  |
| Base (Medium-Shell Octal 8-Pin)        | . B8-65 or B8-11                       |
| Basing                                 | 8EF                                    |
| Bulb Contact Alignment                 |  |
| J1-22 Contact aligns with pin No. 5    | ±10 Degrees                            |

| MAXIMUM RATINGS—(Design Center Values)  |                    |
|---|--------------------|
|   |                    |
| Accelerator Voltage                     |                    |
| Focusing Electrode Voltage —500 to +100 | 00 Max. Volts D-C  |
| Grid No. 2 Voltage 7                    | 00 Max. Volts D-C  |
| Grid No. 1 Voltage                      |                    |
| Negative Bias Value                     | 180 Max. Volts D-C |
| Positive Bias Value <sup>1</sup>        | 0 Max. Volts D-C   |
| Positive Peak Value                     | 0 Max. Volts       |
| Peak Heater-Cathode Voltage             |                    |
| Heater Negative with respect to Cathode | 180 Max. Volts D-C |

# 


| Accelerator Voltage <sup>2</sup>        | 5,000        | 7,000        | Volts D-C    |
|---|--------------|--------------|--------------|
| Focusing Electrode Voltage <sup>3</sup> | 0 to 200     | 0 to 250     | Volts D-C    |
| Focusing Electrode Current              | -15 to $+15$ | -15  to  +15 | $\mu A. D-C$ |
| Grid No. 2 Voltage                      | 300          | 300          | Volts D-C    |
| Grid No. 1 Voltage                      | —28 to —72   | —28 to —72   | Volts D-C    |
| Line Width A <sup>5</sup>               | .010         | .009         | Inch Max.    |
| Spot Position (Undeflected)             | ₹,           | 5/6          | Inch         |
| Alignment Magnet Field Strength         | 0-4          | 0-4          | Gausses      |

#### **MAXIMUM CIRCUIT VALUES**

#### NOTES

- At or near this rating, the effective resistance of the accelerator supply should be adequate to limit the accelerator input power to 6 watts. The screen of the 5AHP19-A can be permanently damaged should the current density be permitted to rise too high. To prevent burning, minimum beam current densities should be employed.
- Brilliance and definition decrease with decreasing accelerator voltage. In general, accelerator voltage should not be less than 5,000 volts, except for the 5AHP19-A. For this type, the accelerator voltage should not be less than 7,000 volts.
- 3. With Grid No. 1 voltage adjusted to produce an accelerator current of 100  $\mu$ A., with the pattern adjusted for best overall focus. Measured with a 525-line interlaced and synchronized  $2\frac{3}{4}$ x3 $\frac{3}{4}$ -inch pattern, with interlaced line blanking (current measured before applying blanking).
- 4. Visual extinction of focused 2\frac{3}{4}\times 3\frac{3}{4}\$-inch raster pattern.
- 5. Measured with a 525-line interlaced and synchronized pattern with interlaced line blanking. Pattern width adjusted to 90% of minimum useful screen diameter. Ib=100  $\mu$ A., measured before applying blanking. Line width is the merged raster height divided by the number of lines (262.5) (measured in center of tube face).
  - The 5AHP19-A should be checked at 7,000 volts. To avoid damage to the screen, it is recommended that the screen current be not more than 50  $\mu$ A. when measuring line width. The line width under these conditions will be .009 inch maximum (current measured before applying blanking).
- 6. The center of the undeflected, focused spot will fall within a circle of \( \frac{1}{16} \)-inch radius concentric with the center of the tube face, with the tube shielded.
- 7. For optimum quality of the focussed spot, the use of a beam alignment magnet is recommended. This may be obtained by the use of an adjustable magnet of the specified strength located approximately 51/8 inches from the reference line.

#### TYPE 5AHP-

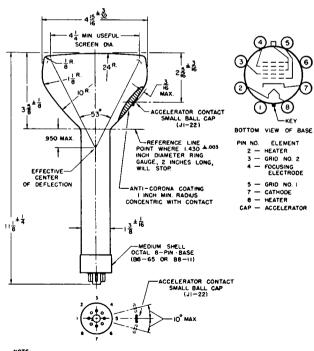

1-00 NOT HANDLE TUBE BY THE PART OF THE BULB HAVING THE ANTI-CORONA COATING.

# **5AMP- CATHODE-RAY TUBES**

The Du Mont Type 5AMP- is a tight-tolerance 5-inch cathode-ray tube employing the monoaccelerator principle of beam acceleration. Electrostatically focused and deflected, the Type 5AMP- features high deflection sensitivity, exceptional deflection linearity and a flat faceplate.

The usable screen area of the Type 5AMP-measures 2.5 x 4 inches, designed this way to provide very high deflection sensitivity in the Y-axis. This sensitivity considerably reduces the output amplitude requirements of wide-band amplifiers and consequently reduces the cost of such amplifiers.

The mono-accelerator principle requires that all electron stream acceleration take place before the beam enters the deflection system. Under this arrangement, exceptional spot uniformity and deflection linearity are achieved.

Deflection-plate connections are provided at the tube neck rather than through the tube base to appreciably reduce lead inductance and capacitance to these electrodes.



### GENERAL CHARACTERISTICS

# **Electrical Data**

| Heater Voltage<br>Heater Current  |                    | 0.    | $6 \pm 10\%$ | Ampere               |
|-----------------------------------|--------------------|-------|--------------|----------------------|
| Focusing Method Deflecting Method |                    |       |              |                      |
| Phosphor                          | No. 1              | No. 2 | No. 7        | No. 11               |
| Fluorescence                      | Green              | Green | Blue         | Blue                 |
| Phosphorescence                   | -                  | Green | Yellow       |                      |
| Persistence                       | $\mathbf{M}$ edium | Long  | Long         | Short                |
| Direct Interelectrode C           |                    | Min.  | Max.         |                      |
| Cathode to all other              | electrodes         | 2.7   | 4.9          | $\mu\mu f$           |
| Grid No. 1 to all oth             | er electrodes      | 2.9   | 5.5          | $\mu\mu f$           |
| D1 to D2                          |                    | 2.1   | 3.9          | $\mu\mu f$           |
|                                   | *****************  |       | 2.5          | $\mu\mu f$           |
| D1 to all other elect             |                    |       | 7.9          | $\mu \mu \mathbf{f}$ |
| D2 to all other elect             |                    |       | 7.4          | $\mu\mu f$           |
| D3 to all other elec-             |                    |       | 5.5          | $\mu\mu f$           |
| D4 to all other elec              | ctrodes            | 2.6   | 4.8          | $\mu\mu f$           |

#### Mechanical Data

| Overall Length 175%   |              |
|---|--------------|
| Greatest Diameter of Bulb 51/4 ±                                    |              |
| Minimum Useful Screen Diameter                                      | 4 1/2 Inches |
| Neck Contacts (Small Ball Caps)                                     | J1-25        |
| Base (Medium Shell Diheptal 12-Pin)                                 | B12-37       |
| Basing  | 14U          |
| Base Alignment:   |              |
| D1D2 trace aligns with Pin No. 5 and tube axis                      | 10 Degrees   |
| Positive voltage on D1 deflects beam approximately toward Pin No. 5 |              |
| Positive voltage on D3 deflects beam approximately toward Pin No. 2 |              |
| Angle between D3D4 and D1D2 traces 90                               | ± 1 Degrees  |

# **MAXIMUM RATINGS (Design Center Values)**

| Accelerator Voltage <sup>1</sup>                              | 6,000 | Max.  | Volts | D-C              |
|---|-------|-------|-------|------------------|
| Focusing Voltage  | 1,500 | Max.  | Volts | D-C              |
| Grid No. 1 Voltage  |       |       |       |                  |
| Negative Bias Value   | 200   | Max.  | Volts | D-C              |
| Positive Bias Value   | 0     | Max.  | Volts | D-C              |
| Positive Peak Value   |       | 0     | Max.  | Volts            |
| Peak Heater Cathode Voltage                                   |       |       |       |                  |
| Heater Negative with respect to Cathode                       | 180   | Max.  | Volts | D-C              |
| Heater Positive with respect to Cathode                       | 180   | Max.  | Volts | D-C              |
| Peak Voltage between Accelerator and any Deflection Electrode |       | 1,200 | Max.  | $\mathbf{Volts}$ |


### TYPICAL OPERATING CONDITIONS

| For Accelerator Voltage of Focusing Voltage Grid No. 1 Voltage" P1 Light Output' Modulation" Line Width A" Accelerator Current'                           | 0 to 300 Volts D-C  —34 to —56 Volts D-C  15 Ft. L. Min.  45 Max. Volts D-C  .032 Inch Max. |
|---|---|
| Deflection Factors:   | 800 Max. Microamperes D-C   |
| D1 and D2 D3 and D4   |   |
| Deflection Factor Uniformity <sup>4</sup>   |   |
| Useful Scan   | ,,  |
| D1 and D2 $4.00 (\pm 2.00 \text{ mi})$<br>D3 and D4 $2.50 (\pm 1.25 \text{ mi})$<br>Pattern Distortion @ 90% of useful scan <sup>6</sup><br>Spot Position | n. from tube face center) Inches 2% Max.  |


#### **CIRCUIT DESIGN VALUES**

| Focusing Current for any operating condition ——15 to +15 Microamperes D-C<br>Grid No. 1 Voltage <sup>2</sup> ——13.6 to —22.4 Volts D-C per Kilovolt of Accelerator Voltage<br>Grid No. 1 Circuit Resistance 1.5 Max. Megohms |
|--|
| Deflection Factors:  |
| D1 and D2  |
| D3 and D4 8 to 10 Volts D-C/Inch/KV of Accelerator Voltage   |
| Resistance in any Deflecting Electrode Circuit <sup>s</sup>  |

- The product of accelerator voltage and average accelerator current should be limited to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- 3. Measured in accordance with MIL-E-1 Specifications.
- 4. The deflection factor (for both D1D2 and D3D4 plate pairs, separately) for any deflection of less than 75% of the useful scan will not differ from the deflection factor for a deflection at 25% of the useful scan by more than the indicated value.
- 5. All portions of a raster pattern, adjusted so its widest points just touch the sides of a 2.295 x 3.672-inch rectangle, will fall within the area bounded by the 2.295 x 3.672-inch rectangle and an inscribed 2.205 x 3.528-inch rectangle.
- 6. Deflection accuracy may be obtained by combining angle between traces, deflection factor uniformity and pattern distortion characteristics. In general, for deflections less than those indicated, the accuracy will improve.
- 7. When the tube is operated at typical operating conditions (Eh = 6.3 V., Eb2 = 2500 V., Eb1 at focus); Ec1 adjusted to avoid damage to the screen; with each of the deflecting electrodes connected to the accelerator; and with the tube shielded against external influences, the spot will fall within a 5/16-inch radius circle, centered on the tube face.
  - Under stable operating conditions, the position of the spot will not shift with changes in intensity by more than .025 inch.
- 8. It is recommended that the deflecting electrode circuit resistances be approximately equal.
- 9. An adjustable D.C. potential between the accelerator and the deflection plates may be used to secure best overall focus.

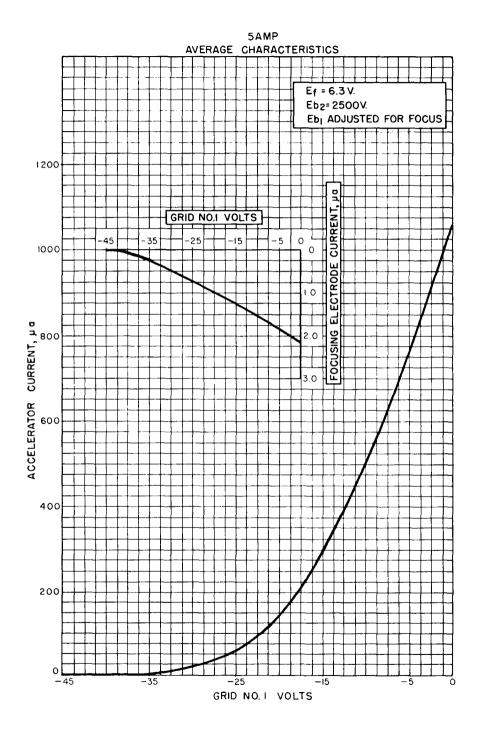

TYPE 5AMP-

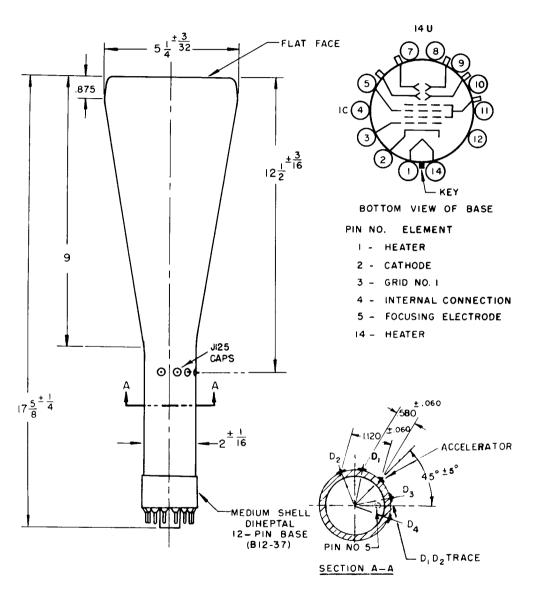

# **5AQP- CATHODE-RAY TUBES**

The new Du Mont Type 5AQP- is a flat-faced, tight-tolerance mono-accelerator cathode-ray tube employing electrostatic focus and deflection. Scanning is limited in both axes to 4 inches to afford high deflection sensitivities. This simplifies the output requirements of low- and medium-frequency deflection amplifiers for which these tubes are intended.

The mono-accelerator principle requires that all beam acceleration occur before the beam enters the deflection system and consequently, field distortion effects on the beam are virtually eliminated. This results in excellent deflection linearity.

Since the Type 5AQP- is intended for lowand medium-frequency applications, all electrode leads are wired through the tube base to simplify the mechanical design of the equipment in which the tube is used. For high-frequency tubes, see Types 5AMP- and 5ATP-.



162/ + 2/16 Tu-Lan

#### **GENERAL CHARACTERISTICS**

### **Electrical Data**

| Heater Voltage Heater Current Focusing Method Deflecting Method |                | 0.0            | 5 ± 10%<br>Elec | Ampere<br>trostatic  |
|---|----------------|----------------|-----------------|----------------------|
| Phosphor<br>Fluorescence  | No. 1<br>Green | No. 2<br>Green | No. 7<br>Blue   | No. 11<br>Blue       |
| Phosphorescence   |                | Green          | Yellow          |                      |
| Persistence   | Medium         | Long           | Long            | Short                |
| Direct Interelectrode (   | Capacitances   | Min.           | Max.            |                      |
| Cathode to all other  | electrodes     | 2.7            | 5.0             | $\mu\mu\mathbf{f}$ . |
| Grid No. 1 to all oth   | er electrodes  | 3.7            | 6.9             | $\mu\mu\mathbf{f}$ . |
| D1 to D2  |                | 2.4            | 4.5             | $\mu\mu\mathbf{f}$ . |
| D3 to D4  |                |                | 1.6             | $\mu\mu\mathbf{f}$ . |
| D1 to all other elect   | rodes          | 5.0            | 9.3             | $\mu\mu\mathbf{f}$ . |
| D2 to all other elec-   | trodes         | 5.0            | 9.3             | $\mu\mu f$ .         |
| D3 to all other elect   | rodes          | 3.3            | 6.3             | $\mu\mu f$ .         |
| D4 to all other elec-   | trodes         | 3.3            | 6.3             | $\mu\mu f$ .         |

#### **Mechanical Data**

| Overall Length 16¾  |             |         |
|---|-------------|---------|
| Greatest Diameter of Bulb 51/4                                      | $\pm$ 3/32  | Inches  |
| Minimum Useful Screen Diameter                                      | 41/2        | Inches  |
| Base (Medium Shell Diheptal 12-pin)                                 |             | B12-37  |
| Basing  |             | 14G     |
|   |             |         |
| Base Alignment  |             |         |
| D1D2 trace aligns with Pin No. 5 and Tube Axis                      | . ± 10 1    | Degrees |
| Positive voltage on D1 deflects beam approximately toward pin No. 5 |             |         |
| Positive voltage on D3 deflects beam approximately toward pin No. 2 |             |         |
| Angle between D3D4 and D1D2 traces                                  | $90 \pm 11$ | Degrees |

# MAXIMUM RATINGS (Design Center Values)

| Accelerator Voltage <sup>1</sup>                              | 4,000 Max. Volts D-C |
|---|----------------------|
| Focusing Voltage  | 1,500 Max. Volts D-C |
| Grid No. 1 Voltage  |                      |
| Negative Bias Value   | 200 Max. Volts D-C   |
| Positive Bias Value   | 0 Max. Volts D-C     |
| Positive Peak Value   | 0 Max. Volts         |
| Peak Heater-Cathode Voltage                                   |                      |
| Heater Negative with respect to Cathode                       | 180 Max. Volts D-C   |
| Heater Positive with respect to Cathode                       | 180 Max. Volts D-C   |
| Peak Voltage between Accelerator and any Deflection Electrode | e 1,200 Max. Volts   |

# TYPICAL OPERATING CONDITIONS

| TITICAL OF EXAMINE   | CONDINIONS                       |
|--|----------------------------------|
| For Accelerator Voltage of   | 2,500 Volts D-C                  |
| Focusing Voltage   | 0 to 300 Volts D-C               |
| Grid No. 1 Voltage"  | —34 to —56 Volts D-C             |
| P1 Light Output <sup>3</sup>   |                                  |
| Modulation <sup>3</sup>  |                                  |
| P1 Light Output <sup>3</sup> Modulation <sup>3</sup> Line Width A <sup>3</sup> | .030 Inches Max.                 |
| Accelerator Current <sup>3</sup>   | 400 Max. Microamperes D-C        |
| Deflection Factors:  |                                  |
| D1 and D2  | 40 to 50 Volts D-C per Inch      |
| D3 and D4  | 31.5 to 38.5 Volts D-C per Inch  |
| Deflection Factor Uniformity <sup>4</sup>                                      |                                  |
| Heaful Scan  |                                  |
| D1D2   | 4 Inches*                        |
| D1D2<br>D3D4   | 4 Inches*                        |
| Pattern Distortion @ 90% of useful scan <sup>5</sup>                           | 2% Maximum                       |
| Spot Position  | Within a 5/16-inch radius circle |

### CIRCUIT DESIGN VALUES

| Focusing Current for any operating condition                                  |
|---|
| Grid No. 1 Voltage 13.6 to 22.4 Volts D-C per Kilovolt of Accelerator Voltage |
| Grid No. 1 Circuit Resistance 1.5 Max. Megohms                                |
| Resistance in any Deflecting-Electrode Circuit <sup>s</sup> 1 Max. Megohm     |
| Deflection Factors  |
| D1 and D2   |
| D3 and D4   |


#### NOTES

- The product of Accelerator Voltage and average Accelerator Current should be limited to 6 watts.
- 2. Visual extinction of undeflected focused spot.


\* ± 2" minimum from tube face center

- 3. Measured in accordance with MIL-E-1 Specifications.
- 4. The deflection factor (for both D1D2 and D3D4 plate pairs, separately) for any deflection of less than 75% of the useful scan will not differ from the deflection factor for a deflection at 25% of the useful scan by more than the indicated value.
- 5. All portions of a raster pattern, adjusted so its widest points just touch the sides of a 3.672-inch square, will fall within the area bounded by the 3.672-inch square and an inscribed 3.528-inch square.
- 6. Deflection accuracy may be obtained by combining angle between traces, deflection factor uniformity and pattern distortion characteristics. In general, for deflections less than those indicated, the accuracy will improve.
- 7. When the tube is operated at typical operating conditions (Eh=6.3 V., Eb2 = 2500 V., Eb1 at focus); Ec1 adjusted to avoid damage to the screen; with each of the deflecting electrodes connected to the accelerator; and with the tube shielded against external influences, the spot will fall within a 5/16-inch radius circle, centered on the tube face.
  - Under stable operating conditions, the position of the spot will not shift with changes in intensity by more than .025 inch.
- 8. It is recommended that the deflecting electrode circuit resistances be approximately equal.
- 9. An adjustable D.C. potential between the accelerator and the deflection plates may be used to secure best overall focus.

TYPE 5AQP-AVERAGE CHARACTERISTICS

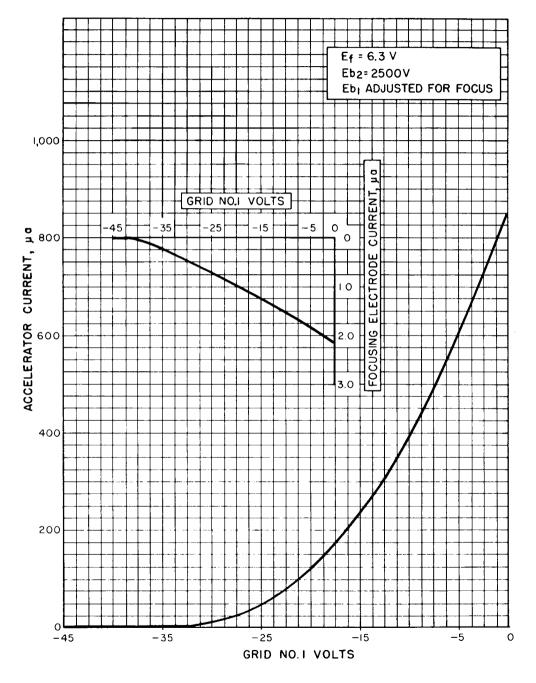

# TYPE 5AQP-

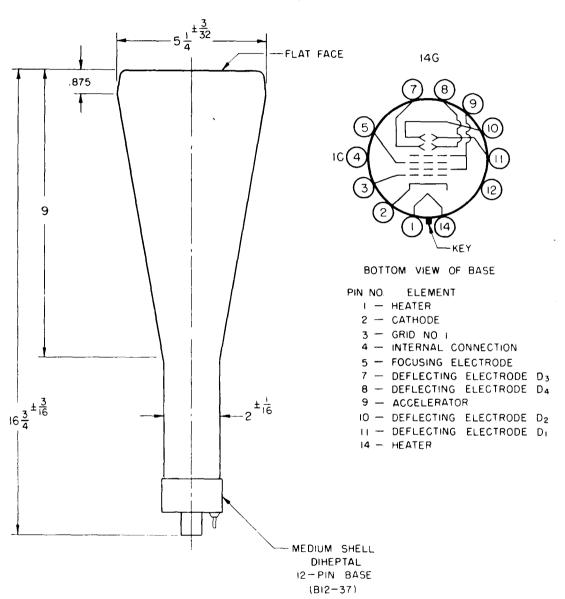

# **5ARP- CATHODE-RAY TUBE**

The Type 5ARP- is a two-gun electrostatic deflection and focus monoaccelerator cathode-ray tube, with each gun having similar electrical characteristics to the Type 5AQP-. The two guns are independent of each other with the exception of the accelerators and pattern adjustment electrodes. Both accelerators and the internal shielding are connected together.

The deflection plates, astigmatism control, accelerator, and pattern adjustment electrode connections for each gun are brought out to a special ring base located at the upper end of the bulb neck. This allows for minimum deflection plate capacitance and maximum voltage insulation without resorting to individual bulb contacts.



### GENERAL CHARACTERISTICS

### **Electrical Data**

| Focusing Method Deflecting Method                        | Electro |              |
|--|---------|--------------|
| Direct Interelectrode Capacitances, Approx. (for each to |         | _            |
| Cathode to all other electrodes                          | 3.6     | $\mu\mu f$ . |
| Grid #1 to all other electrodes                          | 4.4     | $\mu\mu f$ . |
| D1 to D2   | 2.0     | $\mu\mu f$ . |
| D3 to D4   | 1.4     | $\mu\mu f$ . |
| D1 to all other electrodes                               | 4.2     | $\mu\mu f$ . |
| D2 to all other electrodes                               | 4.2     | $\mu\mu f$ . |
| D3 to all other electrodes                               | 3.5     | μμf.         |
| D4 to all other electrodes                               | 3.5     | $\mu\mu f$ . |

#### **Optical Data**

| Phosphor Number      | No. 1  | No. 2 | No. 7  | No. 11 |
|----------------------|--------|-------|--------|--------|
| Fluorescent Color    | Green  | Green | Blue   | Blue   |
| Phosphorescent Color |        | Green | Yellow |        |
| Persistence          | Medium | Long  | Long   | Short  |

## **Mechanical Data**

| Overall Length  |                       |
|---|-----------------------|
| Greatest Diameter of Bulb   |                       |
| Minimum Useful Screen Diameter  |                       |
| Bases   | B12-37                |
| Basing  | Special Ring Base     |
| B12-37 Base Alignment (for each unit): D1D2 trace aligns with Pin #4 and tube axis Positive voltage on D1 deflects beam approximately toward Positive voltage on D3 deflects beam approximately toward Angle between D3D4 and D1D2 traces | l Pin #11<br>d Pin #8 |

Trace Alignment.

Corresponding traces of each gun are within 1.0 degree of each other, in center of tube

# MAXIMUM RATINGS (Design Center Values) (Values are for each unit)

| Heater Voltage 6.3 Volts   |
|--|
| Heater Current at 6.3 Volts 0.6 ± 10% Ampere                                     |
| Accelerator Voltage 6000 Max. Volts D-C  |
| Astigmatism Control Electrode Voltage 6000 Max. Volts D-C                        |
| Accelerator Input 6 Max. Watts   |
| Astigmatism Control Electrode Input 6 Max. Watts                                 |
| Focusing Electrode Voltage 1500 Max. Volts D-C                                   |
| Grid #1 Voltage  |
| Negative Bias Value 200 Max. Volts D-C   |
| Positive Bias Value 0 Max. Volts D-C   |
| Positive Peak Value 0 Max. Volts   |
| Peak Heater-Cathode Voltage  |
| Heater negative with respect to cathode  |
| Heater positive with respect to cathode 180 Max. Volts                           |
| Peak Voltage between Accelerator and any Deflection Electrode 1100 Max. Volts    |
| Peak Voltage between Accelerator and Pattern Adjustment Electrode 280 Max. Volts |
| •  |
| 'TYPICAL OPERATING CONDITIONS  |
| (Values are for each unit unless otherwise indicated)                            |
| Accelerator Voltage <sup>2</sup> 2500 Volts D-C                                  |
| Astigmatism Control Voltage <sup>2</sup> 2500 Volts D-C                          |
| Focusing Electrode Voltage 0 to 300 Volts D-C                                    |
| Grid #1 Voltage" —34 to —56 Volts D-C  |
| P1 Light Output <sup>4</sup> 15 Ft. L. Min.                                      |
| Modulation <sup>4</sup> 40 Max. Volts D-C  |
| Line Width A <sup>4</sup> 0.030 Inch Max.  |
| Deflection Factors:  |
| D1D2 45 to 55 Volts D-C per Inch   |
| D3D4 31.5 to 38.5 Volts D-C per Inch   |
| Deflection Ractor Uniformity <sup>5</sup> 1.5% Max.                              |
| Useful Scan:   |
| D1D2 4 Inches*   |
| D3D4 3.3 Inches*   |
| Pattern Distortion <sup>6</sup>  |
| Tracking Error 0.050 Inch Max.   |
| Spot Position <sup>8</sup> Within a 5/16-inch radius circle                      |
|  |
| CIRCUIT DESIGN VALUES (For each unit)  |
| Focusing Electrode Current for any operating condition                           |

| Grid #1 voitage              | —13.0 to —22.4 Volts/Kilovoit of Accelerator Voltage        |
|------------------------------|---|
| Grid #1 Circuit Resistance   | 1.5 Max, Megohms  |
| Deflection Factors:          |   |
| D1D2                         | 18 to 22 Volts D-C per Inch per Kilovolt of Accelerator     |
| D3D4                         | 12.6 to 15.4 Volts D-C per Inch per Kilovolt of Accelerator |
| Resistance in any Deflecting | -Electrode Circuit <sup>9</sup> 1 Max. Megohm               |
| * centered                   |   |

#### NOTES

- 1. Values given are for balanced deflection voltages. These values are measured with the accelerator, astigmatism control, and pattern adjustment electrodes connected together.
- Deflection uniformity, tracking error, or pattern distortion may be improved by the use of a difference potential applied between accelerator and pattern adjustment electrodes.

When this difference potential is used, slight changes may be noted in deflection factors, grid cut-off voltage, light output and line width.

The astigmatism control electrode voltage should be adjusted to obtain optimum spot shape.


- 3. Visual extinction of undeflected focused spot.
- 4. Measured in accordance with MIL-E-1 specifications.
- 5. The deflection factor (for both D1D2 and D3D4 plate pairs, separately) for any deflection of less than 90% of the useful scan will not differ from the deflection factor for a deflection at 30% of the useful scan by more than the indicated value.
- 6. All portions of a raster pattern, adjusted so its widest points just touch the sides of a 3.672 x 3.060-inch rectangle, will fall within the area bounded by the 3.672 x 3.060-inch rectangle and an inscribed 3.528 x 2.940-inch rectangle.

- 7. The positions of the spot of each beam, when deflected from the center by applied voltages proportional to the deflection factor, will not deviate from each other by more than the indicated value within 90% of the useful scan dimensions.
- 8. When the tube is operated at typical operating conditions (Eh = 6.3 V., Eb2 = 2500 V., Eb1 at focus); Ec1 adjusted to avoid damage to the screen; with each of the deflecting electrodes connected to the accelerator; and with the tube shielded against external influences, both spots will fall within a 5/16-inch radius circle centered on the tube face.

The distance between each spot will be no greater than 5/16 inch.

It is recommended that the deflecting electrode circuit resistances be approximately equal.

#### TYPE 5ARP-

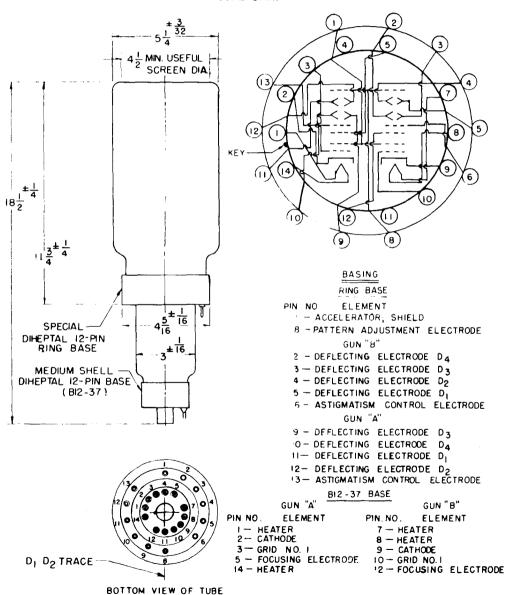

## **5ATP- CATHODE-RAY TUBES**

The Du Mont Type 5ATP- are high-voltage, tight-tolerance electrostatically focused and deflected cathode-ray tubes operating on the new

mono-accelerator principle.

Mono-accelerator construction provides a considerable improvement in the performance of cathode-ray tubes with no sacrifice in spot size, trace brilliance or deflection sensitivity. In the radically new electron gun, all beam acceleration takes place before the beam enters the deflection system. Under this arrangement, the beam path is such that field distortion is virtually non-existent. This distortion eliminated, excellent deflection linearity is achieved as well as uniform spot size and intensity over the entire scanned area.

The 5ATP- is designed for accelerating potentials up to 6000 volts. At this voltage, screen illumination comparable to other tube designs, operating at voltages up to 60% higher, is obtained with much greater deflection sensitivity. The deflection sensitivity is further increased through location of the deflection plates so that the useful screen area measures 2.5 x 4 inches, with the shorter dimension in the Y-axis. Critical tolerances of mono-accelerator design only possible through Du Mont pioneered tight-tolerance construction.



Deflection-plate connections are brought out through the tube wall at the neck to minimize lead inductance and capacitance. A flat faceplate reduces measurement error owing to parallax between screen and scale. These features, combined with the high degree of accuracy inherent in the tight-tolerance design make the Type 5ATP-particularly well suited for accurate analysis of high frequencies and rapidly occurring pulses and transients.

#### GENERAL CHARACTERISTICS

#### **Electrical Data**

| Focusing Method                    |      | Electr | ostatic              |
|------------------------------------|------|--------|----------------------|
| Deflecting Method                  |      | Electr | ostatic              |
| Direct Interelectrode Capacitances | Min. | Max.   |                      |
| Cathode to all other electrodes    | 3.3  | 6.1    | $\mu\mu\mathbf{f}$ . |
| Grid #1 to all other electrodes    | 5.8  | 11.0   | $\mu \mu f$ .        |
| D1 to D2                           | 2.1  | 3.9    | $\mu\mu\mathbf{f}$ . |
| D3 to D4                           | 1.5  | 2.7    | $\mu\mu f$ .         |
| D1 to all other electrodes         | 5.0  | 9.2    | $\mu\mu f$ .         |
| D2 to all other electrodes         | 4.9  | 9.1    | $\mu\mu f$ .         |
| D3 to all other electrodes         | 3.7  | 6.9    | $\mu\mu f$ .         |
| D4 to all other electrodes         | 3.2  | 6.0    | $\mu\mu f$ .         |

#### **Optical Data**

| Phosphor Number      | No. 1  | No. 2 | No. 7  | No. 11 |
|----------------------|--------|-------|--------|--------|
| Fluorescent Color    | Green  | Green | Blue   | Blue   |
| Phosphorescent Color | r —    | Green | Yellow |        |
| Persistence          | Medium | Long  | Long   | Short  |

#### Mechanical Data


| Overall Length 175% ± 1/4 Inches          | s |
|---|---|
| Greatest Diameter of Bulb 5½ ± 3/32 Inche | S |
| Minimum Useful Screen Diameter 4½ Inche   | S |
| Bulb Number                               | 1 |
| Neck Contacts J1-2                        |   |
| Base                                      | 7 |
| Basing 14                                 | V |

| Base Alignment D1D2 trace aligns with Pin #5 and tube axis ± 10 Degrees Positive voltage on D1 deflects beam approximately toward Pin #5  |
|---|
| Positive voltage on D3 deflects beam approximately toward Pin #2  Angle between D3D4 and D1D2 traces  |
| MAXIMUM RATINGS (Design Center Values)  |
| Heater Voltage 6.3 Volts  |
| Heater Current at 6.3 Volts 0.6 ± 10% Ampere  |
| Accelerator Voltage 10,000 Max. Volts D-C   |
| Grid #2 Voltage 700 Max. Volts D-C Accelerator Input 4½ Max. Watts  |
| Focusing Electrode Voltage —500 to +1000 Max. Volts D-C   |
| Grid #1 Voltage   |
| Negative Bias Value 200 Max. Volts D-C  |
| Positive Bias Value 0 Max. Volts D-C Positive Peak Value 0 Max. Volts   |
| Positive Peak Value  Peak Heater-Cathode Voltage  |
| Heater Negative with respect to cathode 180 Max. Volts  |
| Heater Positive with respect to cathode 180 Max. Volts  |
| Peak Voltage between Accelerator and any Deflection Electrode 2000 Max. Volts   |
| TYPICAL OPERATING CONDITIONS  |
| Accelerator Voltage 6000 Volts D-C  |
| Grid #2 Voltage 300 Volts D-C   |
| Focusing Electrode Voltage 0 to 700 Volts D-C Grid #1 Voltage -34 to -56 Volts D-C  |
| P11 Light Output <sup>2</sup> 100 Min. Ft. L.   |
| Modulation <sup>2</sup> 40 Max. Volts D-C   |
| Line Width "A" <sup>2</sup>   |
| Accelerator Current <sup>2</sup> 750 Max. Microamperes D-C Deflection Factors:  |
| D1D2 94 to 116 Volts D-C per Inch   |
| D3D4 34 to 42 Volts D-C per Inch  |
| Deflection Factor Uniformity <sup>3</sup> 1% Max.   |
| Useful Scan: D1D2   |
| D3D4 3.50 ( $\pm$ 1.75 min. from tube face center) Inches   |
| Pattern Distortion @ 90% of Useful Scan <sup>4</sup> 2% Max.  |
| Focusing Electrode Current for any operating condition —15 to +15 Microamperes  |
| Spot Position (undeflected)   |
| CIRCUIT DESIGN VALUES   |
| D1D2 Deflection Factor  |
| MAXIMUM CIRCUIT VALUES  |
| Grid #1 Circuit Resistance 1.5 Max. Megohms Resistance in any Deflecting-Electrode Circuit 1 Max. Megohm  |
| NOTES   |
| 1. Visual extinction of undeflected focused spot.   |
| 2. Measured in accordance with MIL-E-1 specifications. Light output measured with   |
| Type 3 Photronic Cell without eye correction.  3. The deflection factor (for both D1D2 and D3D4 plate pairs, separately) for any de-  |
| flection of less than 75% of the useful scan will not differ from the deflection factor for a deflection at 25% of the useful scan by more than the indicated value.  |
| 4. All portions of a raster pattern, adjusted so its widest points just touch the sides of a 1.469 x 3.213-inch rectangle, will fall within the area bounded by the 1.469 x 3.213-  |
| <ul> <li>inch rectangle and an inscribed 1.411 x 3.087-inch rectangle.</li> <li>5. Deflection accuracy may be obtained by combining angle between traces, deflection factor uniformity and pattern distortion characteristics. In general, for deflections</li> </ul> |
| less than those indicated the accuracy will improve.  |
| 6. When the tube is operated at typical operating conditions (Eh = 6.3 V., Eb2 = 6000 V., Eb1 at focus, Ec2 = 300 V.); Ec1 adjusted to avoid damage to the screen; with   |
| each of the deflecting electrodes connected to the accelerator; and with the tube shielded against external influences, the spot will fall within a 5/16-inch radius circle, centered on the tube face.   |


centered on the tube face.

Under stable operating conditions, the position of the spot will not shift with changes in intensity by more than .025 inch.

- It is recommended that the deflecting electrode circuit resistances be approximately
  equal.
- An adjustable D.C. potential between the accelerator and the deflection plates may be used to secure best overall focus.

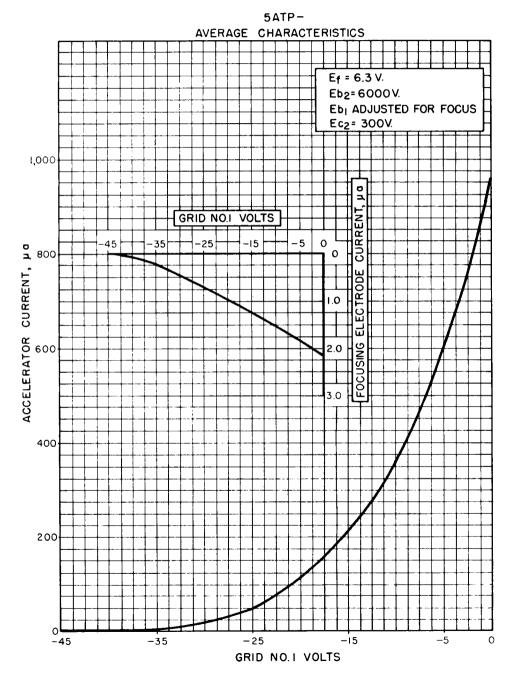

TYPE 5ATP-

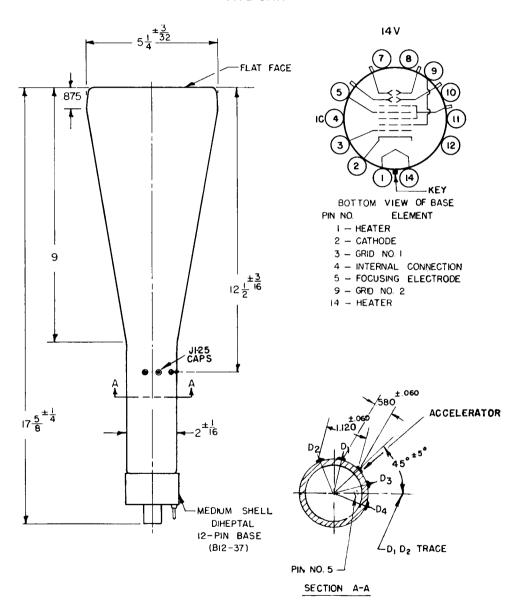

# TYPE 5AWP- CATHODE-RAY TUBES

The Du Mont Type 5AWP- Cathode-ray Tubes are high voltage tubes which incorporate an intensifier subdivided into several steps. This feature permits the use of much higher overall accelerating voltages with deflection sensitivities only slightly less than heretofore obtainable in low voltage cathode-ray tubes. This tube has a flat face, cylindrical body, special deflection srtucture for minimum defocusing, and the deflection plate and anode connections are made through the neck instead of through the base. Low capacity deflection plate leads facilitate high frequency operation. The gun is designed to draw negligible focusing electrode current. To prevent film-fogging, and for maximum brightness and stability in performance, all screens are provided with a highly reflective metal backing. The 5AWP- is one of the line of Du Mont Tighttolerance Cathode-ray Tubes.



### GENERAL CHARACTERISTICS

#### **Electrical Data**

| Focusing Method Deflecting Method  |      |      |            |
|------------------------------------|------|------|------------|
| Direct Interelectrode Capacitances | Min. | Max. |            |
| Cathode to all                     | 3.0  | 4.1  | $\mu\mu f$ |
| Grid No. 1 to all                  | 3.5  | 5.0  | $\mu\mu f$ |
| D1 to D2                           | 1.4  | 2.2  | $\mu\mu f$ |
| D3 to D4                           |      | 1.5  | $\mu\mu f$ |
| D1 to all                          | 4.4  | 5.4  | $\mu\mu f$ |
| D2 to all                          | 4.8  | 6.1  | $\mu\mu f$ |
| D3 to all                          | 3.5  | 4.5  | $\mu\mu f$ |
| D4 to all                          | 3.0  | 3.9  | $\mu\mu f$ |

### **Optical Data**

| Phosphor Number      | 1      | 2     | 7      | 11    |
|----------------------|--------|-------|--------|-------|
| Fluorescent Color    | Green  | Green | Blue   | Blue  |
| Phosphorescent Color |        | Green | Yellow |       |
| Persistence          | Medium | Long  | Long   | Short |

### **Mechanical Data**

| $ \begin{array}{llllllllllllllllllllllllllllllllllll$                    |
|--|
| Bulb Number J42L1  |
| Bulb Contacts — Recessed Small Ball Caps J1-22                           |
| Neck Contacts — Small Ball Caps J1-25                                    |
| Base — Medium Shell Diheptal, 12 Pin B12-37 Basing 14P                   |
| Base Alignment   |
| D3D4 trace aligns with Pin No. 5 and tube axis ± 10 Degrees              |
| Positive voltage on D1 deflects beam approximately toward Base Pin No. 8 |
| Positive voltage on D3 deflects beam approximately toward Base Pin No. 5 |
| Bulb Contact Alignment   |
| J1-22 contacts align with D3D4 trace ± 10 Degrees                        |
| J1-22 contacts on same side as Pin No. 5                                 |
| Trace Alignment  |
| Angle between D3D4 and D1D2 traces 90 ± 1 Degrees                        |

### **MAXIMUM RATINGS (Design Center Values)**


| MAXIMOM KATHOO (Besign Center Values)   |   |
|---|---|
| Heater Voltage 6.3 Volt   |   |
| Heater Current at 6.3 Volts $0.6 \pm 10\%$ Amper                                      |   |
| Post-Accelerator Voltage (Note 1) 15000 Max. Volts D-C                                |   |
| Accelerator Voltage (Note 1) 3500 Max. Volts D-C                                      |   |
| Ratio Post-Accelerator Voltage to Accelerator Voltage (Note 2)                        | 5 |
| Accelerator Input (Avg.) 6.0 Max. Watt  | S |
| Focusing Electrode Voltage 1500 Max. Volts D-0  | 2 |
| Grid No. 1 Voltage  |   |
| Negative Bias Value 200 Max. Volts D-0  | 3 |
| Positive Bias Value 0 Max, Volts D-0  | 3 |
| Positive Peak Value 0 Max. Volt   |   |
| Peak Heater-Cathode Voltage   |   |
| Heater negative with respect to cathode 180 Max. Volt                                 | s |
| Heater positive with respect to cathode 180 Max. Volt                                 |   |
| Peak Voltage between Accelerator and any Deflection Electrode 1200 Max. Volt          |   |
| Tour votage between meetication and any Benedicin Biothesia 1200 Main vote            | • |
| TYPICAL OPERATING CONDITIONS  |   |
| Post-Accelerator Voltage (Note 1) 10300 Volt  | _ |
|   |   |
| Accelerator Voltage (Note 1) 2300 Volt  | S |
| Focusing Electrode Voltage for all values of Ib3 500 to 730 Volt                      |   |
| Grid No. 1 Voltage (Note 3) —33 to —55 Volt   | š |
| Deflection Factors: (Note 4)  |   |
| D1 and D2 113 to 128 Volts D-C per Incl   |   |
| D3 and D4 113 to 128 Volts D-C per Incl   |   |
| Deflection Factory Uniformity (Note 5)  |   |
| Deflection Defocusing (Note 6) 1:2 Ratio  | ) |
| Useful Scan (Note 7)  |   |
| D1 and D2   |   |
| D3 and D4   | S |
| Pattern Distortion (Note 8)   |   |
| Modulation (Note 9) 35 Max. Volts D-0   |   |
| Line Width "A" (Note 9)   |   |
| Focusing Electrode current for any operating condition $-15$ to $+10~\mu$ B           |   |
| Spot Position (focused and undeflected) (Note 10) Within a 15 mm Squar                |   |
| For Accelerator Voltage not shown in the preceding table, the following can be used a | S |
| a guide:  |   |
| Focusing Electrode Voltage 21% to 32% of Accelerator Volt                             | s |
| Grid No. 1 Voltage (Note 3) 1.4% to 2.4% of Accelerator Volt                          | s |
| Ratio Post-Accelerator to Accelerator Voltage 4.                                      | 5 |
| D1 and D2   | r |
| D3 and D4   |   |
|   |   |
| MAXIMUM CIRCUIT VALUES  |   |

...... 1.5 Max. Megohms Grid No. 1 Circuit Resistance Resistance in any Deflecting Electrode Circuit (Note 11) 1.0 Max. Megohm


- 1. Accelerator to final intensifier electrode voltage equally divided over the three intensifier electrodes by 25 megohm resistors connected between each intensifier and the accelerator.
- 2. This tube is designed for optimum performance when operating at an Eb3/Eb2 ratio of 4.5. Operation at other ratios of Eb3/Eb2 may result in changes in deflection uniformity and pattern distortion.
- 3. Visual extinction of undeflected focused spot.
- 4. D1D2 deflection factor within 8 volts of D3D4.
- 5. The deflection factor (for both D1D2 and D3D4 plate pairs, separately) for a deflection of 25% of the useful scan will not differ from the deflection factor for a deflection at 75% of the useful scan by more than the indicated value.
- 6. The ratio of the line width of a 4 inch long trace, adjusted for best center focus, to the line width measured on the faceplate axis when the trace is deflected perpendicularly  $\pm$  2 inches from the face center by a balanced D-C voltage, will not be greater than the specified value.
- 7. Reduction in useful scan when Post-Accelerator voltage is greater than Accelerator voltage is determined by the ratio of these voltages measured with respect to cathode. Values shown are therefore applicable to any operating condition with the same voltage ratios.


- 8. All portions of a raster pattern, adjusted so its widest points just touch the sides of a 3.040 inch square, will fall within the area bounded by the 3.040 inch square and an inscribed 2.960 inch square.
- 9. For an Ib3 of 25  $\mu$ ADC measured in accordance with MIL-E-1 specifications.
- Centered with respect to the tube face and with the tube shielded. Connect free deflecting electrodes to accelerator.
- 11. It is recommended that the deflection electrode circuit resistances be one megohm or less and approximately equal, otherwise beam shift at high drives can be expected. Higher resistance values up to five megohms may be used for low beam current operation.

TYPE 5AWPAVERAGE CHARACTERISTICS

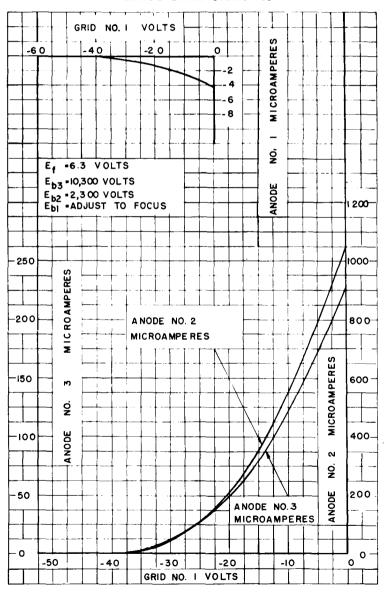

TYPE 5AWP-

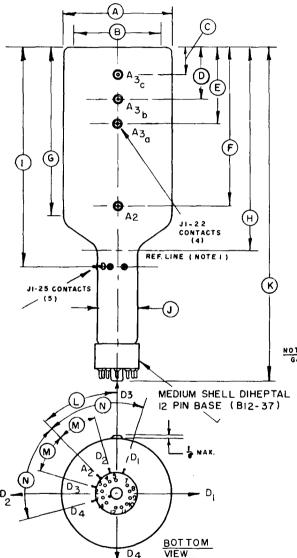

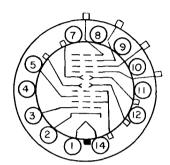

|     | 14P | BOTTOM VIEW |
|-----|-----|-------------|
| NI. | NO  | FIEMENT     |

I HEATER

2 CATHODE

3 GRID NO.I

4 INTERNAL CONNECTION

FOCUSING ELECTRODE

7-12 NO CONNECTION

14 HEATER

NOTE: I, REFERENCE LINE, POINT WHERE RING GAUGE 2.063+.001 LD. 1/2 LONG WILL STOP.

2. THE BULB SHALL BE J42LI WITHOUT BUTTONS.

| REF         | DIMENSION         |
|-------------|-------------------|
| Α           | 5 1/4 1 3/32 DIA. |
| В           | 4 1/2 MIN. SCREEN |
| С           | 1 7/16 2 3/16     |
| D           | 2 9/16 + 3/16     |
| D<br>E<br>F | 3 11/16 2 3/16    |
|             | 8 1 3/16          |
| G           | 8 1/2 NOM.        |
| _H          | 10 1/4 = 3/16     |
|             | 112 1/4           |
| J           | 2 1/16 0.D.       |
| K           | 16 3/4 1/4        |
| L           | 45 °t10°          |
| М           | 30°+5°            |
| N           | 60°±5°            |

# TYPE 5BDP- CATHODE-RAY TUBES

The Du Mont Type 5BDP- is a five inch, flat-faced, electrostatically focused and deflected Cathode-ray Tube with two independently controlled beams and incorporating an intensifier sub-divided into several steps. This feature permits operation at high voltages and ratios of intensifier to second anode voltage resulting in a high writing rate. The deflector leads are brought out directly through the bulb wall in order to minimize lead inductance and capacitance. To prevent film-fogging, and for maximum brightness and stability in performance, all screens are provided with a highly reflective metal backing.

Metallized screen types other than those listed below are available on special order.



### **GENERAL CHARACTERISTICS (Note 1)**

#### **Electrical Data**

| Heater Voltage          |              |       |        |            |
|-------------------------|--------------|-------|--------|------------|
| Heater Current          |              |       |        |            |
| Focusing Method         |              |       | Ele    | ctrostatic |
| Deflecting Method       |              |       | Ele    | ctrostatic |
| Phosphor                | No. 1        | No. 2 | No. 7  | No. 11     |
| Fluorescence            | Green        | Green | Blue   | Blue       |
| Phosphorescence         |              | Green | Yellow |            |
| Persistence             | Medium       | Long  | Long   | Short      |
| Direct Interelectrode C | Capacitances | Min   | Max.   |            |
| Cathode to all          |              | 3.4   | 4.4    | $\mu\mu f$ |
| Grid No. 1 to all       |              | 3.1   | 4.1    | $\mu\mu f$ |
| D1 to D2                |              | 1.8   | 2.7    | $\mu\mu f$ |
| D3 to D4                |              | 1.3   | 2.1    | $\mu\mu f$ |
| D1 to all               |              | 5.3   | 6.8    | $\mu\mu f$ |
| D2 to all               |              | 5.3   | 6.8    | $\mu\mu f$ |
| D3 to all               |              | 4.5   | 5.8    | $\mu\mu f$ |
| D4 to all               |              | 4.5   | 5.8    | μμf        |

### **Mechanical Data**

| Overall Length   | $18\frac{1}{4} \pm \frac{1}{4}$ | Inches  |
|--|---------------------------------|---------|
| Greatest Diameter of Bulb  | $5\frac{1}{4} \pm \frac{3}{32}$ | Inches  |
| Minimum Useful Screen Diameter                                     | 41/4                            | Inches  |
| Bulb Contacts — Recessed Small Ball Cap                            |                                 | T1-22   |
| Neck Contacts — Skirted Miniature                                  |                                 |         |
| Base — Medium Shell Diheptal, 12 pin                               |                                 |         |
| Basing   |                                 | 14AB    |
| Base Alignment   |                                 |         |
| Base Key aligns with the D1D2 trace                                | ± 10 E                          | egrees  |
| Positive voltage on D2 deflects the beam approximately towards Ba  |                                 | J       |
| Positive voltage on D3 deflects the beam approximately towards Bas |                                 |         |
| Bulb Contact Alignment   |                                 |         |
| Bulb Contacts Align with D3D4 trace                                | ± 10 E                          | egrees) |
| Bulb Contacts on same side as Brse Pin No. 4                       | 500 En 1000                     |         |
| Trace Alignment  |                                 |         |
| D1D2 trace aligns with D3D4 trace                                  | 90 ± 2 E                        | egrees  |
| Corresponding traces of each gun align within                      | ± 2 I                           | egrees  |
|  | CONTRACTOR TO LET               | 5       |
|  |                                 |         |

### **MAXIMUM RATINGS (Design Center Values)**

| Post-Accelerator Voltage                              | 25,500 | Max. | Volts D-C |
|---|--------|------|-----------|
| Accelerator Voltage (Note 2)                          |        |      |           |
| Ratio Post-Accelerator Voltage to Accelerator Voltage |        |      | 10 Max.   |
| Focusing Voltage                                      | 1,550  | Max. | Volts D-C |

| Grid No. 1 Voltage  |       |       |       |       |
|---|-------|-------|-------|-------|
| Negative Bias Value   |       |       |       |       |
| Positive Bias Value   | 0     | Max.  | Volts | D-C   |
| Positive Peak Value   | 0     | Max.  | Volts | D-C   |
| Peak Heater to Cathode Voltage                                |       |       |       |       |
| Heater Negative with respect to Cathode                       | . 180 | Max.  | Volts | D-C   |
| Heater Positive with respect to Cathode                       |       |       |       |       |
| Peak Voltage between Accelerator and any Deflection Electrode |       | 1,200 | Max.  | Volts |


#### TYPICAL OPERATING CONDITIONS

| For Post-Accelerator Voltage of (Note 3)  For Accelerator Voltage of (Note 3) | 2,000 Volts                 |
|---|-----------------------------|
| Focusing Voltage  |                             |
| Grid No. 1 Voltage (Note 4)   |                             |
| Modulation (Note 5)   | 45 Max. Volts               |
| Line Width "A" (Note 5)   |                             |
| Line Width "B" (Note 5)   |                             |
| Interaction Factor: (Note 6)  | 14 x 10-6 In./Volt D-C Max. |
| Deflection Factors:   |                             |
| D1 and D2   | 130 to 160 Volts D-C/Inch   |
| D3 and D4   |                             |
| Spot Position (Undeflected) (Note 7)  | Within a 16 mm Square       |
| Useful Scan (Note 8)  | _                           |
| Pattern Distortion (Note 9 & 10)  |                             |

### CIRCUIT DESIGN VALUES


| Focusing Voltage 200 to 315 Volts per Kilovolt of Accelerator Voltage              |
|--|
| Focusing Current for any operating conditions ———————————————————————————————————— |
| Grid No. 1 Voltage (Note 4)22.5 to -37.5 Volts per Kilovolt of Accelerator Voltage |
| Grid No. 1 Circuit Resistance 1.5 Max. Megohms                                     |
| Resistance in any Deflecting-Electrode Circuit (Note 11)                           |

- 1. Values are for each unit unless otherwise stated.
- 2. Accelerator power input (Avg.) should be limited to six watts. At  $100~\mu A$  D-C beam current, the cathode current shall not exceed 2 mA D-C. To protect tube against damage this measurement should be taken by pulsing the grid from cutoff to the specified beam current at a 10% cycle and multiplying the current meter readings by 10.
- Equally divided over the three intensifier electrodes.
   Suggested method of connection:

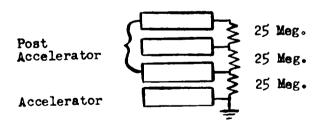

- 4. Visual extinction of undeflected focused spot.
- 5. For an Ib3 of 50  $\mu$ A D-C.
- 6. The deflection of one beam when balanced D-C voltages are applied to the deflection electrodes of the other beam will not be greater than the specified value.
- 7. With the tube shielded against external influences, Eb3 = 14,000 volts, Eb2 = 2,000 volts, and Eb1 adjusted for focus centered with respect to the tube face.


- 8. Minimum useful scan diameter is limited at high ratios of Eb3/Eb2 to 4 inches at 5:1, 3.5 inches at 7:1 and 2.5 inches at 10:1.
- 9. The total vertical movement of the upper edge of a 3 inch vertical trace, (centered with respect to the tube face), deflected horizontally 1.5 inches to the left and right of the center of the tube face, shall not exceed 0.12 inch. The total vertical movement of the lower edge of the 3 inch trace also shall not exceed 0.12 inch. The D3D4 trace shall be considered vertical.
- 10. The sum of the total horizontal movement of the left and right edges of a 3 inch horizontal trace, (centered with respect to the tube face), deflected vertically 1.5 inches above and below the center of the tube face, shall not exceed 0.12 inch. The D1D2 trace shall be considered horizontal.
- 11. It is recommended that the deflecting electrode circuit resistances be approximately equal. Higher resistance values up to 5.0 megohms may be used for low beam current operation.

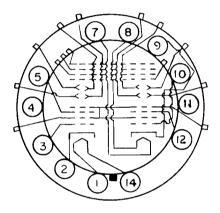


BOTTOM VIEW

|     | UNIT A             |         | UNIT B           |
|-----|--------------------|---------|------------------|
| PIN | NO. ELEMENT        | PIN NO. | ELEMENT          |
| 1   | HEATER             | 7 HE    | ATER             |
| 2   | CATHODE            | 8 HE    | EATER            |
| 3   | GRID NO. 1         | 9 CA    | THODE            |
| 4   | NO CONNECTION      | 10 GF   | RID NO.1         |
| 5   | FOCUSING ELECTRODE | II NO   | CONNECTION       |
| 14  | HEATER             | 12 FC   | CUSING ELECTRODE |

TYPE 5BDP-

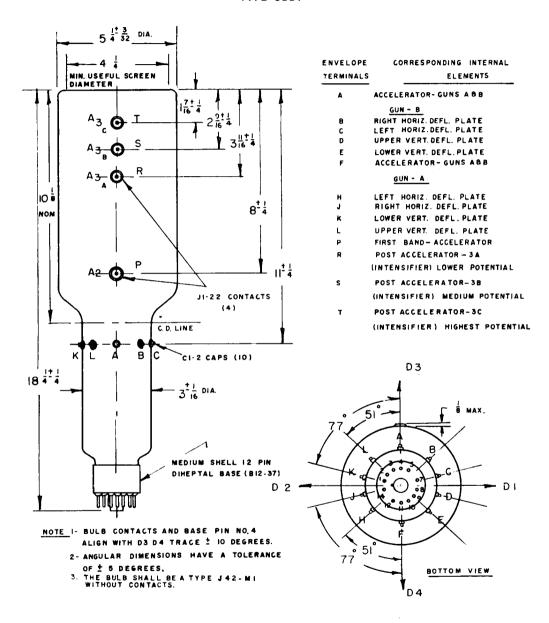

# TYPE 5BDP-AVERAGE CHARACTERISTICS

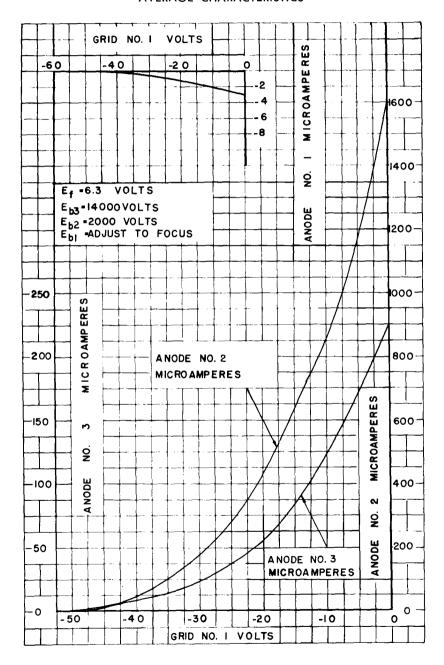

### **5BP-A CATHODE-RAY TUBES**

The Type 5BP-A Cathode-ray Tubes are electrostatically focussed and deflected cathode-ray tubes with four free deflection plates for balanced deflection. Employing low accelerating voltages, the Type 5BP-A Cathode-ray Tubes are designed for applications where the use of an intensifier is not essential. The electron gun is designed to draw negligible focusing electrode current.

The Type 5BP-A is recommended for replacement only.

### GENERAL CHARACTERISTICS

#### Electrical

| Heater Voltage Heater Current Focusing Method Deflecting Method | 0.6 ±1     | 0% Ampere<br>Electrostatic   |
|---|------------|--|
| Phosphor  | No. 1      | No. 11   |
| Fluorescence  | Green      | Blue   |
| Persistence   | Medium     | Short  |
| Direct Interelectrode Capaci                                    |            |  |
| Grid No. 1 to all other el                                      |            | Committee to the No. of the Committee of |
| D1 to D2  |            | 1.4 $\mu\mu$ f.  |
| D3 to D4  |            | 1.2 $\mu\mu f$ .   |
| D1 to all other electrodes                                      | except D   | $2 \dots 8.0 \mu\mu f.$  |
| D2 to all other electrodes                                      | except D   | 1 7.5 $\mu\mu$ f.  |
| D3 to all other electrodes                                      | s except D | 4 10.0 $\mu\mu$ f.   |
| D4 to all other electrodes                                      | except D   | $3 \dots 7.5 \mu \mu f$ .  |

### Mechanical

| Overall Length   | $5\frac{1}{4} + \frac{1}{16}$ , Inches $-\frac{3}{32}$ Inches |
|--|---|
| Minimum Useful Screen Diameter                                       |   |
| Base   |   |
| Basing   | 11N   |
| Base Alignment   |   |
| 3D4 trace aligns with Pin No. 1 and tube axis                        | ± 10 Degrees  |
| Positive voltage on D1 deflects beam approximately toward Pin No. 4. | _   |
| Positive voltage on D3 deflects beam approximately toward Pin No. 1. |   |
| Angle between 3D4 and 1D2 traces                                     | 90 ± 3 Degrees  |

### MAXIMUM RATINGS—(Design Center Values)

| Anode No. 2 Voltage                                     | 2000 Max. Volts D-C    |
|---|------------------------|
| Anode No. 1 Voltage <sup>1</sup>                        |                        |
| Grid No. 1 Voltage                                      |                        |
| Negative Bias Value                                     | 125 Max. Volts D-C     |
| Positive Bias Value                                     |                        |
| Positive Peak Value                                     | 2 Max. Volts           |
| Peak Voltage between Anode No. 2 and any Deflection Ele | ectrode 500 Max. Volts |


### TYPICAL OPERATING CONDITIONS

| For Anode No. 2 Voltage of  | 1500            | 2000            | Volts                 |
|---|-----------------|-----------------|-----------------------|
|   | 253 to 422      | 338 to 562      | Volts                 |
|   | -15 to -45      | —20 to —60      | Volts                 |
| Deflection Factors: D1 and D2 D3 and D4   | 52 to 74        | 70 to 98        | Volts D-C per Inch    |
|   | 47 to 67        | 63 to 89        | Volts D-C per Inch    |
| Anode No. 1 Voltage for focus   | ••••            | 1%              | to 3% of Eb2 Volts    |
| Deflection Factors: D1 and D2 D3 and D4  Spot Position (Undeflected) <sup>8</sup> | 31.5 to 44.5 Vo | lts D-C per Inc | h per Kilovolt of Eb2 |


### **MAXIMUM CIRCUIT VALUES**


| Grid No. 1 Circuit Resistance                               |   |      |         |
|---|---|------|---------|
| Resistance in any Deflecting Electrode Circuit <sup>4</sup> | 5 | Max. | Megohms |

- 1. Anode No. 2 and Grid No. 2, which are connected together within the tube, are referred to herein as Anode No. 2.
- 2. Visual extinction of undeflected focused spot.
- 3. With Eb2=1500 volts and Eb1 adjusted for focus.
- It is recommended that the deflecting electrode circuit resistances be approximately
  equal.
- For optimum focus the average potentials of the deflection plates and second anode should be the same.

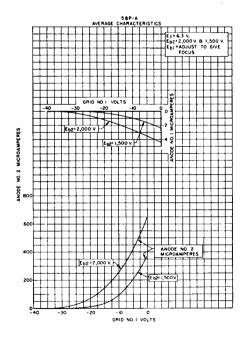

TYPE 5BP-A

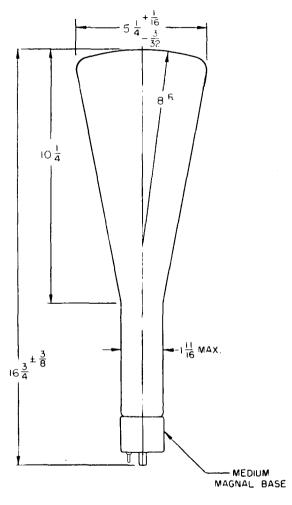

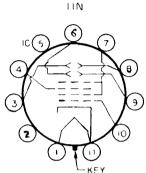

BOTTOM VIEW OF BASE

PIN NO. ELEMENT

I - HEATER

2 - NO CONNECTION

3 - DEFLECTING ELECTRODE DI

4 - ANODE NO. 1

5 - INTERNAL CONNECTION

6 — DEFLECTING ELECTRODE D4

7 - ANODE NO. 2, GRID NO. 2

8 — DEFLECTING ELECTRODE D2

9 — DEFLECTING ELECTRODE D3

IO - GRID NO. I

II - HEATER AND CATHODE

## **5CP-A CATHODE-RAY TUBES**

The Type 5CP-A Cathode-ray Tubes are designed for oscillographic applications. The intensifier principle is used to provide a maximum deflection sensitivity for a given final accelerating voltage. A glass envelope has been designed to provide great mechanical strength and the tube base design provides adequate insulation between electrode leads for high altitude installation. The gun is designed to draw negligible focusing electrode current.

The four types differ only in the characteristics of the fluorescent screens. Other screen types may be obtained on special order.

### **GENERAL CHARACTERISTICS**

#### **Electrical**

| Heater Voltage     |             |           | 6.3    | Volts           |
|--------------------|-------------|-----------|--------|-----------------|
| Heater Current     |             | 0.6       | + 10%. | Ampere          |
| Focusing Method    |             | •••••     | Elect  | rostatic        |
| Deflecting Metho   | dd          |           | Elect  | rostatic        |
| Phosphor           | No. 1       | No. 2     | No. 7  | No. 11          |
| Fluorescence       | Green       | Green     | Blue   | Blue            |
| Phosphorescend     | e —         | Green     | Yellow | _               |
| Persistence        | Medium      | Long      | Long   | Short           |
| Direct Interelectr | ode Capa    | citances, | Nomina | I               |
| Cathode to all     | other elec  | trodes    |        | 9 μμ <b>f</b> . |
| Grid No. 1 to a    | ill other e | lectrodes | s      | 8 μμ <b>f</b> . |
| D1 to D2           |             |           |        | 2 $\mu\mu$ f.   |
| D3 to D4           |             |           |        | 2 $\mu\mu$ f.   |
| D1 to all other    | electrode   | s except  | D2     | 7 μμ <b>f</b> . |
| D2 to all other    | electrode   | s except  | D1     | 7 μμ <b>f</b> . |
| D3 to all other    | electrode   | s except  | D4     | 5 μμ <b>f</b> . |
| D4 to all other    | electrode   | s except  | D3     | 6 μμ <b>f</b> . |




#### Mechanical


| Overall Length   |
|--|
| Minimum Useful Screen Diameter   |
| Bulb Contact J1-22   |
| Base B12-37  |
| Basing 14.J  |
| Base Alignment: D1D2 trace aligns with Pin No. 5 and tube axis ± 10 Degrees  |
| Positive voltage on D1 deflects beam approximately toward Pin No. 5. Positive voltage on D3 deflects beam approximately toward Pin No. 2. Angle between D3D4 and D1D2 traces |

### **MAXIMUM RATINGS—(Design Center Values)**


| Anode No. 3 Voltage (Accelerator High-Voltage Electrode)  |  |  |  |  |
|---|--|--|--|--|
| Grid No. 1 Voltage<br>Negative Bias Value<br>Positive Bias Value<br>Positive Peak Value                   |  |  | 0 Max. Volts D-C   |  |
| Peak Heater-Cathode Voltage Heater Negative with respect to Cathod Heater Positive with respect to Cathod |  |  |  |  |
| Peak Voltage between Anode No. 2 and  | any Deflection                           | n Electrode                                | 500 Max. Volts   |  |
| TYPICAL OPE   | RATING CO                                | NDITIONS                                   |  |  |
| For Anode No. 3 Voltage of  | 2000<br>2000<br>375 to 690<br>—30 to —90 | 3000<br>1500<br>280 to 515<br>-22.5 to -67 | 4000 Volts<br>2000 Volts<br>375 to 690 Volts<br>5 —30 to —90 Volts |  |
| Deflection Factors: D1 and D2 D3 and D4   | 62 to 84<br>54 to 74                     | 58 to 80<br>50 to 68                       | 78 to 106 D-C V/in.<br>66 to 90 D-C V/in.                          |  |
| Anode No. 1 Voltage for focus   |  | 1.5%                                       | to 4.5% to Eb2 Volts   |  |
| Deflection Factors:  No 3rd Anode or Eb3 = Eb2  D1 and D2  D3 and D4  Eb3 = Twice Eb2  D1 and D2          | 27 to 37 Vol                             | ts D-C per inch                            | per Kilovolt of Eb2  |  |
| D3 and D4   |  |  |  |  |
| MAXIMUM CIRCUIT VALUES  |  |  |  |  |
| Grid No. 1 Circuit Resistance   |  |  |  |  |

- The product of Anode No. 2 voltage and average Anode No. 2 current should be limited to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- 3. When the tube is operated at (1) normal heater voltage; (2) Eb3 = 3000 volts; (3) Eb2 = 1500 volts; (4) Eb1 adjusted for focus; (5) Ec1 set at such a value as will avoid damage to the screen; (6) with each of the deflecting electrodes connected to Anode No. 2; and (7) with the tube shielded against external influences:
  - The spot will fall within a 25 mm. square, the center of which coincides with the geometric center of the tube face and the sides of which are parallel to the traces produced by deflecting electrodes D1 and D2 and by deflecting electrodes D3 and D4 respectively.
- 4. It is recommended that the deflecting electrode circuit resistances be approximately equal.
- For optimum focus the average potentials of the deflection plates and second anode should be the same.

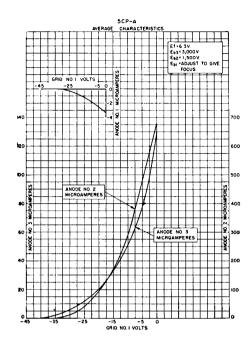

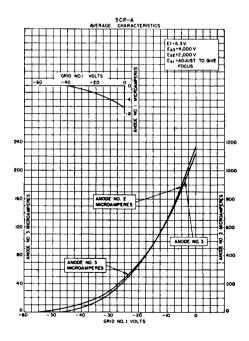

TYPE 5CP-A

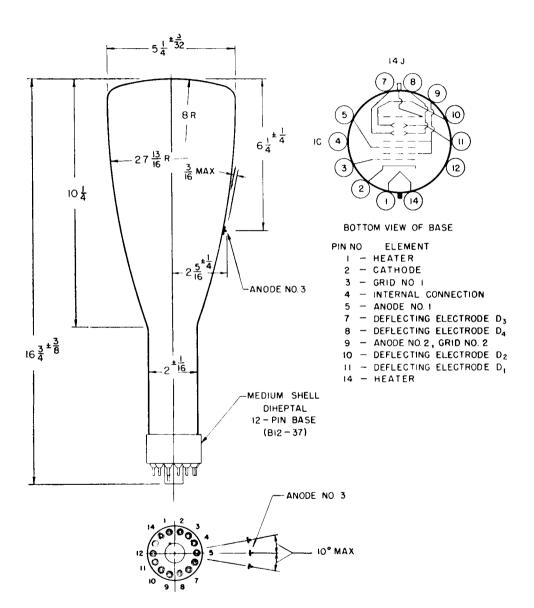

### **5FP- CATHODE-RAY TUBES**

The Types 5FP- Cathode-ray Tubes are magnetically focussed and deflected cathode-ray tubes with a relatively large and flat screen area. Primarily designed for radar indicator applications, the Type 5FP- features an electron gun with a limiting aperture to produce a sharp, round spot at high screen currents.

The Type 5FP- Cathode-ray Tubes are similar to the 7-inch 7BP-, the 10-inch 10KP-, and the 12-inch 12SP-. Selection of one of these radar-type tubes would be determined by the screen size desired and the exact electrical characteristics needed to fit the application.

### **GENERAL CHARACTERISTICS**

#### **Electrical**

| Heater Voltage Heater Current Focusing Method Deflecting Method Deflecting Angle (A |       | 0.6 ± 10 | % Ampere . Magnetic . Magnetic |  |
|---|-------|----------|--------------------------------|--|
| Phosphor  | No. 5 | No. 7    | No. 14                         |  |
| Fluorescence  | Blue  | Blue     | Blue                           |  |
| Phosphorescence   |       | Yellow   | Orange                         |  |
| Persistence   | Short | Long     | Medium-                        |  |
|   |       |          | long                           |  |
| Direct Interelectrode Capacitances, Approx.   |       |          |                                |  |
| Cathode to all other electrodes 5 uµf.  |       |          |                                |  |
| Grid No. 1 to all other electrodes 8 uuf.   |       |          |                                |  |



### Mechanical

| Overall Length                                     | 11½ ± ⅓ Inches        |
|--|-----------------------|
| Greatest Diameter of Bulb                          | 4-15/16 ± 3/32 Inches |
| Minimum Useful Screen Diameter                     | 4½ Inches             |
| Bulb Contact (Recessed Small Ball Cap)             | J1-22                 |
| Base (Medium-Shell Octal 8-Pin)                    | B8-65 or B8-11        |
| Basing   | 5AN                   |
| Bulb Contact Alignment J1-22 Contact aligns with P |                       |

### **MAXIMUM RATINGS**—(Design Center Values)


| Anode Voltage                           |                    |
|---|--------------------|
| Grid No. 2 Voltage                      | 700 Max. Volts D-C |
| Grid No. 1 Voltage                      |                    |
| Negative Bias Value                     | 180 Max. Volts D-C |
| Positive Bias Value <sup>1</sup>        | 0 Max. Volts D-C   |
| Positive Peak Value                     | 2 Max. Volts       |
| Peak Heater-Cathode Voltage             |                    |
| Heater Negative with respect to Cathode | 125 Max. Volts D-C |
| Heater Positive with respect to Cathode | 125 Max. Volts D-C |

### TYPICAL OPERATING CONDITIONS


| Anode Voltage                      | 4,000     | 7,000        | Volts D-C |
|------------------------------------|-----------|--------------|-----------|
| Grid No. 2 Voltage                 |           | 250          | Volts D-C |
| Grid No. 1 Voltage <sup>2</sup>    |           | -25  to  -70 | Volts D-C |
| Focusing Coil Current <sup>3</sup> | 75 to 102 | 99 to 135    | Ma. D-C   |
| Spot Position (Undeflected)4       | 9         |              | mm.       |

### MAXIMUM CIRCUIT VALUES

- 1. At or near this rating, the effective resistance of the anode supply should be adequate to limit the anode input power to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- 3. For JETEC standard focus coil No. 106, or equivalent, with the grid No. 1 voltage adjusted to produce an anode current of 200 microamperes and with distance (D) from reference line to center of air gap equal to 2.75 inches.
- 4. The center of the undeflected, unfocused spot will fall within a circle of 9 mm. radius concentric with the center of the tube face.

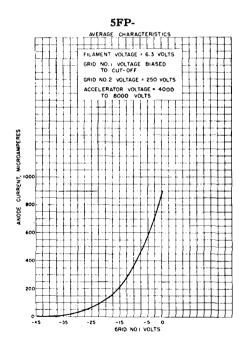

TYPE 5FP-

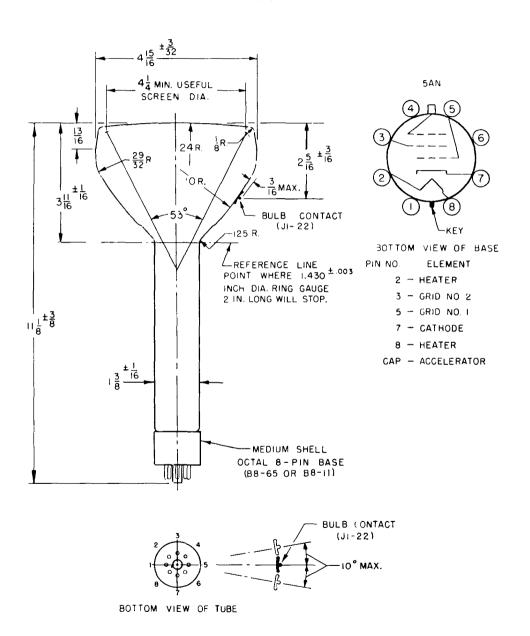

# **5JP-A CATHODE-RAY TUBES**

The Type 5JP-A Cathode-ray Tubes are designed for oscillographic applications where low deflection plate capacitances are essential. The deflection plate leads are short and direct, terminating in caps on the wall of the tube rather than in the tube base. The intensifier principle is used to provide a maximum deflection sensitivity for a given final accelerating voltage. The gun is designed to draw negligible focusing electrode current.

The four types differ only in the characteristics of the fluorescent screens. Other screen types may be obtained on special order.

### GENERAL CHARACTERISTICS

#### **Electrical**

| Heater Voltage                  |             |           |         |                   |
|---------------------------------|-------------|-----------|---------|-------------------|
| Heater Current                  |             | 0.6 =     | = 10% A | Ampere            |
| Focusing Method                 |             |           | Elect   | rostatic          |
| Deflecting Method Electrostatic |             |           |         | rostatic          |
| Phosphor                        | No. 1       | No. 2     | No. 7   | No. 11            |
| Fluorescence                    | Green       | Green     | Blue    | Blue              |
| Phosphoresceno                  | ce —        | Green     | Yellow  |                   |
| Persistence                     | Medium      | Long      | Long    | Short             |
| Direct Interelectr              | ode Capa    | citances, | Nomina  | 1                 |
| Grid No. 1 to                   | all other e | electrode | s       | 8 $\mu\mu$ f.     |
| D1 to D2                        |             |           |         | 1.5 μμf.          |
| D3 to D4                        |             |           |         |                   |
| D1 to all other                 | electrode   | s except  | D2      | 2.5 auf.          |
| D2 to all other                 | electrode   | s except  | D1      | 3 upf             |
| D3 to all other                 | electrode   | s except  | D4      | 2 5 muf.          |
| D4 to all other                 | electrode   | es except | D3      | $2.5 \mu \mu f$ . |



### Mechanical

| Overall Length   |
|--|
| Greatest Diameter of Bulb  |
| Minimum Useful Screen Diameter 4½ Inches                           |
| Bulb Contact (Anode No. 3)   |
| Bulb Contacts (Deflection Plate)                                   |
| Base Medium Magnal   |
| Basing 11S   |
| Base Alignment  D3D4 trace aligns with Pin No. 6 and tube axis     |
| Bulb Contact Alignment  Anode No. 3 contact aligns with D3D4 trace |

### MAXIMUM RATINGS—(Design Center Values)

| Anode No. 3 Voltage (Accelerator High Voltage Electrode) |      |      |       |       |
|--|------|------|-------|-------|
| Ratio Anode No. 3 Voltage to Anode No. 2 Voltage         |      |      | . 2.0 | Max.  |
| Anode No. 1 Voltage                                      | 1000 | Max. | Volts | D-C   |
| Grid No. 1 Voltage                                       |      |      |       |       |
| Negative Bias Value                                      | 125  | Max. | Volts | D-C   |
| Positive Bias Value                                      | 0    | Max. | Volts | D-C   |
| Positive Peak Value                                      |      | 2    | Max.  | Volts |
| Peak Voltage between Anode No. 2 and any                 |      |      |       |       |
| Deflection Electrode                                     |      | 500  | Max.  | Volts |

# TYPICAL OPERATING CONDITIONS 3000

4000

| For Anode No. 2 Voltage of      | 1500                                    | 2000              | Volts                  |
|---------------------------------|---|-------------------|------------------------|
| Anode No. 1 Voltage for focus   | 250 to 472                              | 333 to 630        | Volts                  |
| Grid No. 1 Voltage <sup>3</sup> | -34  to  -79                            | -45 to $-105$     | Volts                  |
| Deflection Factors:             |   |                   |                        |
| D1 and D2                       | <b>58 to 8</b> 6                        | 77 to 115         | Volts D-C per Inch     |
| D3 and D4                       | 58 to 86                                | 77 to 115         | Volts D-C per Inch     |
| Anode No. 1 Voltage for focus   |   | 2.3% t            | to 5.3% of Eb2 Volts   |
| Deflection Factors:             |   |                   |                        |
| No 3rd Anode or $Eb3 = Eb2$     |   |                   |                        |
| D1 and D2                       | 34 to 50 V                              | olts D-C per inch | per Kilovolt of Eb2    |
| D3 and D4                       | 34 to 50 V                              | olts D-C per inch | per Kilovolt of Eb2    |
| Eb3 = Twice Eb2                 |   | _                 | -                      |
| D1 and D2                       | 38 to 58 V                              | olts D-C per incl | per Kilovolt of Eb2    |
| D3 and D4                       | 38 to 58 V                              | olts D-C per inch | per Kilovolt of Eb2    |
| Spot Position (Undeflected)     | • | Within a 7.5 mil  | llimeter radius circle |

### MAXIMUM CIRCUIT VALUES

| Grid No. 1 Circuit Resistance                               | Max. | Megohms |
|---|------|---------|
| Resistance in any Deflecting Electrode Circuit <sup>5</sup> | Max. | Megohms |


#### NOTES


- 1. Anode No. 2 and Grid No. 2, which are connected together within the tube, are referred to herein as Anode No. 2.
- 2. The product of Anode No. 2 voltage and Average Anode No. 2 current should be limited to 6 watts.
- 3. Visual extinction of undeflected focused spot.

For Anode No. 3 Voltage of .....


- 4. Centered with respect to the tube face with the tube shielded.
- 5. It is recommended that the deflecting electrode circuit resistances be approximately equal.
- 6. For optimum focus the average potentials of the deflection plates and second anode should be the same.


Volts

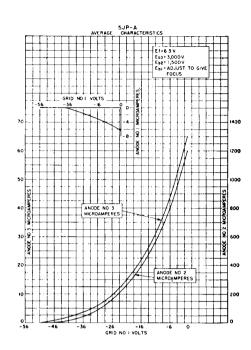

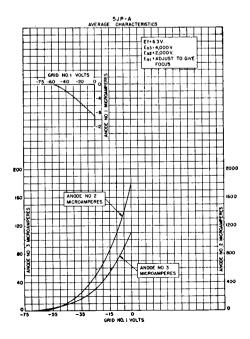

TYPE 5JP-A

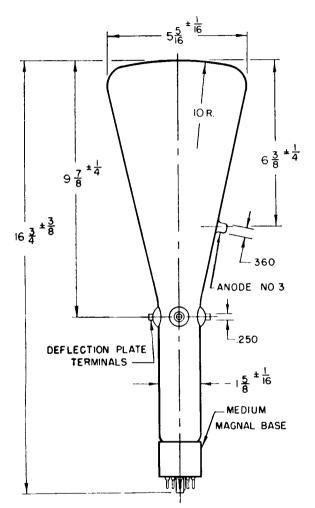

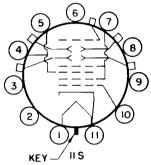

BOTTOM VIEW OF BASE

PIN NO.

ELEMENT

I - HEATER


4 - ANODE NO I

5 - INTERNAL CONNECTION

7 - ANODE NO. 2, GRID NO. 2

IO - GRID NO. I

II - HEATER & CATHODE



# **5LP-A CATHODE-RAY TUBES**

The Type 5LP-A cathode-ray tubes are designed for oscillographic applications. The intensifier principle is used to provide a maximum deflection sensitivity for a given final accelerating voltage. The gun is designed to draw negligible focusing electrode current.

The Type 5LP-A is recommended for replacement only.

### **GENERAL CHARACTERISTICS**

| Electrical         |            |           |         |                 |
|--------------------|------------|-----------|---------|-----------------|
| Heater Voltage .   |            |           | 6.      | 3 Volts         |
| Heater Current .   |            | 0.6       | ± 10% A | Ampere          |
| Focusing Method    | ,          |           | Elect   | rostatic        |
| Deflecting Metho   | dd         |           | Elect   | rostatic        |
| Phosphor           | No. 1      | No. 2     | No. 7   | No. 11          |
| Fluorescence       | Green      | Green     | Blue    | Blue            |
| Phosphoresceno     | e —        | Green     | Yellow  | -               |
| Persistence        | Medium     | Long      | Long    | Short           |
| Direct Interelectr | ode Capa   | citances, | Nomina  | 1               |
| Grid No. 1 to all  | other elec | ctrodes   |         | 9 μμf.          |
| D1 to D2           |            |           |         | 2 μμf.          |
| D3 to D4           |            |           |         | 1.5 $\mu\mu$ f. |
| D1 to all other    | electrode  | s except  | D2      | 8 μμf.          |
| D2 to all other    | electrode  | s except  | D1      | 8 μμf.          |
| D3 to all other    | electrode  | es except | D4      | 6 μμ <b>f</b> . |
| D4 to all other    | electrode  | es except | D3      | 7 µµf.          |
|                    |            |           |         |                 |



#### Mechanical

| Overall Length   | $16\frac{3}{4} \pm \frac{3}{8}$ Inches |
|--|--|
| Greatest Diameter of Bulb                              | 5-5/16 $\pm$ 1/16 Inches               |
| Minimum Useful Screen Diameter                         |  |
| Bulb Contact (Anode No. 3)                             | Small Cap (C1-1)                       |
| Base   | Medium Magnal                          |
| Basing   | 11T                                    |
| Base Alignment   |  |
| D3D4 trace aligns with Pin No. 6 and tube axis         | ± 10 Degrees                           |
| Positive voltage on D1 deflects beam approximately tow | vard Pin No. 3                         |
| Positive voltage on D3 deflects beam approximately tow |  |
| Angle between D3D4 and D1D2 traces                     | 90 ±3 Degrees                          |
| Bulb Contact Alignment:                                |  |
| Anode No. 3 Contact aligns with D3D4 trace             | ± 10 Degrees                           |
| Anode No. 3 Contact on same side as locating key.      | <u> </u>                               |
|  |  |

### MAXIMUM RATINGS—(Design Center Values)

| Anode No. 3 Voltage (Accelerator High Voltage Electrode) | 4000 Max. Volts D-C |
|--|---------------------|
| Anode No. 2 Voltage <sup>1,2</sup>                       | 2000 Max. Volts D-C |
| Ratio Anode No. 3 Voltage to Anode No. 2 Voltage         | 2 Max.              |
| Anode No. 1 Voltage                                      | 1000 Max. Volts D-C |
| Grid No. 1 Voltage                                       |                     |
| Negative Bias Value                                      | 125 Max. Volts D-C  |
|  |                     |

| Negative Bias Value 125 Max. Volts D-C |
|--|
| Positive Bias Value                    |
| Positive Peak Value                    |
| 1 77 L 1 . A 1 BT 0                    |

Peak Voltage between Anode No. 2


### TYPICAL OPERATING CONDITIONS


| For Anode No. 3 Voltage of      | 3000             | 4000       | Volts |
|---------------------------------|------------------|------------|-------|
| For Anode No. 2 Voltage of      | 1500             | 2000       | Volts |
| Anode No. 1 Voltage for focus   | 282 to 475       | 375 to 632 | Volts |
| Grid No. 1 Voltage <sup>3</sup> | -22.5 to $-67.5$ | −30 to −90 | Volts |

| Deflection Factors:             |                  |                 |                        |
|---------------------------------|------------------|-----------------|------------------------|
| D1 and D2                       | 62 to 93         | 82 to 124       | Volts D-C per Inch     |
| D3 and D4                       | 54 to 81         | 73 to 109       | Volts D-C per Inch     |
| Anode No. 1 Voltage for focus   |                  | 18.8% 1         | to 31.6% of Eb2 Volts  |
| Grid No. 1 Voltage <sup>3</sup> |                  | 1.5% 1          | to 4.5% of Eb2 Volts   |
| Anode No. 1 Current for any ope | rating condition |                 | to +10 Microamperes    |
| Deflection Factors:             |                  |                 |                        |
| No 3rd Anode or $Eb3 = Eb2$     |                  |                 |                        |
| D1 and D2                       | 33 to 51 Volt    | ts D-C per Inch | per Kilovolt of Eb2    |
| D3 and D4                       | 31 to 45 Volt    | ts D-C per Inch | per Kilovolt of Eb2    |
| Eb3 = Twice Eb2                 |                  |                 |                        |
| D1 and D2                       | 41 to 62 Volt    | ts D-C per Inch | per Kilovolt of Eb2    |
| D3 and D4                       | 36 to 54 Vol     | ts D-C per Incl | per Kilovolt of Eb2    |
| Spot Position (Undeflected)     | V                | Vithin a 10 mi  | llimeter radius circle |


#### **MAXIMUM CIRCUIT VALUES**


- 1. Anode No. 2 and Grid No. 2, which are connected together within the tube, are referred to herein as Anode No. 2.
- The product of Anode No. 2 Voltage and Average Anode No. 2 current should be limited to 6 watts.
- 3. Visual extinction of undeflected focused spot.
- 4. Centered with respect to the tube face, with the tube shielded.
- 5. It is recommended that the deflecting electrode circuit resistances be approximately equal.
- For optimum focus the average potentials of the deflection plates and second anode should be the same.

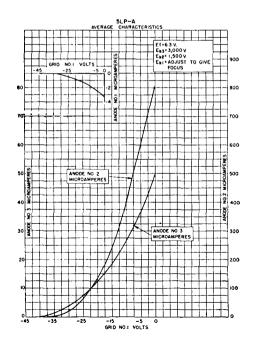

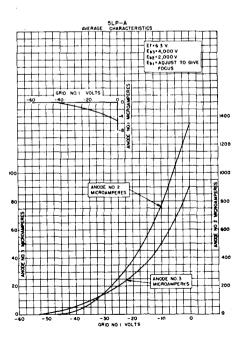

### TYPE 5LP-A

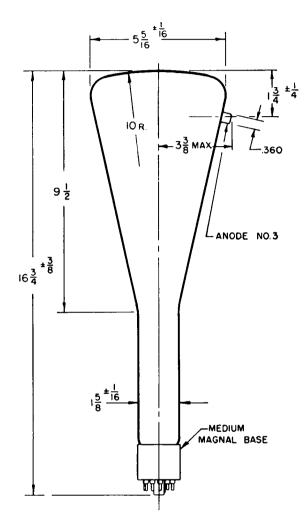

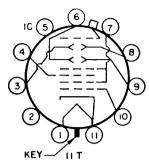


BOTTOM VIEW OF BASE

PIN NO.

ELEMENT

- 1 HEATER
- 3 DEFLECTING ELECTRODE D
- 4 ANODE NO. I
- 5 INTERNAL CONNECTION
- 6 DEFLECTING ELECTRODE D4
- 7 ANODE NO.2, GRID NO.2
- 8 DEFLECTING ELECTRODE D2
- 9 DEFLECTING ELECTRODE D3
- 10 GRID NO. I
- II HEATER & CATHODE



# **5RP-A CATHODE-RAY TUBES**

The Type 5RP-A Cathode-ray Tubes are high-voltage tubes which incorporate an intensifier subdivided into several steps. This feature permits the use of much higher overall accelerating voltages with deflection sensitivities only slightly less than heretofore obtainable in low-voltage cathode-ray tubes. Operation with intensifier to second anode voltage ratios as high as 10:1 are made possible by the multiband feature. The tube has a flat face and a cylindrical body. The deflection plate and anode connections are made through the neck of the tube instead of through the base. Low-capacity deflection plate leads facilitate high-frequency operation. The gun is designed to draw negligible focusing electrode current.

The four types differ only in the characteristics of the fluorescent screens. Other screen types may be obtained on special order.

### **GENERAL CHARACTERISTICS**

| Electrical            |         |           |        |                        |
|-----------------------|---------|-----------|--------|------------------------|
| Heater Voltage        |         |           | 6.     | 3 Volts                |
| Heater Current        |         |           |        |                        |
| Focusing Method       |         |           | Electi | rostatic               |
| Deflecting Method     |         |           | Electi | rostatic               |
| Phosphor 1            | No. 1   | No. 2     | No. 7  | No. 11                 |
| Fluorescence C        | reen    | Green     | Blue   | Blue                   |
| Phosphorescence       | _       | Green     | Yellow |                        |
| Persistence M         | edium   | Long      | Long   | Short                  |
| Direct Interelectrode | Capac   | citances, | Nomina | 1                      |
| Cathode to all oth    | er elec | trodes    |        | 5 μμf.                 |
| Grid No. 1 to all o   | ther el | lectrodes |        | <b>5</b> μμ <b>f</b> . |
| D1 to D2              |         |           |        | 2 μμ <b>f</b> .        |
| D3 to D4              |         |           |        | 2 μμ <b>f</b> .        |
| D1 to all other ele   | ctrode  | s except  | D2     | $2.5 \mu\mu f$ .       |
| D2 to all other ele   | ectrode | s except  | D1     | 2 μμ <b>f</b> .        |
| D3 to all other ele   | ctrode  | s except  | D4     | $2.5 \mu \mu f$ .      |
| D4 to all other ele   | ectrode | s except  | D3     | 2 $\mu\mu$ f.          |




| Mechanical  |                                 |
|---|---------------------------------|
| Overall Length  | 16¾ ± ¾ Inches                  |
| Greatest Diameter of Bulb   | $.5\frac{1}{4} \pm 3/32$ Inches |
| Minimum Useful Screen Diameter                                      | 4½ Inches                       |
| Bulb Contacts (Recessed Small Ball Caps)                            | J1-22                           |
| Neck Contacts (Small Ball Caps)                                     | J1-25                           |
| Base (Medium Shell Diheptal 12-Pin)                                 | B12-37                          |
| Basing  | 14P                             |
| Base Alignment  |                                 |
| D1D2 trace aligns with Pin No. 5 and tube axis                      | ± 10 Degrees                    |
| Positive voltage on D1 deflects beam approximately toward Pin No. 5 |                                 |
| Positive voltage on D3 deflects beam approximately toward Pin No. 2 |                                 |
| Angle between D3D4 and D1D2 traces                                  | 90 ±2 Degrees                   |
| Bulb Contact Alignment:   |                                 |
| J1-22 contacts align with D1D2 trace                                | ± 10 Degrees                    |
| J1-22 contacts on same side as Pin No. 5.                           |                                 |
| MAXIMUM RATINGS—(Design Center Values                               | s)                              |
| Anode No. 3 Voltage (Accelerator High Voltage Electrode) 25,        | 500 Max. Volts D-C              |
| Anode No. 2 Voltage <sup>1,2</sup>                                  | 500 Max. Volts D-C              |

| Grid No. 1 Voltage                      |   |                                  |                       |
|---|---|----------------------------------|-----------------------|
| Negative Bias Value                     |   | *************                    | 200 Max. Volts D-C    |
| Positive Bias Value                     |   |                                  | 0 Max. Volts D-C      |
| Positive Peak Value                     |   |                                  | 2 Max. Volts          |
| Peak Heater Cathode Voltage             |   |                                  |                       |
| Heater Negative with respect            | to Cathode                              | ******************************** | 125 Max. Volts D-C    |
| Heater Positive with respect t          |   |                                  |                       |
| Peak Voltage between Anode No           | o. 2 and any Defl                       | ection Electrode                 | 1,200 Max. Volts      |
| TYPICA                                  | I OPERATING                             | CONDITIONS                       |                       |
| For Anode No. 3 Voltage <sup>3</sup> of |   | 20,000                           | Volts                 |
| For Anode No. 2 Voltage of              | 2,000                                   | 2,000                            | Volts                 |
| 2                                       |   | 362 to 695                       | Volts                 |
| Grid No. 1 Voltage 101 10cus            | -30 to -90                              |                                  | Volts                 |
| Deflection Factors:                     | - 30 to - 70                            | - 30 to - 30                     | Voits                 |
| D1 and D2                               | 102 to 154                              | 140 to 210                       | Volts D-C per Inch    |
| D3 and D4                               | 97 to 145                               |                                  | Volts D-C per Inch    |
| Anode No. 1 Voltage for focus           |   |                                  | •                     |
| Grid No. 1 Voltage 101 10cus            |   |                                  |                       |
| Anode No. 1 Current for any ope         |   |                                  |                       |
| Deflection Factors:                     | nating condition                        |                                  | to +10 Microamperes   |
| No 3rd Anode or Eb3 = Eb2               |   |                                  |                       |
| D1 and D2                               | 30 to                                   | 45 Volts D.C per inc             | h per Kilovelt of Fh? |
| D3 and D4                               |   |                                  |                       |
| Eb3 = Twice Eb2                         |   | 45 Voits D-C per me              | in per Knovon or Ebz  |
| D1 and D2                               | 36 to 5                                 | 4 Valts D.C per incl             | n nor Kilovolt of Eb? |
| D3 and D4                               |   | •                                | -                     |
| Spot Position (Undeflected)             |   |                                  |                       |
| Spot Position (Onderlected)             | *************************************** | within a 10 mi                   | inneter radius circle |
| MA                                      | XIMUM CIRCL                             | JIT VALUES                       |                       |
| Grid No. 1 Circuit Resistance           |   |                                  | 1.5 Max. Megohms      |


# 


- 1. Anode No. 2 and Grid No. 2, which are connected together within the tube, are referred to herein as Anode No. 2.
- 2. The product of Anode No. 2 voltage and average Anode No. 2 current should be limited to 6 watts.
- 3. Anode No. 2 to final intensifier electrode voltage equally divided over the three intensifier electrodes.

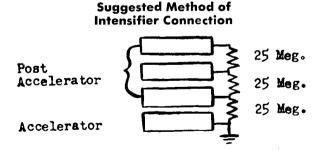


The two accelerator terminals must be connected together.

- 4. Visual extinction of undeflected focused spot.
- 5. Centered with respect to the tube face with the tube shielded.
- It is recommended that the deflecting electrode circuit resistances be approximately equal.
- For optimum focus the average potentials of the deflection plates and second anode should be the same.

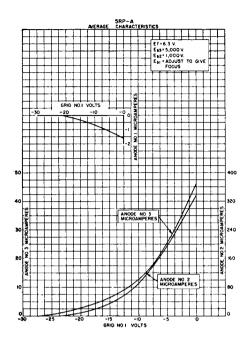

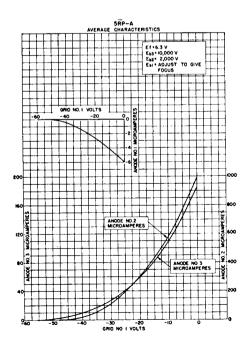

TPPE 5RP-A

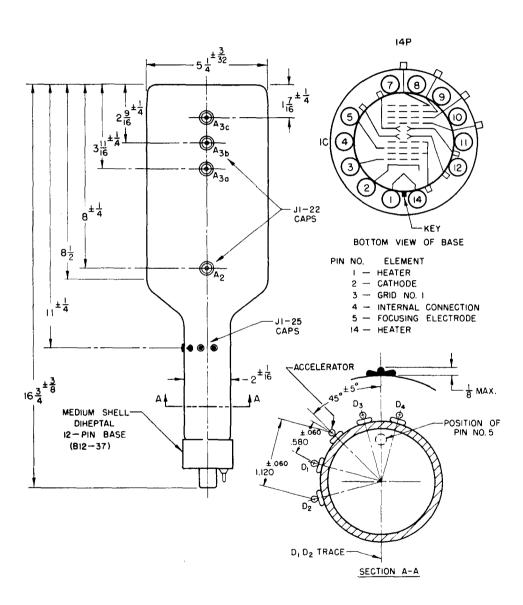

# TYPE 5SP-A CATHODE-RAY TUBES

The Du Mont Type 5SP-A is a two-beam electrostatic focus and deflection cathode-ray tube. It is identical to the Du Mont Type 5SP- with the exception of having very closely controlled tolerances. Deflection factors are held to within 10%; angle alignment is held to within 1°; and grid cut-off bias is held to within 25%.

#### GENERAL CHARACTERISTICS

### **Electrical**

| Heater Voltage<br>Heater Current<br>Focusing Method<br>Deflecting Method |           | 0.6       | ±10%<br>Elec | Am<br>tros | pere<br>tatic |
|--|-----------|-----------|--------------|------------|---------------|
| Phosphor   | No. 1     | No. 2     | No. 7        | No         | . 11          |
| Fluorescence   | Green     | Green     | Blue         | В          | lue           |
| Phosphorescence  |           |           |              |            |               |
| Persistence 1  |           |           | Long         | Sh         | ort           |
| Direct Interelectron (for each unit)                                     | ie Capa   | citances  | Min.         | M          | lax.          |
| Cathode to all other   | er electr | odes      | 2.7          | 5.0        | $\mu\mu f$ .  |
| Grid No. 1 to all o  |           |           |              | 6.5        | $\mu\mu f$ .  |
| D1 to D2   |           |           |              | 2.0        | $\mu\mu f$ .  |
| D3 to D4   |           |           |              | 2.2        | $\mu\mu f$ .  |
| D1 to all other ele  |           |           |              | 4.7        | $\mu\mu f$ .  |
| D2 to all other ele  | ectrodes  |           | 2.2          | 4.7        | $\mu\mu f$ .  |
| D3 to all other ele-   | ctrodes   |           | 2.5          | 5.1        | $\mu\mu f$ .  |
| D4 to all other ele  | ectrodes  | ********* | 2.5          | 5.1        | $\mu\mu f$ .  |



# Mechanical

| $ \begin{array}{cccccccccccccccccccccccccccccccccccc$  |
|--|
| Base Alignment: (for each unit)  |
| D3D4 trace aligns with Pin No. 4 and tube axis   |
| Positive voltage on D3 deflects beam approximately toward Pin No. 11 Angle between D3D4 and D1D2 traces                          |
| Corresponding traces of each gun are within 1 degree of each other Bulb Contact Alignment:  J1-22 contacts align with D3D4 trace |

### MAXIMUM RATINGS—Design Center Values (Values are for each unit)

| Post Accelerator Voltage    | 2,500 | Max. | Volts D-C  |
|-----------------------------|-------|------|------------|
|                             |       |      |            |
| Focusing Voltage            | 1,000 | Max. | Volts D-C  |
| Grid No. 1 Voltage          |       |      |            |
| Negative Bias Value         | . 200 | Max. | Volts D-C  |
| Positive Bias Value         |       |      |            |
| Positive Peak Value         |       | 0    | Max. Volts |
| Peak Heater Cathode Voltage |       |      |            |

| Heater Negative with respect to Cathode                       |            |          |
|---|------------|----------|
| Peak Voltage between Accelerator and any                      |            |          |
| Peak Voltage between Accelerator and any Deflection Electrode | <br>550 Ma | x. Volts |

## TYPICAL OPERATING CONDITIONS (Values are for each unit)


| For Post Accelerator Voltage of For Accelerator Voltage of Focusing Voltage Grid No. 1 Voltage <sup>2</sup> Modulation <sup>3</sup> Line Width A <sup>3</sup> | 272 to 521<br>-34 to56<br>32<br>.027 | 2,000<br>363 to 695    |  |
|---|--------------------------------------|------------------------|--|
| P1 Light Output <sup>3</sup>  | 10                                   |                        | Ft. L. Min.  |
| Deflection Factors <sup>1</sup> D1 and D2 D3 and D4 Deflection Factor Uniformity <sup>5</sup> Pattern Distortion at 75% of Useful Scan <sup>6</sup>           | $\frac{2}{2^{1/2}}$                  | 70 to 86<br>2<br>2½    | Volts D-C per Inch<br>Volts D-C per Inch<br>% Max.<br>% Max. |
| Tracking Error <sup>7</sup>   |                                      | 14 x 10 <sup>6</sup> I | nch/Volt D-C Max.  |


### CIRCUIT DESIGN VALUES

| Focusing Voltage   |
|--|
| Deflection Factors <sup>4</sup> :  Post Accelerator Voltage = Accelerator Voltage  D1 and D2 |


- 1. The product of Accelerator Voltage and Average Accelerator current should be limited to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- Measured in accordance with MIL-E-1 specifications.
   Ratio of deflection factors of corresponding sets of deflection plates (larger deflection) tion factor) divided by lower deflection factor shall not exceed 1.15.
- 5. The deflection factor (for both D1D2 and D3D4 plate pairs, separately) for any deflection of less than 75% of the useful scan\* will not differ from the deflection factor for a deflection at 25% of the useful scan\* by more than the indicated value.
- 6. The edges of a raster pattern, whose mean dimensions are the indicated percentage of useful scan\* shall not deviate from the mean dimension rectangle by more than the specified amount.
- The positions of the spot of each beam, when deflected from the center by applied voltages proportional to the deflection factor, will not deviate from each other by more than the indicated percentage of deflection.
- 8. The deflection of one beam when balanced D-C voltages are applied to the deflection electrodes of the other beam will not be greater than the indicated value.
- 9. When the tube is operated at typical operating conditions (Eh = 6.3 V., Eb 3 =3000 V., Eb2 = 1500 V., Eb1 at focus); Ecl adjusted to avoid damage to the screen; with each of the deflecting electrodes connected to the accelerator; and with the tube shielded against external influences, both spots will fall within a 5/16-inch radius circle centered on the tube face.
  - Under stable operating conditions, the position of either spot will not shift with changes in intensity by more than .025-inch.
- 10. It is recommended that the deflecting electrode circuit resistances be approximately equal.

<sup>\*</sup> Useful scan is equal to the useful screen diameter.

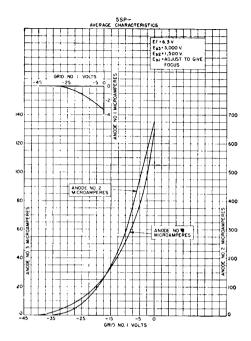

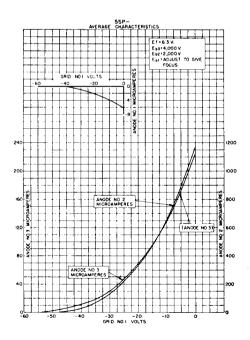

TYPE 5SP-A

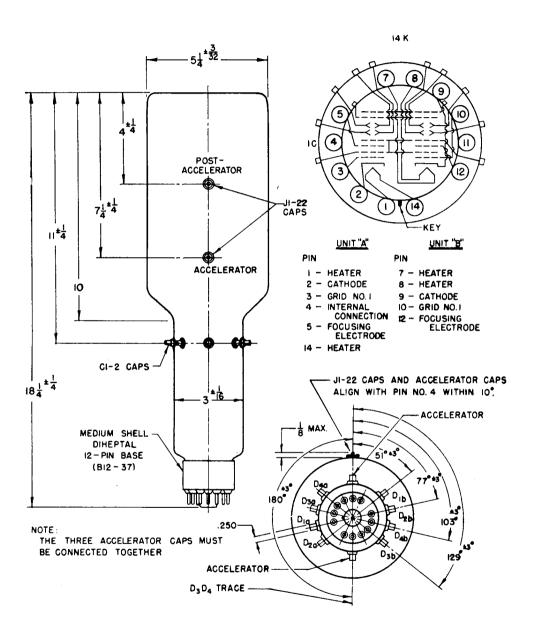

## **5XP-A CATHODE-RAY TUBES**

The Types 5XP-A Cathode-ray Tubes are tight-tolerance, electrostatically focused and deflected cathode-ray tubes containing very high sensitivity D3D4 deflection plates and an intensifier sub-divided into several steps for operation at high voltages and at high ratios of intensifier to second anode voltage.

High D3D4 sensitivity is achieved by using long deflection plates and limiting the D3D4 scan to a useful portion of the full screen diameter. Capacitances are low, being comparable to other types such as the 5JP-A and 5RP-A where deflection connections are made through the neck instead of the base.

Manufacturing tolerances have been reduced considerably in the Type 5XP-A. Deflection factors are held to within 10%, and the angle alignment between the D1D2 and D3D4 traces is held to within 1°. Grid cut-off tolerance has been halved to 25%.

Although the Type 5XP-A Cathode ray Tubes are particularly useful for wide-band oscillographs, they are suitable for any application requiring high precision, high D3D4 deflection plate sensitivity, and the high writing rate capabilities of multi-band tubes.

#### GENERAL CHARACTERISTICS

#### Electrical

| Heater Voltage<br>Heater Current<br>Focusing Method | (           | $0.6 \pm 10\%$ | % Ampere            |
|---|-------------|----------------|---------------------|
| Deflecting Method .                                 |             |                |                     |
| Phosphor  |             |                | No. 11              |
| Fluorescence  |             | Green          | Blue                |
| Phosphorescence                                     |             | Green          |                     |
| Persistence   | Medium      | Long           | Short               |
| Direct Interelectrode                               | Capacitano  | ces            |                     |
|   |             | M              | in. Max.            |
| Cathode to all other                                | electrodes  | 3.1            | 5.8 $\mu\mu$ f.     |
| Grid No. 1 to all oth                               | er electrod | es3.3          | $6.2 \mu \mu f$ .   |
| D1 to D2  |             | 1.0            | $2.0  \mu \mu f.$   |
| D3 to D4  |             | 1.0            | $2.0 \mu\mu f$ .    |
| D1 to all other electr                              | odes excep  | t D21.4        | $2.8 \mu\mu f.$     |
| D2 to all other electr                              | odes excep  | t D11.4        | $2.8 \mu\mu f$ .    |
| D3 to all other electr                              | odes excep  | t D41.1        | $2.3 \mu\mu f$ .    |
| D4 to all other electr                              | rodes excep | t D31.1        | $1  2.3  \mu\mu f.$ |
| Mechanical  |             |                |                     |




| Mechanical  |            |
|---|------------|
| Overall Length  | 1/4 Inches |
| Greatest Diameter of Bulb   | 32 Inches  |
| Minimum Useful Screen Diameter 4                                    | 1/4 Inches |
| Bulb Contacts (Recessed Small Ball Caps)                            | J1-22      |
| Neck Contacts (Small Ball Caps)                                     | J1-25      |
| Base (Medium Shell Diheptal 12-Pin)                                 | B12-37     |
| Basing  | 14P        |
| Base Alignment:   |            |
| D1D2 trace aligns with Pin No. 5 and tube axis ±1                   | 0 Degrees  |
| Positive voltage on D1 deflects beam approximately toward Pin No. 5 | _          |

| Positive voltage on D3 deflects beam approximately toward Pi       | n No. 2                                   |
|--|---|
| Angle between D3D4 and D1D2 traces                                 |   |
| Bulb Contact Alignment:  | _   |
| J1-22 contacts align with D1D2 trace                               | ± 10 Degrees                              |
| J1-22 contacts on same side as Pin No. 5                           | _   |
| MAXIMUM RATINGS—(Design Center                                     | Values)                                   |
| Post Accelerator Voltage   |   |
| Accelerator Voltage  | 3.650 Max. Volts D-C                      |
| Ratio Post Accelerator Voltage to Accelerator Voltage <sup>2</sup> | 10 May                                    |
| Focusing Voltage   |   |
| Grid No. 1 Voltage   | 1,550 Wax. Voits D-C                      |
| Negative Bias Value  | 200 May Volts D.C                         |
| Positive Bias Value  |   |
| Positive Peak Value  |   |
| Peak Heater Cathode Voltage  | O Wax. Voits                              |
| Heater Negative with respect to Cathode                            | 180 May Volta D.C                         |
| Heater Positive with respect to Cathode                            |   |
| Peak Voltage between Accelerator and any Deflection Electrode      |   |
| Peak Voltage between Accelerator and any Deflection Electrode      | 1,200 Wax. Voits                          |
| TYPICAL OPERATING CONDITION  |   |
| For Post Accelerator Voltage <sup>3</sup> of                       | 12,000 Volts                              |
| For Accelerator Voltage of   | 2,000 Volts                               |
| Focusing Voltage   | 362 to 695 Volts                          |
| Grid No. 1 Voltage'  | 45 to -75 Volts                           |
| Modulation <sup>5</sup>  | 52 Volts Max.                             |
| Line Width A <sup>5</sup>  |   |
| P1 Light Output <sup>3</sup> (at Ib3 = 10 ua.)                     | 20 Ft. L. Min.                            |
| Deflection Factors:  |   |
| D1 and D2  | 0 to 159 Volts D-C per Inch               |
| D3 and D4  |   |
| Deflection Factor Uniformity <sup>6</sup>                          | 5% Maximum                                |
| Useful Scan <sup>7</sup>   |   |
| D1 and D2  | 4.25 Inches*                              |
| D3 and D4  | 1.60 Inches**                             |
| Pattern Distortion at 75% of Useful Scan <sup>2.8</sup>            | 2% Maximum                                |
| Frequency for 10% reduction in D3D4 deflection                     |   |
| amplitude due to transit time <sup>10</sup>                        | 200 mc.                                   |
| Spot Position (Undeflected) Within                                 | n a 5/16-inch radius circle <sup>11</sup> |
| CIRCUIT DESIGN VALUES  |   |
| Focusing Voltage 181 to 348 Volts per Kilo                         | volt of Accelerator Voltage               |
| Focusing Current for any operating condition                       | -15 to +10 Microamperes                   |
| Grid No. 1 Voltage <sup>4</sup>                                    | volt of Accelerator Voltage               |
| Grid No. 1 Circuit Resistance                                      |   |
| Deflection Factors   | _   |
| Post Accelerator Voltage = Accelerator Voltage                     |   |
| D1 and D2 38 to 46 Voits D-C/Inch/                                 | KV of Accelerator Voltage                 |
| D3 and D4  | KV of Accelerator Voltage                 |
| Resistance in any Deflecting Electrode Circuit <sup>12</sup>       | 5 Max. Megohms                            |
| * $\pm$ 2.125" minimum from tube face center.                      |   |
| ** ± .8" minimum from tube face center.                            |   |
| N. 0 =   |   |

- The product of Accelerator Voltage and average Accelerator Current should be limited to 6 watts.
- It is recommended that Post Accelerator to Accelerator Voltage ratio be not more than 6 to 1 in applications where minimum pattern distortion is required.
- 3. Accelerator to final intensifier electrode voltage equally divided over the three intensifier electrodes.


## Suggested Method of Intensifier Connection

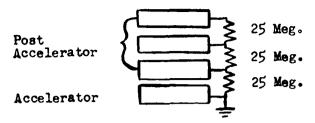


The two accelerator terminals must be connected together.


- 4. Visual extinction of undeflected focused spot.
- 5. Measured in accordance with MIL-E-1 specifications at Ib3  $\pm$  25 ua.
- 6. The deflection factor (for both D1D2 and D3D4 plate pairs, separately) for a deflection of less than 75% of the useful scan will not differ from the deflection factor for a deflection at 25% of the useful scan by more than the indicated value.
- 7. Reduction in useful scan when Post Accelerator voltage is greater than Accelerator voltage is determined by the ratio of these voltages measured with respect to cathode. Values shown are therefore applicable to any operating condition with the same voltage ratios.
- 8. All portions of a raster pattern, adjusted so its widest points just touch the sides of a 1.275 x 3.060-inch rectangle, will fall within the area bounded by the 1.275 x 3.060-inch rectangle and an inscribed 1.225 x 2.940-inch rectangle.
- 9. Deflection accuracy may be obtained by combining angle between traces, deflection factor uniformity and pattern distortion characteristics. In general, for deflections less than those indicated the accuracy will improve.
- 10. Computed.
- 11. When the tube is operated at typical operating conditions (Eh = 6.3 V., Eb3 = 12,000 V., Eb2 = 2,000 V., Eb1 at focus); with Ec1 adjusted to avoid damage to the screen; with each of the deflecting electrodes connected to the accelerator; and with the tube shielded against external influences, the spot will fall within a 5/16-inch radius circle, centered on the tube face.
  - Under stable operating conditions, the position of the spot will not shift with changes in intensity by more than .025 inch.
- 12. It is recommended that the deflecting electrode circuit resistances be approximately equal.
- 13. For optimum focus the average potentials of the deflection plates and second anode should be the same.

## 5XP1-A, 5XP2-A, 5XP11-A

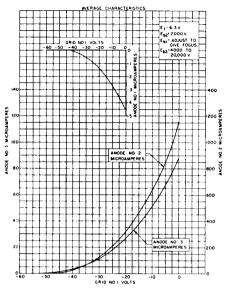

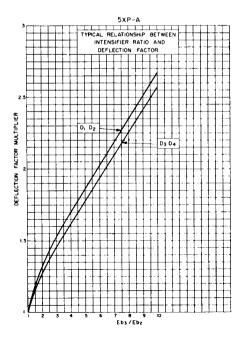

TYPE 5XP-A

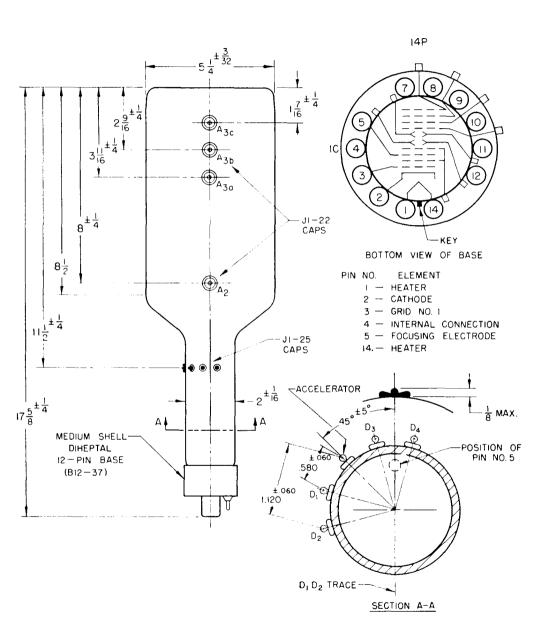

## **5XP-B CATHODE-RAY TUBES**

The Types 5XP-B Cathode-ray Tubes are identical to the Types 5XP-A Cathode-ray Tubes, except for the addition of a metallized screen.


In the study of high frequency signals of low repetition rates, or single transients, the use of a metallized screen is a significant advantage. Metallization increases the light output of the screen, which is very desirable in these high frequency applications, and also prevents the building up of spurious charges on the screen by successive transients. Under some circumstances, these spurious charges may distort succeeding transients.

Film-fogging, a problem encountered when photo-recording with high-speed cameras, is also minimized by metallization. This fogging, partly caused by cathode glow passing through an unmetallized screen, may occur when the shutter is held open for a time, awaiting a single transient. In the Type 5XP-B Cathode-ray Tube, cathode glow cannot be transmitted through the metallized layer, thereby eliminating film fogging from this cause.

#### **GENERAL CHARACTERISTICS**

#### **Electrical**

| Heater Voltage         |             |  | . 6.3 Volts |            |           |                                 |                   |
|------------------------|-------------|--|-------------|------------|-----------|---------------------------------|-------------------|
| Heater Current         | (           | $0.6 \pm 109$  | % Ampere    |            |           |                                 |                   |
| Focusing Method        |             | Ele  | ectrostatic |            |           |                                 |                   |
| Deflecting Method      |             | Ele  | ectrostatic |            |           |                                 |                   |
| Phosphor               | No. 1       | No. 2  | No. 11      |            |           |                                 |                   |
| Fluorescence           | Green       | Green  | Blue        |            |           |                                 |                   |
| Phosphorescence        |             | Green  |             |            |           |                                 |                   |
| Persistence            | Medium      | Long   | Short       |            |           |                                 |                   |
| Direct Interelectrode  | Capacitar   | nces   |             |            |           | Min.                            | Max               |
| Cathode to all other   |             |  |             |            |           |                                 | 5.8 $\mu\mu$ f.   |
| Grid No. 1 to all ot   | her electro | des  |             |            |           | 3.3                             | 6.2 $\mu\mu$ f.   |
| D1 to D2               |             | *****  |             |            |           | 1.0                             | $2.0 \mu \mu f$ . |
| D3 to D4               |             |  |             |            |           | 1.0                             | $2.0 \mu \mu f$ . |
| D1 to all other elect  | trodes exce | ept D2.  |             |            |           | 1.4                             | $2.8 \mu \mu f$ . |
| D2 to all other electr | odes excep  | t D1   |             |            |           | 1.4                             | $2.8 \mu \mu f$ . |
| D3 to all other elect  |             | A 100 St. 10 St. |             |            |           |                                 | $2.3 \mu \mu f$ . |
| D4 to all other elect  | rodes excep | pt D3  |             |            |           | 1.1                             | $2.3 \mu\mu f$ .  |
| Mechanical             |             |  |             |            |           |                                 |                   |
| Overall Length         |             |  |             |            |           | 175/8 ± 1/                      | 4 Inches          |
| Greatest Diameter of   | Bulb        |  |             |            |           | $.5\frac{1}{4} \pm \frac{3}{3}$ | 2 Inches          |
| Minimum Useful Screen  | een Diame   | ter  |             |            |           | 41/                             | 4 Inches          |
| Bulb Contacts (Reces   | ssed Small  | Ball Cap   | os)         |            |           |                                 | J1-22             |
| Neck Contacts (Small   | l Ball Caps | s)   | •••••       |            |           |                                 | J1-25             |
| Base (Medium Shell     | Diheptal 1  | 12-Pin) .  |             |            |           |                                 | B12-37            |
| Basing                 |             |  |             |            |           |                                 | 14P               |
| Base Alignment:        |             |  |             |            |           |                                 |                   |
| D1D2 trace aligns      | with Pin N  | lo. 5 and  | tube axis   |            |           | ± 10                            | Degrees           |
| Positive voltage on    | D1 deflect  | s beam a   | pproximat   | ely toward | Pin No. 5 |                                 |                   |
| Positive voltage on    | D3 deflect  | s beam a   | pproximat   | ely toward | Pin No. 2 |                                 |                   |
| Angle between D3I      | D4 and D11  | D2 traces  |             |            |           | $90 \pm 1$                      | Degrees           |
| Bulb Contact Alignme   | ent:        |  |             |            |           |                                 |                   |
| J1-22 contacts align   | n with D1I  | D2 trace   |             |            |           | ± 10                            | Degrees           |
| J1-22 contacts on s    |             |  |             |            |           |                                 |                   |
|                        |             |  |             |            |           |                                 |                   |

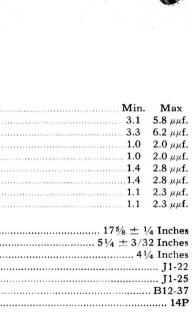

## **MAXIMUM RATINGS—(Design Center Values)**

| Post Accelerator Voltage   | 25,500 Max. Volts D-C<br>5,000 Min. Volts D-C |
|--|---|
| Accelerator Voltage <sup>1</sup>                                   | 3,650 Max. Volts D-C                          |
| Ratio Post Accelerator Voltage to Accelerator Voltage <sup>2</sup> | 10 Max.                                       |
| Focusing Voltage   | 1,550 Max. Volts D-C                          |
| Grid No. 1 Voltage   |   |
| Negative Bias Value  | 200 Max. Volts D-C                            |
| Positive Bias Value  | 0 Max. Volts D-C                              |
| Positive Peak Value  | 0 Max. Volts                                  |
| Peak Heater Cathode Voltage  |   |
| Heater Negative with respect to Cathode                            | 180 Max. Volts D-C                            |
| Heater Positive with respect to Cathode                            | 180 Max. Volts D-C                            |
| Peak Voltage between Accelerator and any Deflection Electrode      | 1,200 Max. Volts                              |
|  |   |

## TYPICAL OPERATING CONDITIONS


| 77 1 3 6   | 10.000 77-14-                               |
|--|---|
| For Post Accelerator Voltage <sup>3</sup> of             |   |
| For Accelerator Voltage of                               | 2,000 Volts                                 |
| Focusing Voltage   | 362 to 695 Volts                            |
| Grid No. 1 Voltage <sup>4</sup>                          | —45 to —75 Volts                            |
| Modulation <sup>5</sup>                                  |   |
| Line Width A <sup>5</sup>                                |   |
| P1 Light Output <sup>5</sup> (at Ib3 = 10 ua.)           | 40 Ft. L. Min.                              |
| Deflection Factors:                                      |   |
| D1 and D2  | . 130 to 159 Volts D-C per Inch             |
| D3 and D4  | 42 to 52 Volts D-C per Inch                 |
| Deflection Factor Uniformity <sup>6</sup>                | 5% Maximum                                  |
| Useful Scan <sup>7</sup>                                 |   |
| D1 and D2  |   |
| D3 and D4  | 1.60 Inches**                               |
| Pattern Distortion at 75% of Useful Scan <sup>2,8</sup>  |   |
| Frequency for 10% reduction in D3D4 deflection amplitude |   |
| due to transit time <sup>10</sup>                        |   |
| Spot Position (Undeflected) Wit                          | hin a 5/16-inch radius circle <sup>11</sup> |

## **CIRCUIT DESIGN VALUES**

| Focusing Voltage   |
|--|
| Focusing Current for any operating condition                 |
| Grid No. 1 Voltage   |
| Grid No. 1 Circuit Resistance                                |
| Deflection Factors   |
| Post Accelerator Voltage = Accelerator Voltage               |
| D1 and D2 38 to 46 Volts D-C/Inch/KV of Accelerator Voltage  |
| D3 and D4 12 to 15 Volts D-C/Inch/KV of Accelerator Voltage  |
| Resistance in any Deflecting Electrode Circuit <sup>12</sup> |
| $*\pm2.125"$ minimum from tube face center                   |
| ** ± .8" minimum from tube face center                       |

- 1. The product of Accelerator Voltage and average Accelerator Current should be limited to 6 watts.
- 2. It is recommended that Post Accelerator to Accelerator Voltage ratio be not more than 6 to 1 in applications where minimum pattern distortion is required.
- Accelerator to final intensifier electrode voltage equally divided over the three intensifier electrodes.


# Suggested Method of Intensifier Connection

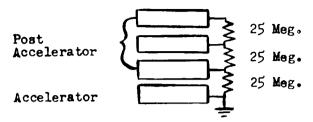

The two accelerator terminals must be connected together.


- 4. Visual extinction of undeflected focused spot.
- 5. Measured in accordance with MIL-E-1 specifications at Ib3 = 25 ua.
- 6. The deflection factor (for both D1D2 and D3D4 plate pairs, separately) for a deflection of less than 75% of the useful scan will not differ from the deflection factor for a deflection at 25% of the useful scan by more than the indicated value.
- 7. Reduction in useful scan when Post Accelerator voltage is greater than Accelerator voltage is determined by the ratio of these voltages measured with respect to cathode. Values shown are therefore applicable to any operating condition with the same voltage ratios.
- 8. All portions of a raster pattern, adjusted so its widest points just touch the sides of a 1.275 x 3.060-inch rectangle, will fall within the area bounded by the 1.275 x 3.060-inch rectangle and an inscribed 1.225 x 2.940-inch rectangle.
- Deflection accuracy may be obtained by combining angle between traces, deflection factor uniformity and pattern distortion characteristics. In general, for deflections less than those indicated the accuracy will improve.
- 10. Computed.
- 11. When the tube is operated at typical operating conditions (Eh = 6.3 V., Eb3 = 12,000 V., Eb2 = 2,000 V., Eb1 at focus); with Ec1 adjusted to avoid damage to the screen; with each of the deflecting electrodes connected to the accelerator; and with the tube shielded against external influences, the spot will fall within a 5/16-inch radius circle, centered on the tube face.
  - Under stable operating conditions, the position of the spot will not shift with changes in intensity by more than .025 inch.
- 12. It is recommended that the deflecting electrode circuit resistances be approximately equal.
- For optimum focus the average potentials of the deflection plates and second anode should be the same.

## 5XP1-B, 5XP2-B, 5XP11-B

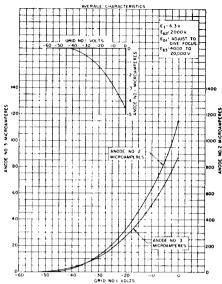


#### 5XP-B AND

5XP-A

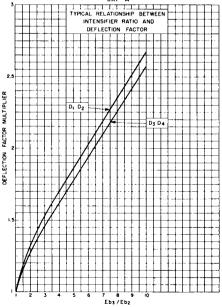

TYPE 5XP-B

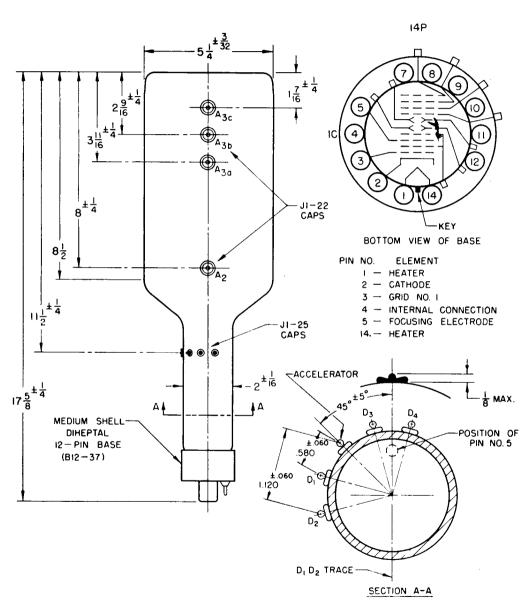

## **5YP- CATHODE-RAY TUBES**

The Type 5YP- is an electrostatic focus and deflection cathode-ray tube, with very high sensitivity D3D4 deflection plates, featuring an intensifier for increased brightness and writing rate, with a minimum loss in deflection sensitivity.

The high D3D4 sensitivity is achieved by using long deflection plates and limiting the D3D4 scan to a useful portion of the full screen diameter. Capacitances are low, being comparable to other types such as the 5JP-A and 5RP-A, where deflection connections are made through the neck instead of the base.

The 5YP- is particularly useful for wide band oscillographs and for any application requiring high D3D4 deflection plate sensitivity.

## **GENERAL CHARACTERISTICS**

#### Flectrical

| Lictificat         |             |           |              |                   |
|--------------------|-------------|-----------|--------------|-------------------|
| Heater Voltage .   |             |           | 6.           | 3 Volts           |
| Heater Current .   |             | 0.6       | $\pm 10\% A$ | Ampere            |
| Focusing Method    |             |           | Elect:       | rostatic          |
| Deflecting Metho   | od b        |           | Elect        | rostatic          |
| Phosphor           | No. 1       | No. 2     | No. 7        | No. 11            |
| Fluorescence       | Green       | Green     | Blue         | $\mathbf{Blue}$   |
| Phosphorescend     | :e —        | Green     | Yellow       |                   |
| Persistence        | Medium      | Long      | Long         | Short             |
| Direct Interelectr | ode Capac   | citances, | Approx.      |                   |
| Cathode to all oth | ner electro | des       |              | 5 μμf.            |
| Grid No. 1 to all  | other elec  | ctrodes . |              | 5 $\mu\mu$ f.     |
| D1 to D2           |             |           |              | 2 $\mu\mu f$ .    |
| D3 to D4           |             |           |              | 2 μμ <b>f</b> .   |
| D1 to all other el | lectrodes e | except D  | 2            | $2.5 \mu \mu f$ . |
| D2 to all other el | lectrodes e | except D  | 1            | $2.5 \mu \mu f$ . |
| D3 to all other e  | lectrodes   | except I  | )4           | 2 $\mu\mu$ f.     |
| D4 to all other e  | lectrodes   | except I  | 03           | 2 μμf.            |
|                    |             |           |              |                   |



### Mechanical

| Overall Length  | $17\frac{5}{8} \pm \frac{3}{8}$ Inches |
|---|--|
| Greatest Diameter of Bulb   | $5\frac{1}{4} \pm \frac{3}{32}$ Inches |
| Minimum Useful Screen Diameter                                      | 4½ Inches                              |
| Bulb Contact (Recessed Small Ball Cap)                              | J1-22                                  |
| Neck Contacts (Small Ball Caps)                                     | J1-25                                  |
| Base (Medium Shell Diheptal 12-Pin)                                 |  |
| Basing  | 14Q                                    |
| Base Alignment:   |  |
| D1D2 trace aligns with Pin No. 5 and tube axis                      | ± 10 Degrees                           |
| Positive voltage on D1 deflects beam approximately toward Pin No. 5 |  |
| Positive voltage on D3 deflects beam approximately toward Pin No. 2 |  |
| Angle between D3D4 and D1D2 traces                                  | 90 ± 2 Degrees                         |
| Bulb Contact Alignment:   | _                                      |
| J1-22 contact aligns with D1D2 trace                                | ± 10 Degrees                           |
| J1-22 contact on same side as Pin No. 5                             | ,                                      |

## MAXIMUM RATINGS—(Design Center Values)

| Post Accelerator Voltage                              | 8,000 Max. Volts D-C |
|---|----------------------|
| Accelerator Voltage <sup>1</sup>                      | 3.500 Max. Volts D-C |
| Ratio Post Accelerator Voltage to Accelerator Voltage | 2.3 Max.             |
| Focusing Voltage                                      | 1.550 Max. Volts D-C |

| Grid No. 1 Voltage                   |  |
|--------------------------------------|--|
|                                      |  |
| Positive Bias Value                  | 0 Max. Volts D-C                                     |
| Positive Peak Value                  | 0 Max. Volts   |
| Peak Heater Cathode Voltage          |  |
| Heater Negative with respect to C    | Cathode 180 Max. Volts D-C                           |
| Heater Positive with respect to Ca   | athode 180 Max. Volts D-C                            |
| Peak Voltage between Accelerator and | 1 any  |
| Deflection Electrode                 | 1,200 Max. Volts                                     |
|                                      |  |
| TYPICAL O                            | PERATING CONDITIONS                                  |
| For Post Accelerator Voltage of      | 4,000 Volts  |
| For Accelerator Voltage of           | 2,000 Volts  |
| Focusing Voltage                     |  |
| Grid No. 1 Voltage <sup>2</sup>      |  |
| Modulation <sup>3</sup>              | 52 Volts Max.  |
| Line Width A <sup>3</sup>            |  |
| P1 Light Output <sup>3</sup>         |  |
| Deflection Factors:                  |  |
|                                      |  |
| D3 and D4                            |  |
| Deflection Factor Uniformity         |  |
| Useful Scan <sup>5</sup> :           |  |
| D1 and D2                            | 4.25 ( $\pm 2.125$ from tube face center) Inches     |
| D3 and D4                            |  |
|                                      | scan <sup>6</sup>                                    |
| Frequency for 10% reduction in D3D   | 04 deflection amplitude                              |
| due to transit time <sup>7</sup>     | 200 mc.  |
| Spot Position (Focused and Undefle   | cted) Within a 5/16-inch radius circle®              |
| CIRCI                                | IIT DESIGN VALUES                                    |
|                                      |  |
| Focusing Voltage                     | 181 to 348 Volts per Kilovolt of Accelerator Voltage |


| Focusing Voltage                                     | /oltage |
|--|---------|
| Focusing Current for any operating condition         | mperes  |
| Grid No. 1 Voltage <sup>2</sup>                      | /oltage |
| Grid No. 1 Circuit Resistance                        | gohms   |
| Deflection Factors:                                  |         |
| Post Accelerator Voltage = Accelerator Voltage       |         |
| D1 and D230 to 45 Volts D-C/Inch/KV of Accelerator V | √oltage |

## NOTES


- The product of accelerator voltage and average accelerator current should be limited to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- Measured in accordance with JAN-1A Specifications at a post accelerator current of 25 ua.
- 4. The deflection factor (for both D1D2 and D3D4 plate pairs, separately) for a deflection of less than 75% of the useful scan will not differ from the deflection factor for a deflection at 25% of the useful scan by more than the indicated value.
- 5. Reduction in useful scan when post accelerator voltage is greater than accelerator voltage is determined by the ratio of these voltages measured with respect to cathode. Values shown are therefore applicable to any operating condition with the same voltage ratios.
- The edges of a raster pattern, whose mean dimensions are the indicated percentage
  of useful scan, shall not deviate from the mean dimension rectangle by more than
  the specified amount.
- 7. Computed.

- 8. Deflection accuracy may be obtained by combining angle between traces, deflection factor uniformity and pattern distortion characteristics. In general, for deflections less than those indicated, the accuracy will improve.
- 9. Centered with respect to the tube face with the tube shielded.
- It is recommended that the deflecting electrode circuit resistances be approximately
  equal.
- For optimum focus the average potentials of the deflection plates and second anode should be the same.



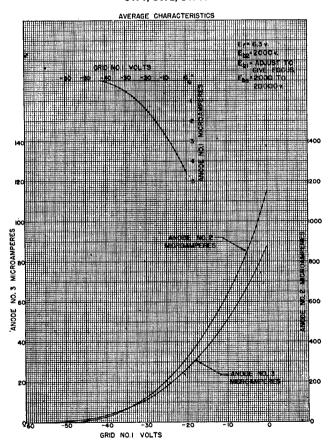

TYPE 5YP-

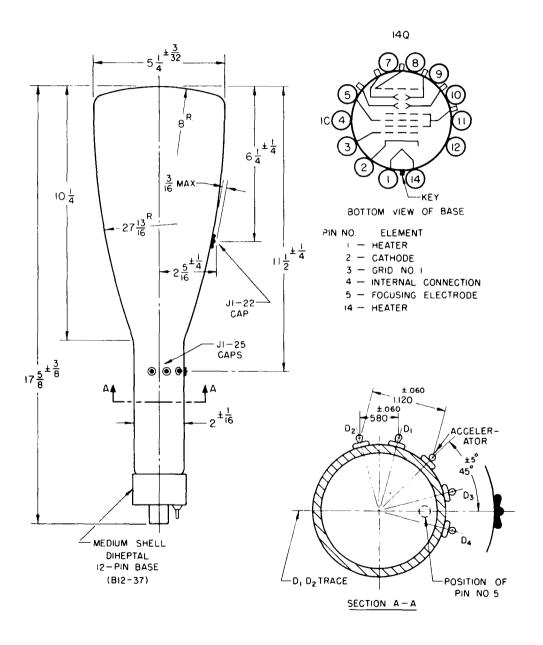

## TYPE 7ABP-, 7ABP-A CATHODE-RAY TUBES

The Type 7ABP- Cathode-ray Tube is electrostatically focused and magnetically deflected and employs a high-resolution electron-gun. The Type 7ABP- is designed for radar systems requiring good resolution and high-brightness displays. Three long persistence screens, the P7, P14 and P19 screens, are recommended for use with the Type 7ABP-.

To afford substantially automatic focus independent of accelerator voltage variations, a low-voltage electrostatic lens is supplied which is designed to be operated at or near the potential of the cathode. This feature eliminates the necessity for a front panel focus control in equipment design.

The Type 7ABP-A utilizes an aluminized screen for greater light output and to minimize screen charging effects; it is otherwise identical to the 7ABP-. If a P19 screen is selected, the aluminized version should be used.

#### GENERAL CHARACTERISTICS

#### Electrical

| $ \begin{array}{llllllllllllllllllllllllllllllllllll$                      |                                 |   |                                    |  |
|--|---------------------------------|---|------------------------------------|--|
| Phosphor<br>Fluorescence<br>Phosphorescence<br>Persistence                 | No. 7<br>Blue<br>Yellow<br>Long | No. 14<br>Blue<br>Orange<br>Medium-long | No .19<br>Orange<br>Orange<br>Long |  |
| Direct Interelectric Capacitances, Approx. Cathode to all other electrodes |                                 |   |                                    |  |



#### Mechanical

| Overall Length                                      | $4 \pm \frac{1}{4}$ Inches |
|---|----------------------------|
| Greatest Diameter of Bulb                           | $6 \pm \frac{1}{8}$ Inches |
| Minimum Useful Screen Diameter                      | 6 Inches                   |
| Bulb Contact (Recessed Small Cavity Cap)            | J1-21                      |
| Base (Small Shell Duodecal 6-Pin)                   | B6-63                      |
| Basing  | 12 <b>M</b>                |
| Bulb Contact Alignment                              |                            |
| II-21 Contact aligns with vecant pin position No. 3 | +10 Degrees                |

#### MAXIMUM RATINGS-(Design Center Values)

| maximum karintus (2031gii comoi values) |
|---|
| Accelerator Voltage                     |
| Focusing Electrode Voltage              |
| Grid No. 2 Voltage                      |
| Grid No. 1 Voltage                      |
| Negative Bias Value                     |
| Positive Bias Value 0 Max. Volts D-C    |
| Positive Peak Value                     |
| Peak Heater-Cathode Voltage             |
| Heater Negative with respect to cathode |
| Heater Positive with respect to cathode |


### TYPICAL OPERATING CONDITIONS

| Accelerator Voltage <sup>2</sup>        | 7,000                      | Volts D-C    |
|---|----------------------------|--------------|
| Focusing Electrode Voltage <sup>3</sup> | 0 to 250                   | Volts D-C    |
| Focusing Electrode Current              | -15 to $+15$               | $\mu A. D-C$ |
| Grid No. 2 Voltage                      | 300                        | Volts D-C    |
| Grid No. 1 Voltage                      | <b>−</b> 28 to <b>−</b> 72 | Volts D-C    |
| Line Width A <sup>5</sup>               | .012                       | Inch Max.    |
| Spot Position (undeflected)             | 3/8                        | Inch         |
| Alignment Magnet Field Strength         | 0-4                        | Gausses      |

#### **MAXIMUM CIRCUIT VALUES**

| Grid No. 1 | Circuit | Resistance |  | 1.5 | Max. | Megohms |
|------------|---------|------------|--|-----|------|---------|
|------------|---------|------------|--|-----|------|---------|

- At or near this rating, the effective resistance of the accelerator supply should be adequate to limit the accelerator input power to 6 watts. The screen of the 7ABP19 can be permanently damaged should the current density be permitted to rise too high. To prevent burning, minimum beam current densities should be employed.
- 2. Brilliance and definition decrease with decreasing accelerator voltage. In general, accelerator voltage should not be less than 5,000 volts, except for the 7ABP19. For this type, the accelerator voltage should not be less than 7,000 volts.
- 3. With Grid No. 1 voltage adjusted to produce an accelerator current of 100 μA. with the pattern adjusted for best overall focus. Measured with a 525-line interlaced and synchronized 4½ x 5¾-inch pattern, with interlaced line blanking (current measured before applying blanking).
- 4. Visual extinction of focused 4½ x 5¾-inch raster pattern.
- 5. Measured with a 525-line interlaced and synchronized pattern with interlaced line blanking. Pattern width adjusted to 90% of minimum useful screen diameter. Ib = 100  $\mu$ A. measured before applying blanking. Line width is the merged raster height divided by the number of lines (262.5) (measured in center of tube face). To avoid damage to the screen of the 7ABP19, it is recommended that the screen current be not more than 50  $\mu$ A. when measuring line width. The line width under this condition will be .011 inch maximum (current measured before applying blanking).
- 6. The center of the undeflected, focused spot will fall within a circle of 3/8-inch radius concentric with the center of the tube face, with the tube shielded.
- 7. For optimum quality of the focused spot, the use of a beam alignment magnet is recommended. This may be obtained by the use of an adjustable magnet of specified strength, located approximately 51/4 inches from the reference line.

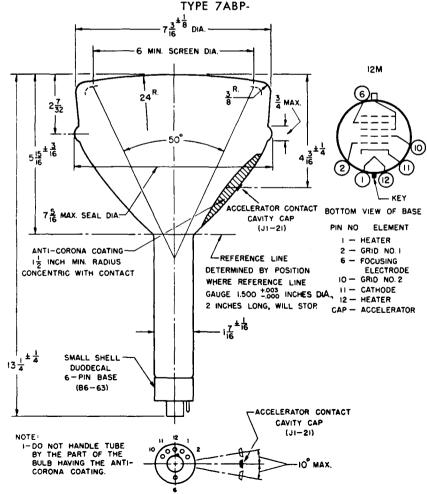

## **7ACP- CATHODE-RAY TUBE**

The Du Mont Type 7ACP- is a 4 x 6 inch rectangular, three beam, electrostatic focus and deflection cathode-ray tube. Each beam is independent of the other except for accelerating potentials and heater connections. Post-acceleration is used to obtain maximum deflection sensitivity with high brightness. The electron gun structures are so designed as to require no appreciable focusing current. As many of the electrode connections as is practical have been brought out through the base pins in order to simplify the problem of connection. The Post-accelerator is connected to a bulb contact in order to obtain maximum insulation. For maximum brightness and stability in performance, all screens are provided with a highly reflective metal backing.



## GENERAL CHARACTERISTICS (Note 1)

## **Electrical Data**

| Heater Voltage Heater Current (All units) Focusing Method Deflecting Method |                | 1.8 ± 10 | 0% Amperes<br>Electrostatic |      |                    |
|---|----------------|----------|-----------------------------|------|--------------------|
| Phosphor  | No. 2          | No. 7    | No. 19                      |      |                    |
| Fluorescence  | Green          | Blue     | Orange                      |      |                    |
| Phosphorescence   | Green          | Yellow   | Orange                      |      |                    |
| Persistence   | Long           | Long     | Long                        |      |                    |
| Direct Interelectrode   | Capacitances   |          | Min.                        | Max. |                    |
| Cathode to all other  | electrodes     |          | 5.0                         | 7.0  | $\mu\mu\mathbf{f}$ |
| Grid No. 1 to all ot  | her electrodes |          | 5.0                         | 7.0  | $\mu\mu\mathbf{f}$ |
|   |                |          |                             | 4.0  | $\mu\mu\mathbf{f}$ |
|   |                |          |                             | 2.8  | $\mu\mu f$         |
| D1 to all other elec-   | trodes         |          | 9.5                         | 13.2 | $\mu\mu f$         |
| D2 to all other electrodes  |                |          | 9.3                         | 13.2 | $\mu\mu f$         |
| D3 to all other electrodes  |                |          | 8.0                         | 11.0 | $\mu\mu\mathbf{f}$ |
| D4 to all other electrodes  |                |          | 8.0                         | 11.0 | $\mu\mu\mathbf{f}$ |

#### Mechanical Data

| Overall Length Greatest Bulb Dimension (Diagonal) Minimum Screen Dimensions (Along Tube Axes) Bulb Contact (Recessed Small Ball Cap) Base (25 Pin) Basing Base Alignment | 65% ± 1/16 Inches 31/4 x 51/4 Inches J1-22 B25-139 Special |
|--|--|
| D3D4 trace aligns with Base Key and Tube Axis  |  |
| Positive voltage on D1 deflects beam approximately towards Pi  |  |
| Positive voltage on D3 deflects beam approximately towards E   | Sase Key   |
| Bulb Contact Alignment   |  |
| Bulb contact located on tube center line   | ± ½ Inch   |
| Bulb contact on same side as Base Key  |  |
| Trace Alignment  |  |
| Angle between D1D2 and D3D4 traces   | 90 ± 2 Degrees   |
| Corresponding traces of each gun align within  | ± 2 Degrees  |
| D3D4 trace aligns with Bulb Side Wall  | ± 3 Degrees  |

## MAXIMUM RATINGS (Design Center Values)

| Post-Accelerator Voltage 10,500 Max. Volts D-C                 |
|--|
| Accelerator Voltage (Note 2) 3,500 Max. Volts D-C              |
| Ratio Post-Accelerator Voltage to Accelerator Voltage (Note 3) |
| Focusing Voltage 2,700 Max. Volts D-C                          |
| Grid No. 1 Voltage   |
| Negative Bias Value 300 Max. Volts D-C                         |
| Positive Bias Value 0 Max. Volts D-C                           |
| Positive Peak Value 0 Max. Volts                               |
| Peak Heater to Cathode Voltage                                 |
| Heater Negative with respect to Cathode 180 Max. Volts         |
| Heater Positive with respect to Cathode                        |
| Peak Voltage between Accelerator and any Deflection Electrode  |
| TYPICAL OPERATING CONDITIONS                                   |
| For Post-Accelerator Voltage of 9,000 Volts D-C                |
| 2,000 V. I. D. C   |

| For Post-Accelerator Voltage of<br>For Accelerator Voltage of<br>Focusing Voltage |                      | 3,000 Volts D-C<br>595 to 1020 Volts D-C |
|---|----------------------|--|
| Grid No. 1 Voltage (Note 4)   |                      |  |
|   | Phosphors Nos. 2 & 7 | No. 19                                   |
| Modulation  | 15 (Note 5)          | 20 (Note 6) Max. Volts D-C               |
| Line Width "A"  |                      | .024 (Note 8) Max. Inches                |
| Light Output (Note 9)   |                      | 100 (P2) Min. Ft. Lamberts               |
| Deflection Factors:   |                      |  |
|   |                      | 86 to 130 Volts D-C/Inch                 |
|   |                      | 84 to 126 Volts D-C/Inch                 |
| Useful Scan (Note 10)   |                      | Of to 120 voits B-C/Inch                 |
|   |                      | With: 15 C                               |
| Spot rosition (Note 11)   |                      | Within 15 mm Square                      |
|   |                      |  |

#### CIRCUIT DESIGN VALUES

| Focusing Voltage 198 to 340 Volts per Kilovolt of Accelerator Voltage Focusing Current for any operating condition —15 to +10 Microamperes Grid No. 1 Voltage (Note 4) —37.5 to —22 Volts per Kilovolt of Accelerator Voltage Grid No. 1 Circuit Resistance 1.5 Max, Megohms |
|--|
| Deflection Factors:  |
|  |
| Ratio Post-Accelerator Voltage to Accelerator Voltage 1.0  |
| D1 and D2  |
| D3 and D4  |
| Ratio Post-Accelerator Voltage to Accelerator Voltage 3.0  |
| D1 and D2  |
| D3 and D4 28 to 42 Volts D-C/Inch/KV of Accelerator Voltage  |
| Resistance in any Deflection Electrode Circuit (Note 12)   |

## NOTES

- 1. All tests to be made on each gun separately. Values are for each unit unless otherwise stated.
- 2. Accelerator power input (Avg.) should be limited to six watts. The P19 screen can be permanently damaged if the current density is permitted to rise too high. To prevent burning, minimum beam current densities should be employed.
- 3. This tube is designed for optimum performance when operating at an Eb3/Eb2 ratio of 3.0. Operation at other ratios of Eb3/Eb2 may result in changes in deflection uniformity and pattern distortion.
- 4. For visual extinction of the focused undeflected spot.
- 5. The increase in Grid No. 1 voltage from cut-off to produce an Ib3 of 50  $\mu$ AD-C.
- 6. The increase in Grid No. 1 voltage from cut-off to produce an Ib3 of 5  $\mu$ AD-C.
- 7. Measured in accordance with MIL-E-1 specifications using an Ib3 of 50 μAD-C.
- 8. Measured in accordance with MIL-E-1 specifications using an Ib3 of 5  $\mu$ AD-C.
- 9. P2 and P7 Light Output Measured in accordance with MIL-E-1 specifications with an Ib3 of 50 μAD-C.
- 10. The minimum useful scan of Guns A and C is:

D1D2 = 3.0 inches and D3D4 = 2.25 inches.

The minimum useful scan of Gun B is:


D1D2 = 3.0 inches and D3D4 = 3.0 inches.

11. When the tube is operated at typical operating conditions, and with (1) Eb1 adjusted for focus, (2) Ec1 set at such a value as will avoid damage to the screen, (3) each of the deflecting electrodes connected to the accelerator, and (4) the tube shielded against external influences; the spots will fall within 15 mm squares, the


centers of which are 1.5 inches from the geometric center of the tube face towards the bulb contact for guns A and C and 1.0 inch from the geometric center of the tube face away from the bulb contact for gun B, and the sides of which are parallel to the traces produced by deflecting electrodes D3 and D4 respectively.

12. It is recommended that the deflection electrode circuit resistances be approximately equal. Higher resistance values up to 5 megohms may be used for low beam current operation.

#### TYPE 7ACP-

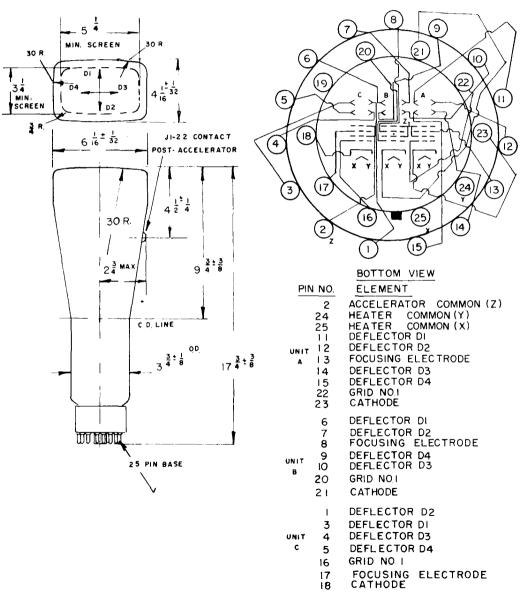

## TYPE 7ACP-AVERAGE CHARACTERISTICS

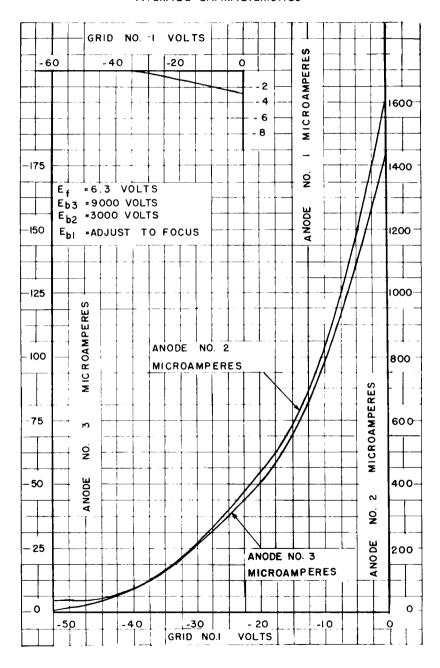

## TYPE 7AEP- CATHODE-RAY TUBES

The Du Mont Type 7AEP- is a 7 inch diameter, single beam, post-accelerator, electrostatic focus and deflection cathode-ray tube employing a flat face plate to reduce parallactic error. Tolerances are tightly controlled and feature: angle between D1D2 and D3D4 traces held to  $90^{\circ} \pm 1^{\circ}$ , deflection factors held to within 10% with low pattern distortion, and grid cutoff bias is maintained to within 25%. The gun employed draws negligible focusing electrode current.

The inherently higher sensitivity of this line of "Tight-Tolerance" cathode-ray tubes, such as the 5AFP-, over previously available commercial tubes permits smaller, lower cost amplifiers, while tight tolerances afford greater freedom in cathoderay and radar equipment design.



#### GENERAL CHARACTERISTICS

## **Electrical Data**

| Focusing Method Deflecting Method  |      | Electr | ostatic            |
|------------------------------------|------|--------|--------------------|
| Direct Interelectrode Capacitances | Min. | Max.   | ostatic            |
| Cathode to all                     | 2.9  | 4.5    | $\mu\mu f$         |
| Grid No. 1 to all                  | 3.7  | 6.4    | $\mu\mu f$         |
| D1 to D2                           |      | 2.7    | $\mu\mu f$         |
| D3 to D4                           |      | 1.8    | $\mu\mu\mathbf{f}$ |
| D1 to all                          |      | 7.6    | $\mu\mu\mathbf{f}$ |
| D2 to all                          |      | 7.6    | $\mu\mu f$         |
| D3 to all                          |      | 5.5    | $\mu\mu\mathbf{f}$ |
| D4 to all                          |      | 5.5    | $\mu\mu f$         |

## **Optical Data**

| Phosphor Number      | 1      | 2     | 7      | 11    |
|----------------------|--------|-------|--------|-------|
| Fluorescent Color    | Green  | Green | Blue   | Blue  |
| Phosphorescent Color |        | Green | Yellow | -     |
| Persistence          | Medium | Long  | Long   | Short |

#### Mechanical Data

| $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$                                       |
|--|
| Base Alignment   |
| D1D2 trace aligns with Pin No. 5 and tube axis $0 \pm 10$ Degrees                            |
| Positive voltage on D1 deflects beam approximately toward Base Pin No. 5                     |
| Positive voltage on D3 deflects beam approximately toward Base Pin No. 2                     |
| Bulb Contact Alignment   |
| J1-22 contact aligns with D1D2 trace 0 + 10 Degrees  |
| J1-22 contact ungils with B1B2 trace   |
| J1-22 contact on same side as Pin No. 5  |
| J1-22 contact on same side as Pin No. 5  Trace Alignment  Angle between D3D4 and D1D2 traces |

## **MAXIMUM RATINGS (Design Center Values)**

| Heater Voltage Heater Current at 6.3 Volts Post-Accelerator Voltage Accelerator Voltage Ratio Post-Accelerator Voltage to Accelerator Voltage (Note 1) | 0.6 ± 10% Ampere<br>8000 Max. Volts D-C<br>4000 Max. Volts D-C |
|--|--|
| Accelerator Input  | 6.0 Max. Watts   |
| Focusing Electrode Voltage   | 1250 Max. Volts D-C  |
| Grid No. 1. Voltage  |  |
| Negative Bias Value  |  |
| Positive Bias Value  |  |
| Positive Peak Value  | 0 Max. Volts   |
| Peak Heater-Cathode Voltage  |  |
| Heater negative with respect to cathode  | 180 Max. Volts   |
| Heater positive with respect to cathode  | 180 Max. Volts   |
| Peak Voltage between Accelerator and any Deflection Electrode  | 750 Max. Volts   |

## TYPICAL OPERATING CONDITIONS


| Post-Accelerator Voltage Accelerator Voltage Focusing Electrode Voltage Grid No. 1 Voltage (Note 2) |                                 |
|---|---------------------------------|
| Deflection Factors:   |                                 |
| D1 and D2   |                                 |
| Deflection Factor Uniformity (Note 3)   |                                 |
| Pattern Distortion (Note 4)   |                                 |
| Modulation (Note 5)   |                                 |
| Line Width "A" (Note 5)   |                                 |
| Light Output (Note 5) Phosphor #1   |                                 |
| Focusing Electrode Current for any operating condition  |                                 |
| Spot Position (focused and undeflected) (Note 6)  |                                 |
| For Accelerator Voltage not shown in the preceding table,<br>the following can be used as a guide:  |                                 |
| Focusing Electrode Voltage 19%  | 6 to 31% of Accelerator Volts   |
| Grid No. 1 Voltage 2.2%   |                                 |
| Ratio Post-Accelerator to Accelerator Voltage   |                                 |
| D1 and D2 33 to 40 Volts D-C per Inch per I   |                                 |
| D3 and D4 27 to 33 Volts D-C per Inch per I   |                                 |
| Ratio Post-Accelerator to Accelerator Voltage   |                                 |
| D1 and D2   |                                 |
| Do and D4 35 to 42 Voits D-C per Inch per I   | Milovoit of Accelerator Voltage |

#### **MAXIMUM CIRCUIT VALUES**


| Grid No. 1 Circuit Resistance                           | 1.5 | Max. | Megohms |
|---|-----|------|---------|
| Resistance in any Deflecting Electrode Circuit (Note 7) | 1.0 | Max. | Megohms |

- 1. This tube is designed for optimum performance when operating at an Eb3/Eb2 ratio of 2.0. Operation at other ratios of Eb3/Eb2 may result in changes in deflection uniformity and pattern distortion.
- 2. Visual extinction of undeflected focused spot.
- 3. As per MIL-E-1 specifications.
- 4. All portions of a raster pattern, adjusted so its widest points just touch the sides of a 4.100 inch square will fall within the area bounded by the 4.100 inch square and an inscribed 3.900 inch square.
- 5. For an Ib3 of 25  $\mu ADC$  measured in accordance with MIL-E-1 specifications.
- Centered with respect to the tube face and with the tube shielded. Connect free deflecting electrodes to accelerator.
- 7. It is recommended that the deflecting-electrode circuit resistance be approximately equal. Higher resistance values up to five megohms may be used for low beam current operation.

TYPE 7AEP-AVERAGE CHARACTERISTICS

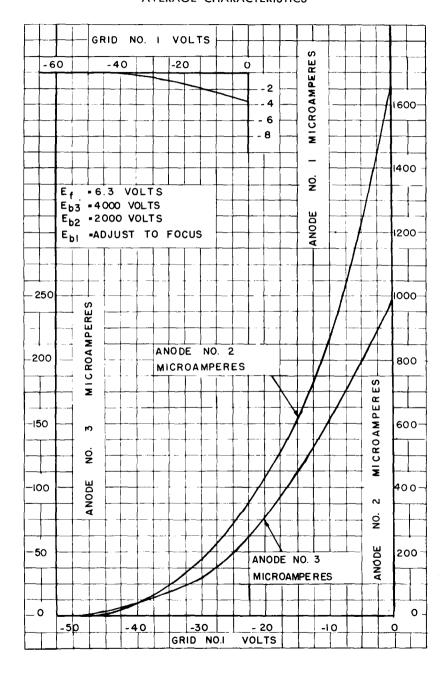

TYPE 7AEP-

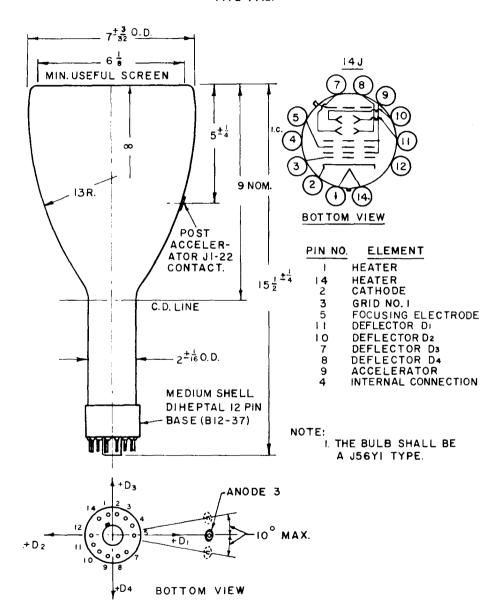

## **7BP- CATHODE-RAY TUBES**

The Types 7BP- Cathode-ray Tubes are 7-inch magnetically focussed and deflected cathode-ray tubes primarily designed for radar indicator and other applications requiring a relatively large, flat screen area and a long persistence screen. The Type 7BP- is very similar to the Type 7MP-, the chief difference being in bulb shape. Other typical radar tubes include the Types 5FP-, 10KP- and 12SP-.

#### **GENERAL CHARACTERISTICS**

## **Electrical**

| Heater Voltage                                      |
|---|
| Heater Current $0.6 \pm 10\%$ Ampere                |
| Focusing Method Magnetic                            |
| Deflecting Method Magnetic                          |
| Deflecting Angle (Approx.) 53 Degrees               |
| Phosphor  |
| FluorescenceBlue                                    |
| Phosphorescence                                     |
| PersistenceLong                                     |
| Direct Interelectrode Capacitances, Approx.         |
| Cathode to all other electrodes $5 \mu \mu f$ .     |
| Grid No. 1 to all other electrodes $8.5 \mu\mu f$ . |
| Grid No. 2 to all other electrodes $7 \mu\mu f$ .   |



## Mechanical

| Overall Length   | 131/4 ± 3/8 Inches |
|--|--------------------|
| Greatest Diameter of Bulb                                  | 7 ± 1/8 Inches     |
| Minimum Useful Screen Diameter                             | 6 Inches           |
| Bulb Contact (Recessed Small Ball Cap)                     | J1-22              |
| Base (Medium-Shell Octal 8-Pin)                            | B8-65              |
| Basing   | 5AN                |
| Bulb Contact Alignment J1-22 Contact aligns with pin No. 5 | ± 10 Degrees       |

## **MAXIMUM RATINGS—(Design Center Values)**

| Anode Voltage                           | 3,000 Max. Volts D-C |
|---|----------------------|
| Grid No. 2 Voltage                      | . 700 Max. Volts D-C |
| Grid No. 1 Voltage                      |                      |
| Negative Bias Value                     | . 125 Max. Volts D-C |
| Positive Bias Value <sup>1</sup>        | 0 Max. Volts D-C     |
| Positive Peak Value                     | 2 Max. Volts         |
| Peak Grid No. 1 Drive from Cut-off      | 65 Max. Volts        |
| Peak Heater-Cathode Voltage             |                      |
| Heater Negative with respect to cathode | . 125 Max. Volts D-C |
| Heater Positive with respect to cathode | . 125 Max. Volts D-C |

## TYPICAL OPERATING CONDITIONS

| Anode Voltage                      | 4,000        | 7,000        | Volts D-C |
|------------------------------------|--------------|--------------|-----------|
| Grid No. 2 Voltage                 | 250          | 250          | Volts D-C |
| Grid No. 1 Voltage <sup>2</sup>    | -25  to  -70 | -25 to $-70$ | Volts D-C |
| Focusing Coil Current <sup>8</sup> | 75 to 102    | 99 to 135    | Ma. D-C   |
| Spot Position                      | 12           | _            | mm.       |


## **MAXIMUM CIRCUIT VALUES**

## MINIMUM CIRCUIT VALUES

When the output capacitor of the power supply is capable of storing more than 250 microcoulombs, and when the inherent regulation of the power supply permits the instantaneous short-circuit current to exceed 1 ampere, the effective resistance in the circuit between the indicated electrode and the output capacitor should be as follows:


| Grid No. 1 Circuit Resistance | <br>*************************************** | 150 Min. Ohms |
|-------------------------------|---|---------------|
| Grid No. 2 Circuit Resistance | <br>*************************************** | 820 Min. Ohms |
| Anode Circuit Resistance      | <br>g                                       | 100 Min. Ohms |

- At or near this rating, the effective resistance of the anode supply should be adequate to limit the anode input power to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- 3. For JETEC standard focus coil No. 106, or equivalent, with the grid No. 1 voltage adjusted to produce an anode current of 200 microamperes and with distance (D) from reference line to center of air gap equal to 2.75 inches.
- 4. The center of the undeflected, unfocused spot will fall within a circle of 12 mm. radius concentric with the center of the tube face.

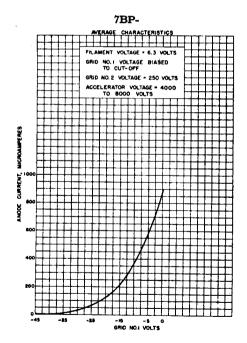

132

TYPE 7BP-

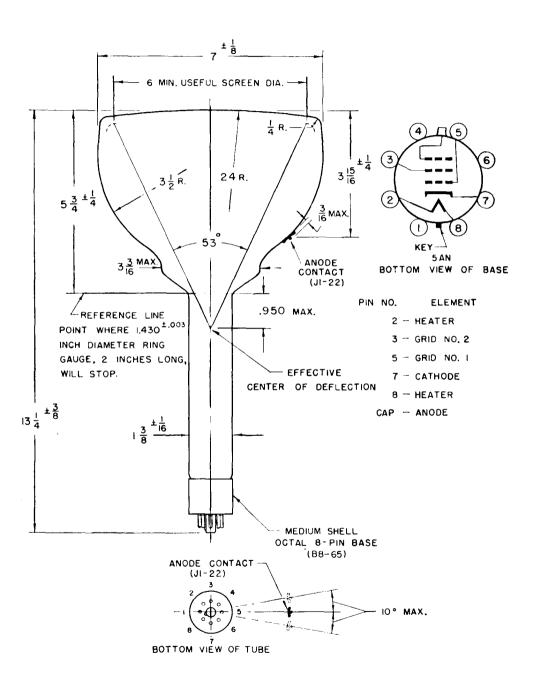

## 7MP- CATHODE-RAY TUBES

Highly similar to the Type 7BP- Cathode-ray Tubes, except in bulb shape, are the Type 7MP-Cathode-ray Tubes. These are magnetically focussed and deflected cathode-ray tubes primarily designed for radar indicator and other applications requiring a relatively large, flat screen area and a long persistence screen. Among the other radartype tubes which may be ordered from Du Mont are the Types 5FP-, 10KP- and 12SP-.

## GENERAL CHARACTERISTICS

## **Electrical**

| $ \begin{array}{llllllllllllllllllllllllllllllllllll$ |
|---|
| $ \begin{array}{cccccccccccccccccccccccccccccccccccc$ |



#### Mechanical

| Overall Length                                      | $12\frac{3}{4} \pm \frac{3}{8}$ Inches |
|---|--|
| Greatest Diameter of Bulb                           | $7-3/16 \pm \frac{1}{8}$ Inches        |
| Minimum Useful Screen Diameter                      | 6 Inches                               |
| Bulb Contact (Recessed Small Cavity Cap)            | J1-21                                  |
| Base (Small Shell Duodecal 5-Pin)                   | B5-57                                  |
| Basing  |  |
| Bulb Contact Alignment                              |  |
| J1-21 Contact aligns with vacant pin position No. 3 | ± 10 Degrees                           |

## MAXIMUM RATINGS—(Design Center Values)


| Anode Voltage                             | 8,000 Max. Volts D-C                   |
|---|--|
|   | 180 to +700 Max. Volts D-C or Peak A-C |
| Grid No. 1 Voltage                        | ,                                      |
| Negative Bias Value                       |  |
| Positive Bias Value                       | 0 Max. Volts D-C                       |
| Positive Peak Value                       |  |
| Peak Grid No. 1 Drive from Cut-off        | 65 Max. Volts                          |
| Peak Heater-Cathode Voltage               |  |
| Heater Negative with respect to cathode . |  |
| Heater Positive with respect to cathode . |  |

## TYPICAL OPERATING CONDITIONS


| Anode Voltage                      | 4,000         | 7,000         | Volts D-C |
|------------------------------------|---------------|---------------|-----------|
| Grid No. 2 Voltage                 | 250           | 250           | Volts D-C |
| Grid No. 2 Current                 | -15 to $+15$  | -15 to $+15$  | ua. D-C   |
| Grid No. 1 Voltage <sup>2</sup>    | -27  to  -63  | -27  to  -63  | Volts D-C |
| Focusing Coil Current <sup>3</sup> | $64 \pm 15\%$ | $85 \pm 15\%$ | Ma. D-C   |
| Spot Position'                     | 12            | _             | mm        |

## MAXIMUM CIRCUIT VALUES

- At or near this rating, the effective resistance of the anode supply should be adequate
  to limit the anode input power to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- 3. For JETEC standard focus coil No. 109, or equivalent, with the Grid No. 1 voltage ad-
- justed to produce an anode current of 200 microamperes and with distance (D) from reference line to center of air gap equal to 2.75 inches.
- 4. The center of the undeflected, unfocused spot will fall within a circle of 12 mm. radius concentric with the center of the tube face.

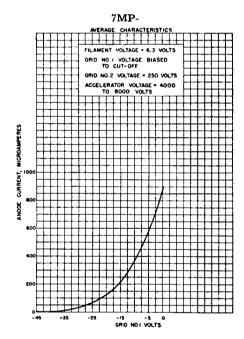

TYPE 7MP-

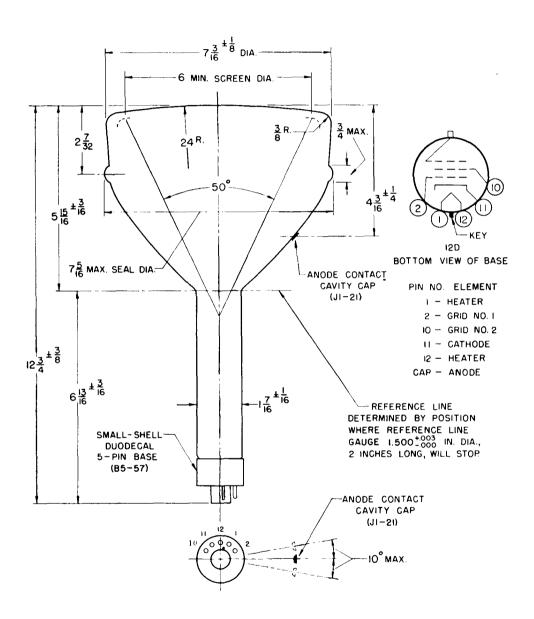

## **7UP7 CATHODE-RAY TUBE**

The Type 7UP7 is a 7-inch magnetic focus and deflection cathode-ray tube with a relatively large and flat screen area. It is designed for applications requiring a long persistent type screen. The screen is metal-backed.

## GENERAL CHARACTERISTICS

#### **Electrical Data**

| $\begin{array}{cccc} \text{Heater Voltage} & & 6.3 \text{ Volts} \\ \text{Heater Current} & & 0.6  \pm  10\% \text{ Ampere} \\ \text{Focusing Method} & & & \text{Magnetic} \\ \text{Deflecting Method} & & & \text{Magnetic} \end{array}$ |
|--|
| Deflecting Angle (Approx.) 53 Degrees  |
| Phosphor No. 7   |
| Fluorescence Blue  |
| Phosphorescence Yellow   |
| Persistence Long   |
| Direct Interelectrode Capacitances, Approx.  |
| Cathode to all other electrodes 5 $\mu\mu f$ .   |
| Grid No. 1 to all other electrodes 8.5 $\mu\mu f$ .  |
|  |

## **Mechanical Data**

| Overall Length $13\frac{1}{4}$ $\pm$ $\frac{3}{8}$ Inches |
|---|
| Greatest Diameter of Bulb                                 |
| Minimum Useful Screen Diameter 6 Inches                   |
| Bulb Contact (Recessed Small Cavity Cap)                  |
| Base (Long Medium-Shell Octal 8-Pin or) B8-65 or          |
| (Long Medium-Shell Octal 5-Pin) B5-80                     |
| Basing 5AN  |
| Bulb Contact Alignment                                    |
| J1-21 Contact aligns with Pin No. 5 ± 10 Degrees          |

## **MAXIMUM RATINGS (Design Center Values)**

| Accelerator Voltage                            | 10,000 Max. Volts D-C |
|--|-----------------------|
| Grid No. 2 Voltage                             | 700 Max. Volts D-C    |
| Grid No. 1 Voltage                             |                       |
| Negative Bias Value                            | 180 Max. Volts D-C    |
| Positive Bias Value <sup>1</sup>               |                       |
| Positive Peak Value                            | 2 Max. Volts          |
| Peak Heater-Cathode Voltage                    |                       |
| Heater Negative with respect to cathode        |                       |
| During warm-up period not to exceed 15 seconds | 410 Max. Volts D-C    |
| After equipment warm-up period                 | 180 Max. Volts D-C    |
| Heater Positive with respect to cathode        | 180 Max. Volts D-C    |

## TYPICAL OPERATING CONDITIONS


| Accelerator | Voltage              | and the second control of the second control | 7,000  | Volts | D-C |
|-------------|----------------------|--|--------|-------|-----|
| Grid No. 2  | Voltage              |  | . 250  | Volts | D-C |
| Grid No. 1  | Voltage <sup>2</sup> | —25 to   | -70    | Volts | D-C |
| Focusing Co | oil Curren           | nt <sup>3</sup>  | to 135 | Ma.   | D-C |

## **MAXIMUM CIRCUIT VALUES**

Grid No. 1 Circuit Resistance 1.5 Max. Megohms NOTES

- 1. At or near this rating, the effective resistance of the accelerator supply should be adequate to limit the accelerator input power to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- 3. For JETEC standard focus coil No. 106, or equivalent, with the grid voltage adjusted to produce an accelerator current of 200 microamperes and with distance (D) from reference line to center of air gap equal to 2.75 inches.

TYPE 7UP-

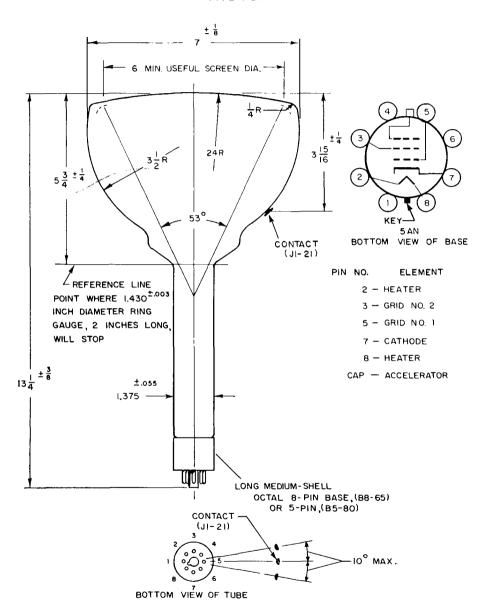

## **7YP- CATHODE-RAY TUBE**

The Du Mont Type 7YP- is a seven-inch diagonal, square-faced flat-faced, electrostatically deflected and focused cathode-ray tube containing five electron-guns in a single glass envelope. Each electron beam may be independently focused, deflected and intensity-modulated. The single post-accelerator is common to all the electron-guns. The Type 7YP- is one of the line of Du Mont tight-tolerance cathode-ray tubes.

The Type 7YP- is utilized in those applications requiring the display of five independent phenomena on a single cathode-ray tube screen for comparison and observation. Each of the electron guns is positioned to scan adjacent separate areas of the screen and the 3D4 scan of each is limited to provide maximum sensitivity on this axis. The deflection electrode and accelerator connections are brought out through the bulb wall to minimize lead inductance and capacity and to improve insulation. A collar or ring-base provides easy connections to these leads.



## **GENERAL CHARACTERISTICS (Note 1)**

#### Electrical

| $ \begin{array}{llllllllllllllllllllllllllllllllllll$ |        |       |        |                      |
|---|--------|-------|--------|----------------------|
| Phosphor  | No. 1  | No. 2 | No. 7  | No. 11               |
| Fluorescence  | Green  | Green | Blue   | Blue                 |
| Phosphorescence                                       |        | Green | Yellow |                      |
| Persistence   | Medium | Long  | Long   | Short                |
| Direct Interelectrode Capacitances                    |        | Min.  | Max.   |                      |
| Cathodes to all other electrodes                      |        | 3.5   | 6.5    | $\mu \mu \mathbf{f}$ |
| Grid No. 1 to all other electrodes                    |        | 4.0   | 7.0    | $\mu\mu f$           |
| D1 to D2  |        | 1.3   | 2.7    | $\mu\mu\mathbf{f}$   |
| D3 to D4  |        | 1.6   | 3.2    | $\mu \mu \mathbf{f}$ |
| D1 to all other elect                                 | rodes  | 5.5   | 8.1    | $\mu\mu f$           |
| D2 to all other elect                                 | rodes  | 5.5   | 8.0    | $\mu\mu f$           |
| D4 to all other elect                                 | rodes  | 5.2   | 7.8    | $\mu\mu\mathbf{f}$   |
| D3 to all other elect                                 | rodes  | 5.2   | 7.8    | $\mu\mu f$           |

### Mechanical


| Overall Length                         | nches  |
|--|--------|
| Greatest Bulb Diagonal                 | nches  |
| Minimum Useful Screen Width (Note 2)   | nches  |
| Bulb Contact (Recessed Small Ball Cap) | J1-22  |
| Collar (22 Pin) Sp                     | pecial |
| Base (25 Pin)                          | 5-139  |
| Basing Sp.                             | ecial  |
| Collar and Base Alignment              |        |

| Bulb Contact on same side as Base Key and Collar Pin No. 1 ± 1/4 Inch   |
|---|
| Bulb Contact located on tube center line ± 3 Degrees  |
| Bulb Wall (wih Contact) Aligns with D1D2 Trace  |
| Trace Alignment   |
| D1D2 trace aligns with D3D4 trace 90±2 Degrees Corresponding traces align within 2 Degrees                          |
| Corresponding traces angli within   |
| MAXIMUM RATINGS—(Design Center Values)  |
| Post-Accelerator Voltage  |
| Accelerator Voltage (Note 3)  |
| Ratio Post-Accelerator Voltage to Accelerator Voltage (Note 4)  |
| Focusing Voltage  |
| Negative Bias Value   |
| Positive Bias Value 0 Max. Volts D-C  |
| Positive Peak Value 0 Max. Volts D-C  |
| Peak Heater to Cathode Voltage  |
| Heater Negative with respect to Cathode   |
| Peak Voltage between Accelerator and any deflection electrode   |
| Team fortage section receivable and any derivation electrone imminimum x,200 forta                                  |
| TYPICAL OPERATING CONDITIONS  |
| For Post-Accelerator Voltage of   |
| For Accelerator Voltage of  |
| Focusing Voltage 450 to 650 Volts D-C Grid No. 1 Voltage (Note 5) —50 to —90 Volts D-C                              |
| Modulation Factor (Note 6) 55 Max. Volts D-C  |
| Line Width "A" (Note 7)   |
| D1 and D2   |
| D3 and D4 (Note 8) 27 to 37 Volts D-C/Inch  |
| Deflection Factor Uniformity (Note 9) 2% Max.   |
| Useful Scan (Note 10) D1 and D2   |
| D3 and D4   |
| Interaction Factor (Note 11)  |
| CIRCUIT DESIGN VALUES   |
| Focusing Voltage  |
| Focusing Current for any operating condition  |
| Grid No. 1 Voltage for (Note 5) —25 to —45 volts per Kilovolt of Accelerator Voltage                                |
| Grid No. 1 Circuit Resistance   |
| Deflection Factors: Ratio Post-Accelerator Voltage to Accelerator Voltage   |
| D1 and D2   |
| D3 and D4   |
| Ratio Post-Accelerator Voltage to Accelerator Voltage   |
| D3 and D4 13.5 to 18.5 Volts D-C/Inch/KV of Accelerator Voltage   |
| Resistance in any Deflecting-Electrode Circuit (Note 12) 1.0 Max. Megohms   |
| NOTES   |
| 1. Values are for each unit unless otherwise stated.  |
| 2. Following the bulb contour.  |
| 3. Accelerator power input (Avg.) should be limited to 6 watts.   |
| 4. This tube is designed for optimum performance when operating at an Eb3/Eb2 ratio                                 |
| of 2.0. Operation at other ratios of Eb2/Eb2 may result in changes in deflection uniformity and pattern distortion. |
| 5. Visual extinction of the undeflected, focused spot.  |
| 6. The increase in Grid No. 1 voltage from cut-off to produce an Ib3 of 50 μADC.                                    |
| 7. Measured in accordance with MIL-E-1 specification using an Ib3 of 25 $\mu$ ADC.                                  |

Bulb Contact Aligns with D3D4 trace ..... ±10 Degrees

**Bulb Contact Alignment** 

- 8. The deflection in this direction is limited to ±.75 Min. Inches from the undeflected spot position.
- 9. Measured in accordance with MIL-E-1 specification.
- 10. Centered about normal undeflected spot positions.
- 11. The deflection of one beam when balanced D-C Voltages are applied to the deflection electrodes of the other will not be greater than the indicated value.
- 12. It is recommended that the deflecting electrode circuit resistances be approximately equal.

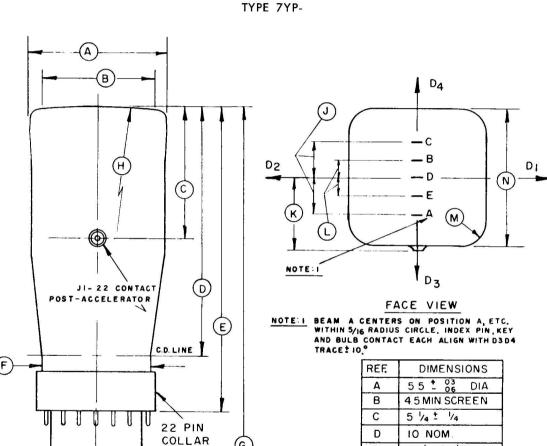


BASE

25 PIN BASE

T THE


| REF. | DIMENSIONS          |
|------|---------------------|
| Α    | 55 + 03 DIA         |
| В    | 4.5 MIN SCREEN      |
| С    | 5 1/4 + 1/4         |
| D    | IO NOM.             |
| Ε    | 12 1/4 + 1/8        |
| F    | 4 13/32 + 3/32 DIA. |
| G    | 18 1/2 1 3/8        |
| Н    | 40 R.               |
| 1    | 3 3/4 ± 1/16 O.D.   |
| J    | l 1/2 NOM.          |
| K    | 2797 MAX.           |
| L    | 3/4 NOM.            |
| М    | IR.                 |
| N    | 5.5 + 03 DIA        |

TYPE 7YP-

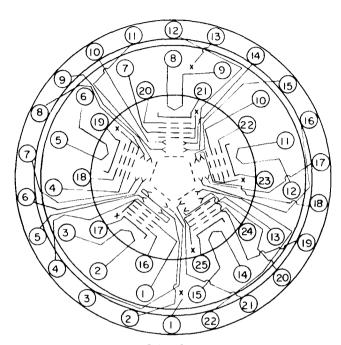

|         |              |             | BOTTOM VIEW | 25 PIN BASE        |      |
|---------|--------------|-------------|-------------|--------------------|------|
| 22      | PIN COLLAR   | BASE        | PIN NO      | ELEMENT            | BEAM |
|         |              | <del></del> | <del></del> | FOCUSING ELECTRODE | Α    |
| PIN NO. | ELEMENT      | BEAM        | 2           | HEATER             | A    |
| 1       | ACCELERATOR  |             | 3           | HEATER             | A    |
| 2       | DEFLECTOR D2 | A           | 4           | FOCUSING ELECTRODE | 8    |
| 3       | DEFLECTOR DI | Α           | 5           | HEATER             | В    |
| 4       | DEFLECTOR D3 | A           | 6           | HEATER             | В    |
| 5       | DEFLECTOR D4 | A           | 7           | FOCUSING ELECTRODE | С    |
| 6       | DEFLECTOR DI | В           | 8           | HEATER             | С    |
| 7       | DEFLECTOR D3 | 8           | 9           | HEATER             | С    |
| 8       | DEFLECTOR D4 | 8           | 10          | FOCUSING ELECTRODE | D    |
| 9       | DEFLECTOR D2 |             |             | <del>-</del>       | -    |
| 10      | DEFLECTOR D3 |             | 11          | HEATER             | D    |
| 1.1     | DEFLECTOR DI | c           | 12          | HEATER             | D    |
| 12      | DEFLECTOR D2 | С           | 1.3         | FOCUSING ELECTRODE | E    |
| 13      | ACCELERATOR  |             | 14          | HEATER             | ε    |
| 14      | DEFLECTOR D4 | С           | 15          | HEATER             | E    |
| 15      | DEFLECTOR DI | D           | 16          | GRID NO.1          | Α    |
| 16      | DEFLECTOR D2 | D           | 17          | CATHODE            | A    |
| 17      | DEFLECTOR D4 | D           | 18          | GRID NO I          | 8    |
| 18      | DEFLECTOR D3 | D           | 19          | CATHODE            | В    |
| 19      | DEFLECTOR D4 | E           | 20          | GRID NOI           | С    |
| 20      | DEFLECTOR D3 | E           | 2 1         | CATHODE            | c    |
| 21      | DEFLECTOR D2 |             | 2 2         | GRID NO.I          | D    |
| 22      | DEFLECTOR OF | Ε           | 2 3         | CATHODE            | D    |
|         |              |             | 24          | GRID NOI           | E    |
|         |              |             | 25          | CATHODE            | E    |
|         |              |             |             |                    | _    |

TYPE 7YPAVERAGE CHARACTERISTICS

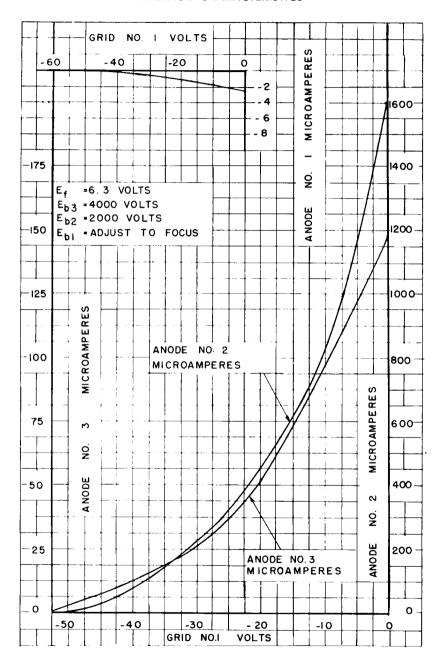

# **10KP- CATHODE-RAY TUBES**

The Type 10KP- Cathode-ray Tubes are magnetically focussed and deflected cathode-ray tubes designed for radar systems and special applications requiring long persistence and large screen size. This tube is typical of the radar-type tubes available from Du Mont.

Radar types similar to the Type 10KP- include the 5-inch 5FP-, the 7-inch 7BP- and the 12-inch 12SP-. Selection of a tube of this type would be determined by the screen size desired and the exact electrical characteristics needed to fit the application.

#### GENERAL CHARACTERISTICS

#### Electrical

| $ \begin{array}{llllllllllllllllllllllllllllllllllll$                               |   |
|---|---|
| Focusing Method Magnetic  |   |
| Deflecting Method Magnetic  | : |
| Deflecting Angle (Approx.) 50 Degrees   | 3 |
| Phosphor No. 7  | , |
| FluorescenceBlue  | • |
| Phosphorescence Yellow  | , |
| Persistence Long  | " |
| Direct Interelectrode Capacitances, Approx.   |   |
| Cathode to all other electrodes 5 μμf<br>Grid No. 1 to all other electrodes 6.5 μμf |   |



#### Mechanical

| Overall Length   | $17\frac{5}{8} \pm \frac{3}{8}$ Inches |
|--|--|
| Greatest Diameter of Bulb  |  |
| Minimum Useful Screen Diameter   |  |
| Bulb Contact (Recessed small cavity cap)                                 | J1-21                                  |
| Base (Small shell duodecal 7-pin)  | B7-51                                  |
| Basing   | 12D                                    |
| Bulb Contact Alignment J1-21 contact aligns with vacant pin position No. |  |

#### MAXIMUM RATINGS—(Design Center Values)

| Anode Voltage                           |                    |
|---|--------------------|
| Negative Bias Value                     | 180 Max. Volts D-C |
| Positive Bias Value <sup>1</sup>        | 0 Max. Volts D-C   |
| Positive Peak Value                     | 2 Max. Volts       |
| Peak Grid No. 1 Drive from Cut-off      | 65 Max. Volts      |
| Peak Heater-Cathode Voltage             |                    |
| Heater Negative with respect to cathode | 150 Max. Volts D-C |
| Heater Positive with respect to cathode | 150 Max. Volts D-C |


#### TYPICAL OPERATING CONDITIONS


| Anode Voltage                      | 9,000 Volts D-C     |
|------------------------------------|---------------------|
| Grid No. 2 Voltage                 | 250 Volts D-C       |
| Grid No. 1 Voltage <sup>2</sup>    | 27 to -63 Volts D-C |
| Focusing Coil Current <sup>3</sup> | 105 Approx. Ma. D-C |

#### **MAXIMUM CIRCUIT VALUES**

#### NOTES

- 1. At or near this rating, the effective resistance of the anode supply should be adequate to limit the anode input power to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- 3. For JETEC standard focus coil No. 106, or equivalent, with the Grid No. 1 voltage adjusted to produce an anode current of 200 microamperes and with distance (D) from reference line to center of air gap equal to 3.25 inches.

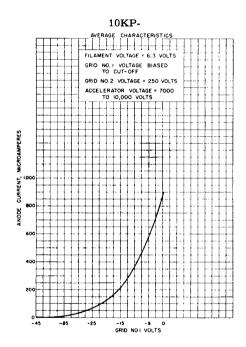

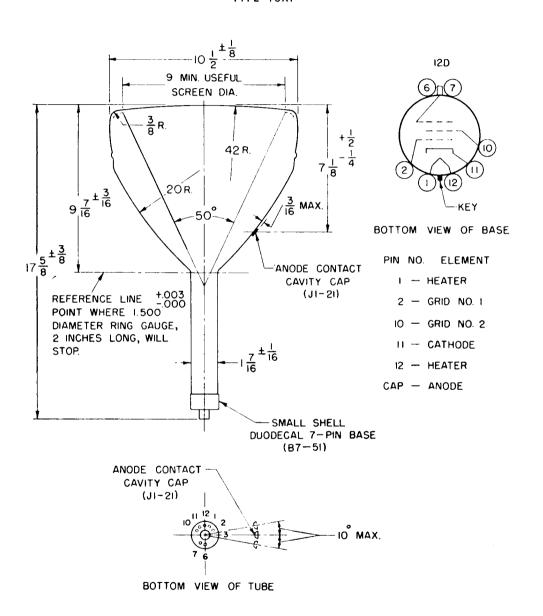

# TYPE 10WP- CATHODE-RAY TUBES

The Type 10WP- is a 10-inch electrostatic focus and magnetic deflection cathode-ray tube suitable for radar applications. A low-voltage electrostatic focus lens is employed, designed to operate at or near cathode potential to afford substantially automatic focus, independent of accelerator voltage variations. In addition, the 10WP- employs a high resolution electron gun.

The Type 10WP-A utilizes an aluminized screen for greater light output and to minimize screen charging effects; it is otherwise identical to the 10WP. If a P19 screen is selected, the aluminized

version should be used.

#### GENERAL CHARACTERISTICS

#### Electrical

| Heater Voltage       |                 |             |                 |
|----------------------|-----------------|-------------|-----------------|
| Heater Current       |                 |             |                 |
| Focusing Method      |                 |             | Electrostatic   |
| Deflecting Method    |                 |             |                 |
| Deflecting Angle (   | Approx.         | )           | 50 Degrees      |
|                      |                 |             | No. 19          |
| Fluorescence         | $\mathbf{Blue}$ | Blue        | Orange          |
| Phosphorescence      | Yellow          | Orange      | Orange          |
| Persistence          | Long            | Medium-le   | ong Long        |
| Direct Interelectrod | le Capac        | itances, Ap | prox.           |
| Cathode to all of    | her elec        | trodes      | 5 μμf.          |
| Grid No. 1 to all    | other e         | lectrodes   | 6 μμ <b>f</b> . |
|                      |                 |             |                 |



# Mechanical

| Overall Length  | ± ½ Inches 9 Inches J1-21 B6-63 |
|---|---------------------------------|
| Basing  | 12M                             |
| Bulb Contact Alignment  11-21 Contact aligns with vacant pin position No. 3 | 10 D                            |
| 11-21 Contact aligns with vacant bin position No. 3                         | TIU Degrees                     |

# MAXIMUM RATINGS—(Design Center Values)

| MAXIMOM RATINGS—(Design Center Values)            |
|---|
| Accelerator Voltage                               |
| Focusing Electrode Voltage                        |
| Grid No. 2 Voltage                                |
| Grid No. 1 Voltage                                |
| Negative Bias Value                               |
| Positive Bias Value <sup>1</sup> 0 Max. Volts D-C |
| Positive Peak Value                               |
| Peak Heater-Cathode Voltage                       |
| Heater Negative with respect to cathode           |
| Heater Positive with respect to cathode           |


# TYPICAL OPERATING CONDITIONS

| Accelerator Voltage <sup>2</sup>         |                          |
|--|--------------------------|
| Focusing Electrode Voltage <sup>3</sup>  | 0 to 300 Volts D-C       |
| Focusing Electrode Current               | —15 to $+15 \mu A$ . D-C |
| Grid No. 2 Voltage                       | 300 Volts D-C            |
| Grid No. 1 Voltage'                      |                          |
| Line Width A <sup>5</sup>                |                          |
| Spot Position (Undeflected) <sup>6</sup> | ½ Inch                   |
| Alignment Magnet Field Strength          |                          |

#### **MAXIMUM CIRCUIT VALUES**

#### NOTES

- 1. At or near this rating, the effective resistance of the accelerator supply should be adequate to limit the accelerator input power to 6 watts. The screen of the 10WP19 can be permanently damaged should the current density be permitted to rise too high. To prevent burning, minimum beam current densities should be employed.
- 2. Brilliance and definition decrease with decreasing accelerator voltage. In general, accelerator voltage should not be less than 7,000 volts.
- 3. With Grid No. 1 voltage adjusted to produce an accelerator current of 100  $\mu$ A. with the pattern adjusted for best overall focus. Measured with a 525-line interlaced and synchronized 6 x 8-inch pattern, with interlaced line blanking (current measured before applying blanking).
- 4. Visual extinction of focused 6 x 8-inch raster pattern.
  5. Measured with a 525-line interlaced and synchronized pattern with interlaced line blanking. Pattern width adjusted to 90% of minimum useful screen diameter. Ib  $\pm 100$   $\mu$ A., measured before applying blanking. Line width is the merged raster height divided by the number of lines (262.5) (measured in center of tube face). To avoid damage to the screen of the 10WP19, it is recommended that the screen current be not more than 50  $\mu$ A. when measuring line width. The line width under this condition will be .016 inch maximum (current measured before applying blanking).
- 6. The center of the undeflected, focused spot will fall within a circle of ½-inch radius concentric with the center of the tube face, with tube shielded.
- 7. For optimum quality of the focused spot the use of a beam alignment magnet is recommended. This may be obtained by the use of an adjustable magnet of the specified strength, located approximately 5-7/16 inches from the reference line.

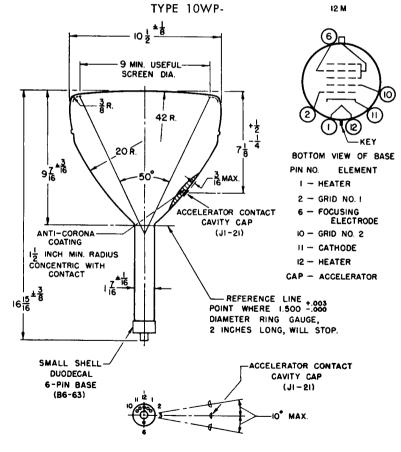

BOTTOM VIEW OF TUBE NOTE: 1-00 NOT HANDLE TUBE BY THE PART OF THE BULB HAVING THE ANTI-CORONA COATING.

# TYPE 12ABP-, 12ABP-A CATHODE-RAY TUBES

The Type 12ABP- is a 12-inch electrostatic focus and magnetic deflection cathode-ray tube suitable for radar applications. A low-voltage electrostatic focus lens is employed, designed to operate at or near cathode potential to afford substantially automatic focus, independent of accelerator voltage variations. In addition, the 12ABP- employs a high resolution electron gun. The face plate is of gray filter glass.

The face plate is of gray filter glass.

The Type 12ABP-A utilizes an aluminized screen for greater light output and to minimize screen charging effects; it is otherwise identical to the 12ABP-.

to the 12ADI -.

#### GENERAL CHARACTERISTICS

| Heater Voltage Heater Current Focusing Method Deflecting Method Deflecting Angle (Appr Phosphor Fluorescence Phosphorescence Persistence Direct Interelectrode Cathode to all other   | rox.) No. 7 Blue Yellow Long apacitances, Ap   | No. 14 Blue Orange Medium-long prox. | 9% Ampere<br>Electrostatic<br>Magnetic<br>55 Degrees<br>No. 19<br>Orange<br>Orange<br>Long |   |
|---|--|--------------------------------------|--|---|
| Grid No. 1 to all oth   |  |                                      |  |   |
| Mechanical Data   |  |                                      |  |   |
| Overall Length Greatest Diameter of B Minimum Useful Scree: Bulb Contact (Recessed Base (Small shell duod Basing Bulb Contact Alignmen  | oulb<br>n Diameter<br>d small cavity c<br>ecal 6-Pin)  | eap)                                 | 12-  | 7/16 ± ½ Inches<br>11 Inches<br>J1-21<br>B6-63<br>12M   |
| J1-21 contact aligns  |  |                                      |  |   |
|   |  | 3S (Design Ce                        | nter Value   | s)  |
|   |  |                                      | 10.00  | 0 Mr. 17 14 D.C.  |
| Focusing Electrode Volt<br>Grid No. 2 Voltage   | age  |                                      | -500 to $+100$   |   |
| Focusing Electrode Volt<br>Grid No. 2 Voltage<br>Grid No. 1 Voltage<br>Negative Bias Value<br>Positive Bias Value<br>Positive Peak Value  | age  |                                      | —500 to +100<br>700<br>18  | 00 Max. Volts D-C<br>0 Max. Volts D-C<br>0 Max. Volts D-C<br>0 Max. Volts D-C   |
| Focusing Electrode Volt<br>Grid No. 2 Voltage<br>Grid No. 1 Voltage<br>Negative Bias Value<br>Positive Bias Value   | oltage respect to cath   | ode                                  | 500 to +100<br>  | 00 Max. Volts D-C 00 Max. Volts 00 Max. Volts D-C   |
| Focusing Electrode Volt<br>Grid No. 2 Voltage<br>Grid No. 1 Voltage<br>Negative Bias Value<br>Positive Bias Value'<br>Positive Peak Value<br>Peak Heater-Cathode V<br>Heater negative with<br>Heater positive with  | Toltage respect to cather resp | ode<br>ERATING CONI                  | 500 to +100<br>  | 00 Max. Volts D-C 0 Max. Volts 0 Max. Volts   |
| Focusing Electrode Volt<br>Grid No. 2 Voltage<br>Grid No. 1 Voltage<br>Negative Bias Value<br>Positive Bias Value'<br>Positive Peak Value<br>Peak Heater-Cathode V<br>Heater negative with<br>Heater positive with  | Voltage respect to cath respect to cath IYPICAL OPE tage <sup>3</sup> rent   | ode<br>ode<br>ERATING CONI           |  | 00 Max. Volts D-C 0 Max. Volts D-C 10,000 Volts D-C 10,0 |
| Focusing Electrode Volt<br>Grid No. 2 Voltage<br>Grid No. 1 Voltage<br>Negative Bias Value<br>Positive Peak Value<br>Positive Peak Value<br>Peak Heater-Cathode V<br>Heater negative with<br>Heater positive with<br>Accelerator Voltage <sup>2</sup><br>Focusing Electrode Volt<br>Focusing Electrode Cur<br>Grid No. 2 Voltage<br>Grid No. 1 Voltage <sup>4</sup><br>Line Width A <sup>5</sup><br>Spot Position (Undeflee | Toltage respect to cath cage <sup>3</sup> rent cted) <sup>6</sup> d Strength <sup>7</sup>  | ode<br>ode<br>ERATING CONI           |  | 00 Max. Volts D-C 0 Max. Volts D-C 10,000 Volts D-C 10,0 |

#### NOTES

- At or near this rating, the effective resistance of the accelerator supply should be adequate to limit the accelerator input power to 6 watts. The screen of the 12ABP19 can be permanently damaged should the current density be permitted to rise too high. To prevent burning, minimum beam current densities should be employed.
- Brilliance and definition decrease with decreasing accelerator voltage. In general, accelerator voltage should not be less than 8,000 volts.
- 3. With Grid No. 1 voltage adjusted to produce an accelerator current of 100  $\mu$ A. with the pattern adjusted for best overall focus. Measured with a 525-line interlaced and synchronized  $7\frac{1}{2}$  x 10-inch pattern, with interlaced line blanking (current measured before applying blanking).
- 4. Visual extinction of focused  $7\frac{1}{2}$  x 10-inch raster pattern.
- 5. Measured with a 525-line interlaced and synchronized pattern with interlaced line blanking. Pattern width adjusted to 90% of minimum useful screen diameter. Ib =  $100~\mu$ A., measured before applying blanking. Line width is the merged raster height divided by the number of lines (262.5). (Measured in center of tube face.) To avoid damage to the screen of the 12ABP19, it is recommended that the screen current be not more than 50  $\mu$ A. when measuring line width. The line width under this condition will be .018 inch maximum (current measured before applying blanking).
- 6. The center of the undeflected, focused spot will fall within a circle of \( \frac{5}{8} \)-inch radius concentric with the center of the tube face, with the tube shielded.
- 7. For optimum quality of the focused spot, the use of a beam alignment magnet is recommended. This may be obtained by the use of an adjustable magnet of the specified strength, located approximately 5-7/16 inches from the reference line.

#### TYPE 12ABP--II MIN, USEFUL SCREEN DIA. -12 M <del>7</del>6R 40R 20R 10 7 ± 3 ± 3 BOTTOM VIEW OF BASE 18 PIN NO FLEMENT - HEATER ACCELERATOR CONTACT ∠REFERANCE LINE CAVITY CAP 2 - GRID NO I POINT WHERE 1.500 - 000 (J1 - 21)6 - FOCUSING DIAMETER RING GAUGE ELECTRODE ANTI-CORONA COATING 2 INCHES LONG, WILL 10 - GRID NO 2 1 1 INCH MIN. RADIUS STOP II- CATHODE CONCENTRIC WITH CONTACT 12 - HEATER CAP - ACCELERATOR SMALL SHELL DUODECAL 6-PIN BASE ACCELERATOR CONTACT (86-63) CAVITY CAP (JI-21)

NOTE.

I-DONOT HANDLE TUBE BY THE PART OF THE BULB HAVING THE ANTI-CORONA COATING.

BOTTOM VIEW OF TUBE

# 12DP-A CATHODE-RAY TUBES

The Type 12DP-A Cathode-ray Tubes are 12-inch magnetically focussed and deflected cathode-ray tubes, primarily designed for radar indicator applications. They feature a large screen area and a long persistence screen (although screens with any persistence characteristic may be ordered).

The Type 12DP-A is recommended only for replacement purposes.

#### **GENERAL CHARACTERISTICS**

#### Electrical

| Heater Voltage 6.3 Volts                            |
|---|
| Heater Current 0.6 ± 10% Ampere                     |
| Focusing Method Magnetic                            |
| Deflecting Method Magnetic                          |
| Deflecting Angle (Approx.)50 Degrees                |
| Phosphor  |
| Fluorescence Blue                                   |
| Phosphorescence                                     |
| PersistenceLong                                     |
| Direct Interelectrode Capacitances, Approx.         |
| Cathode to all other electrodes $6 \mu \mu f$ .     |
| Grid No. 1 to all other electrodes 9 $\mu\mu f$ .   |
| Grid No. 2 to all other electrodes 7.5 $\mu\mu f$ . |



# Mechanical

| Overall Length  | $19\frac{5}{8} \pm \frac{1}{2}$ Inches |
|---|--|
| Greatest Diameter of Bulb                             | $12 \pm 3/16$ Inches                   |
| Minimum Useful Screen Diameter                        |  |
| Bulb Contact (Medium Cap)                             | C1-5                                   |
| Base (Medium-Shell Octal 8-Pin)                       | B8-65                                  |
| Basing  | 5AN                                    |
| Bulb Contact Alignment C1-5 cap aligns with pin No. 5 |  |

# MAXIMUM RATINGS—(Design Center Values)

| Anode Voltage                           |
|---|
| Grid No. 2 Voltage                      |
| Grid No. 1 Voltage                      |
| Negative Bias Value                     |
| Positive Bias Value <sup>1</sup>        |
| Positive Peak Value                     |
| Peak Grid No. 1 Drive from Cut-off      |
| Peak Heater-Cathode Voltage             |
| Heater Negative with respect to cathode |
| Heater Positive with respect to cathode |

#### TYPICAL OPERATING CONDITIONS

| Anode Voltage                      | 4,000        | 7,000        | Volts D-C |
|------------------------------------|--------------|--------------|-----------|
| Grid No. 2 Voltage                 | 250          | 250          | Volts D-C |
| Grid No. 1 Voltage <sup>2</sup>    | -25  to  -70 | -25  to  -70 | Volts D-C |
| Focusing Coil Current <sup>3</sup> | 75 to 102    | 99 to 135    | Ma. D-C   |
| Spot Position4                     | 20           |              | mm.       |

#### MAXIMUM CIRCUIT VALUES


#### MINIMUM CIRCUIT VALUES

When the output capacitor of the power supply is capable of storing more than 250 microcoulombs, and when the inherent regulation of the power supply permits the instantaneous short-circuit current to exceed 1 ampere, the effective resistance in the circuit between the indicated electrode and the output capacitor should be as follows:


| Grid No. 1 Circuit Resistance | . 150 Min. Ohms |
|-------------------------------|-----------------|
| Grid No. 2 Circuit Resistance | . 820 Min. Ohms |
| Anode Circuit Resistance      | 1.000 Min. Ohms |

#### NOTES

- At or near this rating, the effective resistance of the anode supply should be adequate
  to limit the anode input power to 6 watts.
- 2. Visual extinction of undeflected focused spot.
- 3. For JETEC standard focus coil No. 106, or equivalent, with the Grid No. 1 voltage adjusted to produce an anode current of 200 microamperes and with distance (D) from reference line to center of air gap equal to 4.125 inches.
- 4. The center of the undeflected, unfocused spot will fall within a circle of 20 mm. radius concentric with the center of the tube face.

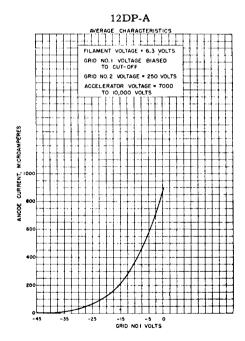

#### TYPE 12DP-A

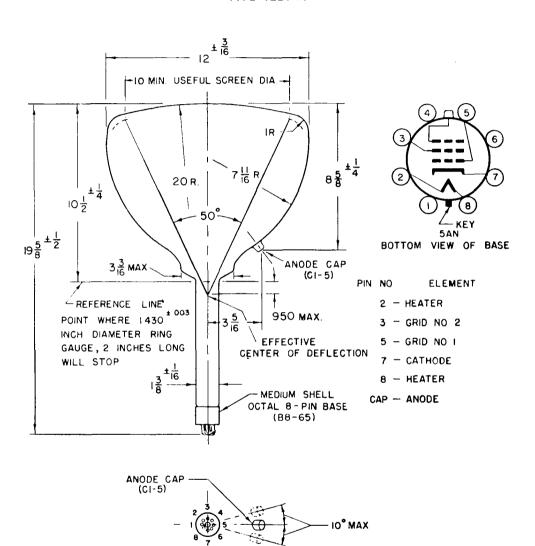

BOTTOM VIEW OF TUBE

# 12SP-, 12SP-B CATHODE-RAY TUBES

The Type 12SP- Cathode-ray Tubes are 12-inch magnetically focussed and deflected cathode-ray tubes for radar applications requiring a long persistence screen. The Type 12SP-, designed to be operated at an overall accelerating potential of approximately 9000 volts, produces a brilliant trace with good resolution. In addition, the Type 12SP- features an improved bulb design with grey filter face plate, which combines a minimum of length with a maximum of useful screen diameter. The Type 12SP- is similar to the 5-inch 5FP-, the 7-inch 7BP-, the 10-inch 10KP-, and the 12-inch 12SP-.

The Type 12SP-B utilizes an aluminized screen for greater light output and to minimize screen charging effects; it is otherwise identical to the 12SP-. If a P19 screen is selected, the aluminized version should be used.

# **GENERAL CHARACTERISTICS**

#### **Electrical**

| Heater Voltage 6.3 Volts                         |
|--|
| Heater Current $0.6 \pm 10\%$ Ampere             |
| Focusing Method Magnetic                         |
| Deflecting Method Magnetic                       |
| Deflecting Angle (Approx.) 55 Degrees            |
| Phosphor No. 7                                   |
| Fluorescence Blue                                |
| Phosphorescence Yellow                           |
| PersistenceLong                                  |
| Direct Interelectrode Capacitances, Approx.      |
| Cathode to all other electrodes $5 \mu \mu f$ .  |
| Grid No. 1 to all other electrodes 6 $\mu\mu$ f. |



## Mechanical

| Overall Length                              |                      |
|---|----------------------|
|   | 12-7/16 ± 1/8 Inches |
| Minimum Useful Screen Diameter              |                      |
| Bulb Contact (Recessed small cavity cap)    |                      |
| Base (Small shell duodecal 7-Pin)           | B7-51                |
| Basing                                      | 12D                  |
| Bulb Contact Alignment J1-21 contact aligns | with                 |
| vacant pin position No. 3                   | ± 10 Degrees         |

# MAXIMUM RATINGS—(Design Center Values)

| Anode Voltage                                  | 10,000 Max. Volts D-C |
|--|-----------------------|
| Grid No. 2 Voltage                             |                       |
| Grid No. 1 Voltage                             |                       |
| Negative Bias Value                            | 125 Max. Volts D-C    |
| Positive Bias Value                            | 0 Max. Volts D-C      |
| Positive Peak Value                            | 2 Max. Volts          |
| Peak Heater-Cathode Voltage                    |                       |
| Heater negative with respect to cathode        |                       |
| During warm-up period not to exceed 15 seconds | 410 Max. Volts D-C    |
| After equipment warm-up period                 | 180 Max. Volts D-C    |
| Heater Positive with respect to cathode        | 180 Max. Volts D-C    |


# TYPICAL OPERATING CONDITIONS

| Anode Voltage                      | 9,000 Volts D-C     |
|------------------------------------|---------------------|
| Grid No. 2 Voltage                 | 250 Volts D-C       |
| Grid No. 1 Voltage <sup>1</sup>    | 27 to -63 Volts D-C |
| Focusing Coil Current <sup>2</sup> |                     |


# MAXIMUM CIRCUIT VALUES

#### NOTES

- 1. Visual extinction of undeflected focused spot.
- 2. For JETEC standard focus coil No. 106, or equivalent, with the Grid No. 1 voltage adjusted to produce an anode current of 200 microamperes and with distance (D) from reference line to center of air gap equal to 3.25 inches.

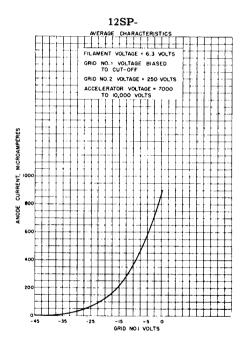

TYPE 12SP-

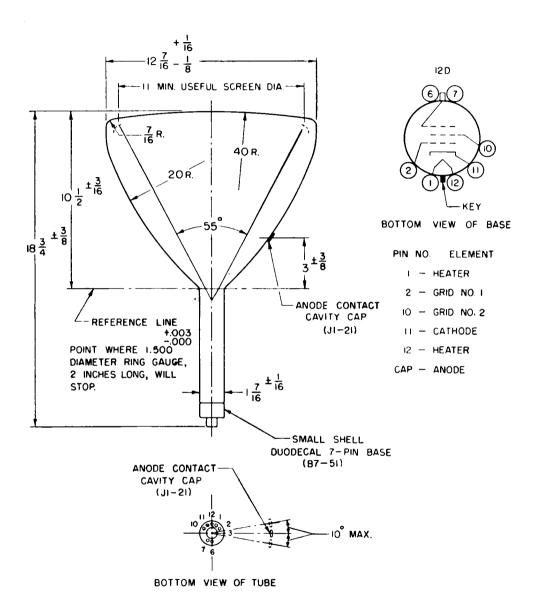

# DU MONT GAS TRIODES AND SPECIAL CATHODE-RAY TUBES

# DU MONT GAS TRIODES

# Types 2B4 and 6Q5G

# Mechanical Dimensions, Basing, and Average Operating Characteristics

The Types 2B4 and 6Q5G Gas Triodes are intended for use in Du Mont Cathode-ray Oscillographs for sweep oscillator service. They are also designed for applications where a gas triode is required for control and counter circuits and where a wide frequency range is desired for sweep oscillators.


### **CHARACTERISTICS**

| Heater                                     | 6Q5G        | 2B4               |
|--|-------------|-------------------|
| Voltage (A-C or D-C)                       | 6.3         | 2.5 volts         |
| Current                                    | 0.6         | 1.4 ampere        |
| Direct Interelectrode Capitances (Nominal) |             |                   |
| Grid to anode                              |             | 2.8 $\mu\mu$ f.   |
| Grid to cathode                            |             | 1.7 $\mu\mu$ f.   |
| Anode to cathode                           |             | $2.0 \mu \mu f$ . |
| Tube Voltage Drop                          |             | 19 volts approx.  |
| Maximum Overall Length                     | 41/8"       | 4-3/16"           |
| Maximum Diameter                           | 1-9/16"     | 1-9/16"           |
| Bulb                                       | ST12        | ST12              |
| Base                                       | Small shell | l Small           |
|  | Octal 8 pir | n 5 pin           |
| Basing—RMA Basing Designation              | 6Q          | 5A                |

#### SWEEP-CIRCUIT OSCILLATOR SERVICE

| Anode Voltage (Instantaneous) | 300 volts (max.)     |
|-------------------------------|----------------------|
| Peak Anode Current            |                      |
| Average Anode Current         | 1 milliampere (max.) |
| Grid Resistance               | 10,000 ohms (min.)   |
|                               | 100,000 ohms (max.)  |
| Frequency Range:              | ·                    |
| 2B4                           | 1-30,000 cps         |
| 6Q5G                          | 1-50,000 cps         |

# Mechanical Dimensions, Basing, and Average Operating Characteristics

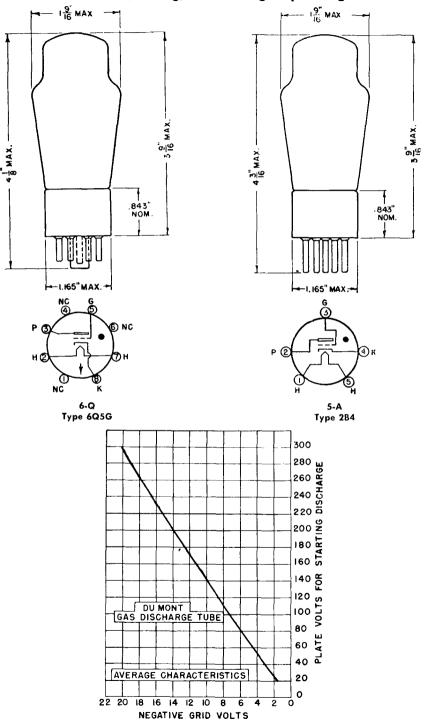

#### DU MONT SPECIAL CATHODE-RAY TUBES

Great care is taken in the line of Du Mont cathoderay tubes to assure broad coverage of standard laboratory and production-line applications. However, in those instances where requirements are beyond the capabilities of standard tubes, Allen B. Du Mont Laboratories, Inc., offers the facility to design, develop and produce highly specialized cathode-ray tubes.

The services offered by Du Mont are unique in the industry. The research, engineering, and production facilities are prepared to undertake any special cathode-ray tube problem. Whether the requirement is for a simple modification of a well-established cathode-ray tube design, or for a wholly new design, Allen B. Du Mont Laboratories is prepared to tackle the job and PRODUCE — to take a special tube problem from the idea stage and carry it through to a practical working model. Moreover, after having met requirements with initial samples, we are equipped to follow through with large production quantities. Whether the order is for one tube or for quantity lots, each tube is manufactured with the same built-in precision and quality that characterize the handmade sample.

Wall Charts of typical Cathode-ray Tubes are available and may be obtained by requesting them from the Industrial Tube Sales Department, 2 Main Avenue, Passaic, New Jersey on your company letterhead.

# DU MONT SELLING AGENTS IN U. S. AND CANADA

ALBANY, N. Y. Edward A. Ossmann & Assoc. 28C Weis Road Albany 8-5833

ALBUQUERQUE, N. Mex. Frank Y. Gates 122 Harvard Drive, S.E. Alb. 3-8010

ATLANTA, Ga. Murphy and Cota 2110 Peachtree Road, N.W. Elgin 3020

BUFFALO, N. Y. Edward A. Ossmann & Assoc. 43 Greenfield Ave. Hamburg, N. Y. Frontier 9563

CHARLOTTE, No. Carolina Murphy & Cota 2036 Norton Road Edison 2-7356

KANSAS CITY, MO. Engineering Services Co. 4550 Main Street Jefferson 1-7765

LOS ANGELES, California J. T. Hill Company 420 So. Pine St., San Gabriel Cumberland 3-6555

MIAMI, Florida Murphy & Cota 3961 Bird Rd. Mohawk 5-1563 MINNEAPOLIS, Minn. Pinkney and Hine 1925 Nicollet Avenue Federal 8-0523 - 0524

NEW YORK, N. Y. Gawler-Knoop Co. 178 Eagle Rock Avenue Roseland, New Jersey Caldwell 6-4545 (New Jersey) Digby 4-2997 (New York)

PHILADEPHIA, Pa. Gawler-Knoop Co. 835 Glenside Avenue Wyncote, Pa. Turner 4-8805 Waverly 7-1820

PITTSBURGH, Pa. H. E. Ransford Co. Grant Building Grant 1-1880

ROCHESTER, N. Y. Edward A. Ossmann & Assoc. 650 Linden Avenue Hillside 0460

ST. LOUIS, MO. Engineering Services Co. 6635 Delmar Blvd. Volunteer 3-3661

SAN DIEGO, Calif. J. T. Hill Company 1864 Bacon Street Academy 3-7133 SAN FRANCISCO, Calif. J. T. Hill Company 906 Willow Road Menlo Park, California Davenport 5-4983

SALT LAKE CITY, Utah Franklin Y. Gates 822 Continental Bank Bldg. Elgin 9-1101

SYRACUSE, N. Y. Edward A. Ossmann & Assoc. 308 Merritt Ave. Syracuse 9-3825

TORONTO, ONT., Canada Bayly Engineering, Ltd. 5 First Street Ajax, Ontario, Canada Empire 8-6866

WASHINGTON, D. C. Gawler-Knoop Co. 8726 Colesville Road Silver Spring, Maryland Juniper 5-7550

WINSTON-SALEM, N. C. Murphy & Cota 35 Burke St. Winston-Salem 40750

FACTORY SALES OFFICE Allen B. Du Mont Labs., Inc. 760 Bloomfield Avenue Clifton, N. J. Mulberry 4-7400

INTERNATIONAL DIVISION Allen B. Du Mont Labs., Inc. 515 Madison Avenue New York 22, N. Y. Lehigh 5-1000

# DU MONT FOREIGN DISTRIBUTORS

#### ARGENTINA

Mr. Dante Walter Gamba, Director Tecnitron Las Heras 2063 - 4°C. Buenos Aires, Argentina

#### AUSTRALIA

Mr. John W. Warmington Geo. H. Sample & Son 17-19 Authony Street Melbourne, C.1, Australia

Mr. G. W. Sample Geo. H. Sample & Son 280 Castereagh Street Sydney, Australia

#### AUSTRIA

See Germany

#### BELGIUM

Mr. Alex. Auriemma Societe Industrielle, ALFA, S.A. 80, Rue de la Senne Brussels, Belgium

J. L. Ebizay, Section Chief. M.B.L.E. 80 Rue Des Deux Gares Brussels, Belgium

#### BRAZH.

Mr. Eduardo F. Eskenazi, Pres. Electrobraz Comercio e Industria, S.A. C. Postal 324 (Rua Mexico 41-11°) Rio de Janeiro, Brazil

#### CHRA

Mr. Homer W. Parker Homer W. Parker & Co. Apartado 3446 Havana, Cuba

#### DENMARK

Mr. Mogens W. Bang Mogens Bang & Co., Inc. 91, Ryvange Alle, Hellerup Copenhagen, Denmark

#### ENGLAND

Mr. A. G. Kneen, Director & Secretary Claude Lyons, Ltd. 76 Old Hall Street Liverpool 3, England

Mr. C. L. Lyons, Director Claude Lyons, Ltd. 4-10 Ware Road Hoddedson, Herts, England

Claude Lyons, Ltd. 180-182A Tottenham Court Road London W.1, England

Mr. S. Alperi Oy Control Ab Kaisaniemenkatu 1 B Helsinki, Finland

FRANCE

Mr. Paul Fabricant Ets. Radiophon 50. Rue Du Faubourg-Poissonniere Paris 10, France

Mr. Benjamin Markman Radiophon Corporation 509 Madison Ave. New York 22, N. Y.

#### GERMANY

Mr. Eric Adler Schneider & Henley, G.M.B.H. Gross-Nabasstrasse 11 Munich, Germany

Mr. J. Kevin Leahy Henley & Co., Inc. 27 Spruce Street New York City, N. Y.

#### GREECE

Mr. Kostas Karayannis K. Karayannis & Co. Karitsi Square Athens, Greece

#### HOLLAND

Mr. J. M. van Steeden Hulsewe Ingenicursbureau Rokin 65-67 Amsterdam, Holland

#### INDIA

Mr. V. G. Motwane, Mgr. Eastern Elec. & Engr. Co. 127 Mahatma Gandhi Road Post Box 459, Fort Bombay 1, India

#### ISRAEL.

Mr. Joseph Giveon 92 Allenby Road Tel Aviv, Israel

#### ITALY

Ing, S. & Dr. Guido Belotti Piazza Trento 8 Milan, Italy

Mr. Hiroshi Shiga, Mg. Dir. Yaou Denki Kabushiki Kaisha 2776 001-Sakashita-cho Shinagawa.ku Tokyo, Japan

NEW ZEALAND Mr. A. Marr P. O. Box 3250 Auckland, New Zealand

#### NORWAY

Mr. G. Hammerik, Sales Engr. Maskin-Aktiesselskapet ZETA Drammensveien 26 Oslo, Norway

#### PORTHCAL

Mr. Manuel Cardoso, Director Sociedade Comercial Romar, Ltda. Apartado 326 Rua da Boavista 83-1° Lisbon, Portugal

#### SOUTH AFRICA

F. H. Flanter & Co. 4, Buitencingle Street Cape Town, South Africa

Union Comerciales Hispano Americano, S.A. Victor Pradera 48 Madrid, Spain

Mr. Manuel Zapico Moran Elemin Products Corp. 238 West 52nd Street New York City, N. Y.

John C. Lagercrantz Vartavagen 57 Stockholm, Sweden

#### SWITZERI AND

Mr. Juerg Keller Seyffer & Co., Inc. Badenstrasse 265 Zurich, Switzerland

#### TURKEY

Ets Mehmet Vasfi P. O. Box Istanbul 143 Istanbul, Turkey

#### HRUGHAY

M. Gonzalez del Rio Casilla de Correo 228 Montevideo, Uruguay

#### VIIGOSLAVIA

Mr. Sanford De Brun 77-15 113th Street Forest Hills, L.I., N. Y.

#### CARIBBEAN REPRESENTATIVE

Mr. Erich Gompertz Allen B. Du Mont Labs., Inc. Security Bldg., Room 1001 117 N.E. First Avenue Miami, Florida Cable Address ALBEEDU Miami

#### EUROPEAN REPRESENTATIVE

Mr. James Segre Corso Venezia 51 Milan, Italy Cable Address ALBEEDU Milano

Mr. A. Longchamp 130 W. 42nd St. New York 36, N. Y.

#### NEW YORK OFFICE

Mr. Robert I. Gaines, Asst. Director Miss M. E. Lenox

International Division 515 Madison Avenue New York 22, N. Y. Cable Address ALBEEDU New York

# DU MONT

Cathode-ray Tubes

ALLEN B. DU MONT LABORATORIES, INC.
INDUSTRIAL TUBE SALES DEPARTMENT

2 MAIN AVENUE, PASSAIC, N. J.