




CMA.1234 CARCINOTRON

The CMA.1234 is a rugged, compact, electronically tunable, crossfield, backward wave oscillator. Its light weight makes it suitable for airborne equipments. Sturdy metal-ceramic construction insures reliable performance in spite of severe environmental conditions.

This M type carcinotron provides an output of at least 250 W over the frequency range of 1.06 to 1.37 GHz. The tube tunes over the entire frequency range by changing the line or sole voltage.

It can be amplitude modulated through its anode. Frequency modulation can be obtained by line or sole voltage variations.

The CMA.1234 uses integral permanent magnet focusing. Liquid cooling insures operation in a wide temperature range.

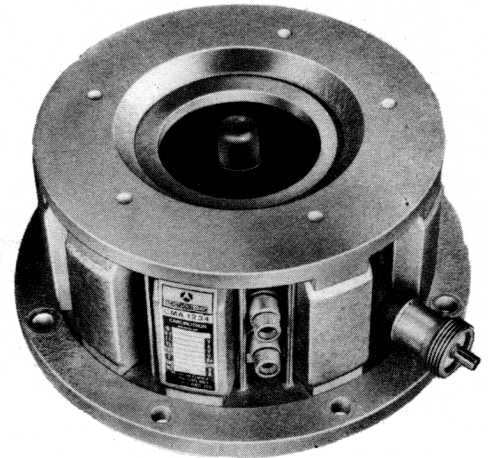

GENERAL CHARACTERISTICS

Electrical (1)	min.	max.	
Heater voltage		6.3	V
Heater current	3.5	6.0	V
Output power	250	-	W
Frequency range	1.06	1.37	GHz
Interelectrodes capacitances :			
Sole to all other electrodes	-	105	pF
Anode to all other electrodes	-	18	pF
Line to all other electrodes	-	105	pF
Sole voltage	-0.5	-1.5	kV
Sole current	-80	0	mA
Grid voltage	-0.1	-1.0	kV
Grid current	-	1.0	mA
Anode voltage	-	2.0	kV
Anode current	-0.25	+2.0	mA
Line voltage	1.5	5.0	kV
Line current		350	mA
Mechanical			
Operating position		any	
Dimensions		see drawing	
Weight		13 kg	
RF output connector		coaxial	

(1) - All voltages are referred to the cathode.



COOLING

WATER

Water flow	min.	2	l/mn
Pressure drop (1)	max.	0.25	bar
Coolant temperature . . .	max.	80	°C
Absolute inlet pressure .	max.	2.7	bar

COOLANOL 35

Liquid flow	min.	4	l/mn
Pressure drop (1)	max.	0.85	bar
Coolant temperature . . .	max.	80	°C
Absolute inlet pressure .	max.	2.7	bar

ABSOLUTE RATINGS

(non simultaneous values)

	min.	max.		min.	max.	
Warm-up time	5	-	mn	-500	-2100	V
Heater voltage	6.0	6.6	V	-100	+100	V
Heater surge current . . .	-	6.0	A	-	+200	V
Load VSWR (2).	-	3: 1		-	+5.2	kV
Ambient temperature . . .	-40	+110	°C	-	440	mA
Vibration : 5 to 15 Hz -	0.5 g			-	15	g
15 to 500 Hz -	2 g					

TYPICAL OPERATION

Heater voltage	6.3	V	Oscillating frequency :	1.06	1.37	GHz
Heater current	4.5	A				
Sole voltage	-0.9	kV	Anode voltage	970	960	V
Grid voltage	-0.4	kV	Line voltage	2.55	4.75	kV
Grid current	0	mA	Sole current	15	60	mA
Line current	350	mA	Output power	310	540	W

OPERATING INSTRUCTIONS

Application of voltages

- Before applying any voltages to the tube, check the coolant flow.
- Apply the heater voltage and allow at least five minutes for the cathode to warm-up.
- Apply grid and sole voltages.
- Apply line voltage. The minimum value of the line voltage given on the tube label is for operating at the lower frequency ; when starting the tube, the voltage applied should be slightly higher.
- Apply reduced anode voltage. Increase the voltage slowly and simultaneously check the line voltage, which should not decrease.
- Adjust the voltages for each particular operation.
- Apply modulation voltages.

Removal of voltages

- First remove the modulation voltages.
- Remove anode voltage.
- Remove line voltage.
- Remove sole, grid and heater voltages.
- Turn off coolant supply to the tube.



Caution

Minimum distance of 15 cm should be kept between the tube and all other magnetic materials.


- (1) - 1 bar = approximately 15 psi.
- (2) - The tube may require a load isolator at load VSWR exceeding 1.5 : 1 to maintain the tube performances.
- (3) - These minimum and maximum ratings are the allowable deviation from the nominal value given for each tube.



Characteristic curves

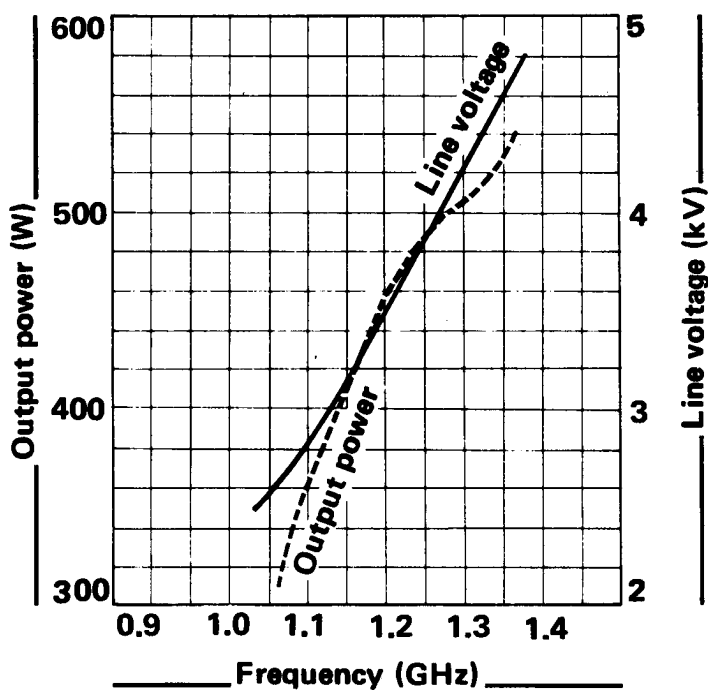
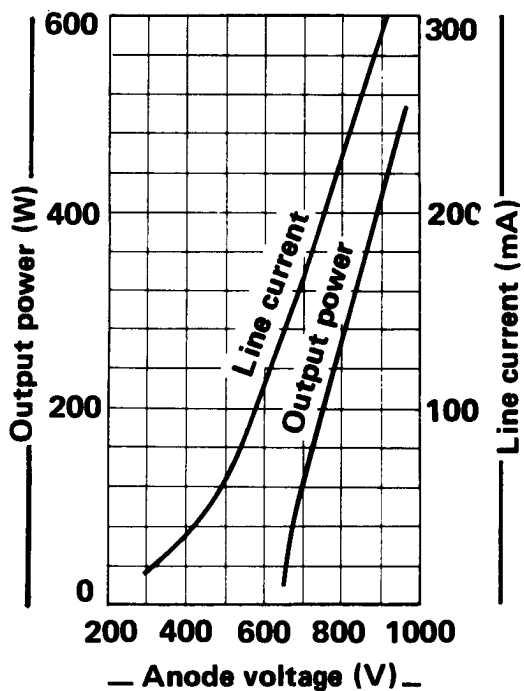


Supply diagram

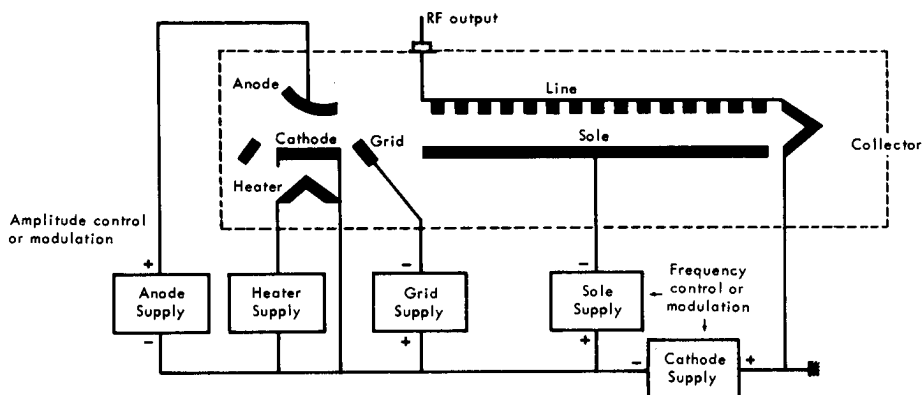





OUTLINE DRAWING

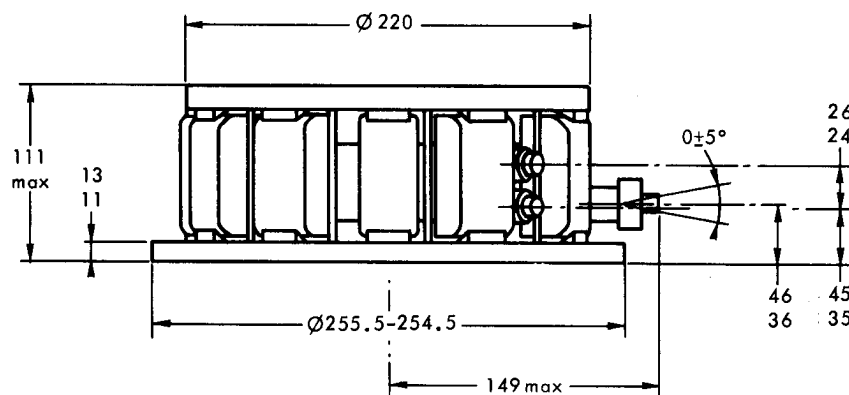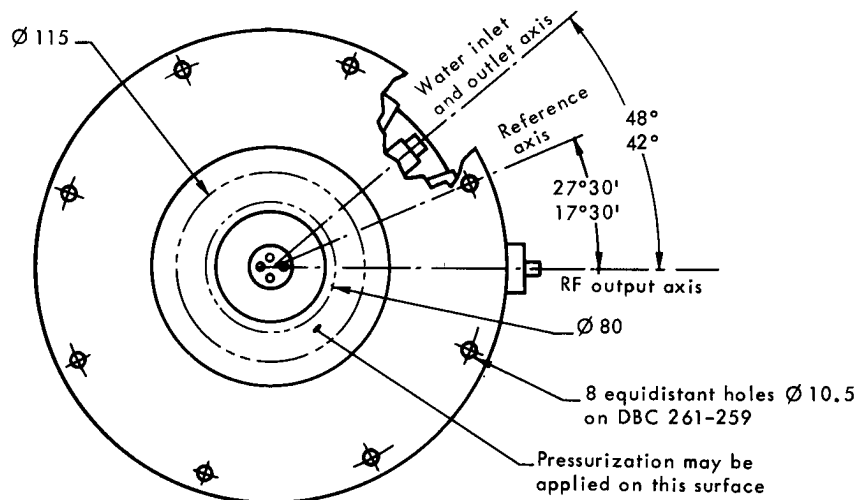



Water connection

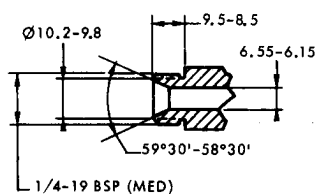

Pin arrangement

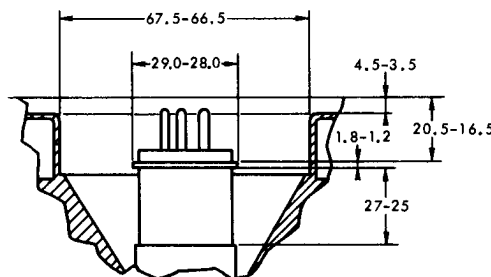

RF output

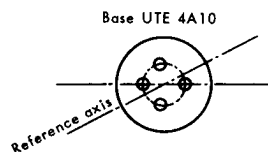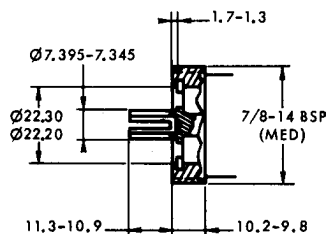

Dimensions in mm

