INSTRUMENT CATHODE-RAY TUBE

- 10cm diagonal rectangular flat face
- domed mesh post-deflection acceleration
- short tube max. 220 mm
- high precision by permanent magnetic correction system
- low heater power consumption
- very high brightness
- for small oscilloscopes with up to 50 MHz bandwidth and read-out devices

QUICK REFERENCE DATA

Final accelerator voltage	$V_{g7(I)}$	10 kV
First accelerator voltage	$V_{g2,4}$	1 kV
Minimum useful scan area		70 mm x 56 mm
Deflection coefficient horizontal vertical	M_{x} M_{y}	16,5 V/cm 11 V/cm

vertical	ivi _y	TT V/CITI
OPTICAL DATA		
Screen type colour persistence		metal backed phosphor GH (P31) green medium short
Useful screen area		≥70 mm x 56 mm (note 1)
Useful scan area		≥70 mm x 56 mm
Internal graticule		type 125 (see Fig.4)
HEATING		
Indirect by AC or DC *		
Heater voltage	V_{f}	6.3 V
Heater current	l _f	0.1 A
Heating time to attain 10% of the cathode current at equilibrium conditions		approx. 7 s

1

^{*} not to be connected in series with other tubes.

MECHANICAL DATA

Dimensions and connections (see also outline drawings)

Overall length (socket included) max. 220 mm

Faceplate dimensions $82 \pm 0.5 \text{ mm} \times 69 \pm 0.5 \text{ mm}$

Net mass (including trace rotation coil) approx. 450 g

Base 12 pin, all glass JEDEC B12-246

Mounting

The tube can be mounted in any position. It must not be supported by the socket and not by the base region alone. The reference points on adjoining edges of the faceplate (see Fig.4) enable the tube to be positioned accurately in the front panel, with optimum alignment of the internal graticule with respect to the bezel.

Accessories

Socket with solder tags type 55594

Socket with printed wiring pins type 55595
Final accelerator contact connector type 55569
Mu metal shield type 55461

FOCUSING electrostatic

DEFLECTION double electrostatic

x plates symmetrical y plates symmetrical

CAPACITANCES *

x ₁ to all other elements except x ₂	$C_{x1(x2)}$	4 pF
x_2 to all other elements except x_1	$C_{x2(x1)}$	4 pF
y ₁ to all other elements except y ₂	$C_{y1(y2)}$	3 pF
y ₂ to all other elements except y ₁	$C_{y2(x1)}$	3 pF
x_1 to x_2	C_{x1x2}	2 pF
y_1 to y_2	C_{y1y2}	1 pF
Control grid to all other elements	C_{g1}	6 pF
Cathode to all other elements	C_k	3 pF
Focus electrode to all other elements	C_{g3}	5 pF
Final accelerator electrode to all other elements	C_{g7}	240 pF

Approximate values

DIMENSIONS AND CONNECTIONS

Dimensions in mm

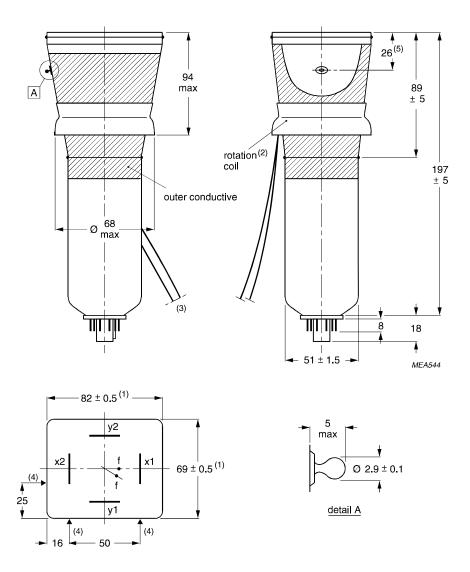


Fig.1 Mechanical outlines.

- (1) Dimensions of faceplate only. The complete assembly of faceplate and cone (frit seal included) will pass through an opening of 85 mm x 72 mm (diagonal 107 mm).
- (2) The coil is fixed to the envelope with silicone rubber and adhesive tape.
- (3) The length of rotation coil connecting leads is min. 350 mm.
- (4) Reference points on faceplate for graticule alignment. (see Fig.4)
- (5) The centre of the final accelerator contact is situated within a square of 7 mm x 7 mm around the indicated position.



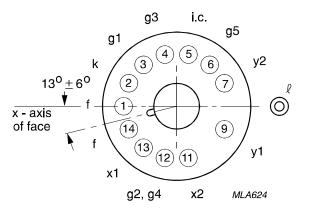


Fig.2 Pin arrangement, bottom view.

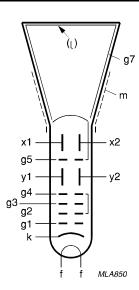

Internal graticule

Line thickness = 0.15 mm, colour N 1.5.

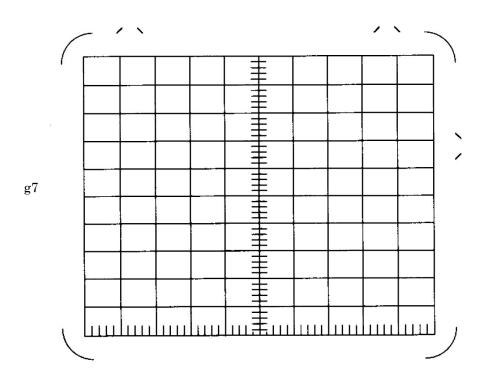

TYPICAL OPERATION (voltages are with respect to the cathode)

Conditions

Final accelerator voltage	$V_{g7(I)}$	10 kV	
Mean deflection plate potential		1 kV	note 2
Shield voltage for optimum geometry	V_{g5}	1 kV	note 3
First accelerator and astigmatism control voltage	$V_{g2,4}$	1 kV	note 3
Focusing voltage	V_{g3}	150 to 250 V	
Cut-off voltage for visual extinction of focused spot	$-V_{g1}$	45 to 90 V	

Outer conductive coating (m) and mu-metal shield to be earthed

PERFORMANCE

Horizontal deflection coefficient	M_{x}	16.5 V/d	cm ± 10 %	
Vertical deflection coefficient	M_{y}	11 V/cm	ı ± 5%	
Deviation of deflection linearity			< 2%	note 4
Geometry distortion				note 5
Eccentricity of undeflected spot in horizontal direction			< 4 mm	
in vertical direction			< 2 mm	
Angle between x and y traces			90°	note 5
Angle between x-trace and x-axis of international	al graticule		< 5°	note 7
Luminance reduction with respect to scree x axis, outer graticule line y axis, outer graticule line any corner	n centre	< 30% < 30% < 50%		
Grid drive for 10 μA screen current		V_d	approx. 15 V	Fig. 5
Line width at 10 µA		l.w.	approx. 0.23 mm	note 8
at 25 μA		l.w.	approx. 0.30 mm	note 8

LIMITING VALUES (Absolute maximum rating system)				
Final accelerator voltage	$V_{g7(I)}$	max. 15 kV	Fig. 6	
Shield voltage	V_{g5}	max. 2 kV		
First accelerator and astigmatism control voltage $V_{g2,4}$		max. 2 kV		
Focusing electrode voltage	V_{g3}	max. 2 kV		
Control grid voltage	$-V_{g1}$	max. 200 V		
		min. 0 V		
Cathode to heater voltage		405.)/		
positive negative	V _{kf} -V _{kf}	max. 125 V max. 125 V		
•				
Heater voltage	V_f	max. 6.6 V		
		min. 6.0 V		
Voltage between g _{4,5} and any deflection plate	$V_{g4,g5,x,y,}$	max. 500 V		
Grid drive, averaged over 1 ms	V_d	max. 25 V		
Screen dissipation	W_{l}	max. 8 mW/cm ²		
Control grid circuit resistance	R_{g1}	max. 1 $M\Omega$		

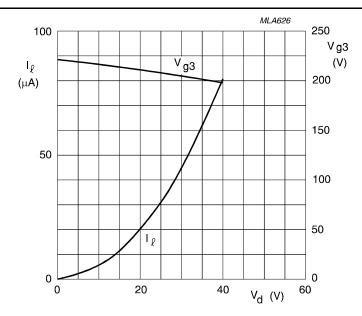


Fig.5 Screen current (I_1) and focusing voltage (V_{g3}) as a function of grid drive voltage (V_d) at $V_{g2,g4,}$ = 1000 V; typical curves.

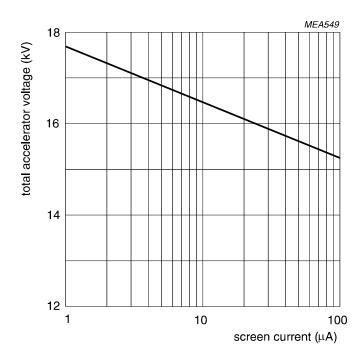


Fig.6 Isoexposure-rate limit curve for 0.5 mR/h, measured in accordance with EIA RS-502.

NOTES

- 1. Because the frit seal is visible through the faceplate, and not necessarily aligned with the internal graticule, application of an external mask, or bezel, with open area of max. 70 mm x 56 mm is recommended. The internal graticule is aligned with the faceplate by using the faceplate reference points (see Fig.4).
- 2. The deflection plates must be operated symmetrically: floating mean x- or y-potentials will result into non-uniform line width and geometry distortion. The mean x- and y-potentials should be equal; under this condition the tube will be within the specification without corrections for astigmatism and geometry (see also note 5).
- 3. For some applications a mean x-potential up to 50 V positive with respect to mean y-potential is inevitable. In this case V_{g5} must be made equal to mean x-potential, and a range of 0 to 25 V with respect to mean y-potential will be required on $g_{2,4}$ for astigmatism correction. The circuit resistance for $V_{g2,4}$ should be < 10 k Ω and < 25 k Ω for V_{g5} .
- 4. The sensitivity at a deflection of less than 75 % of the useful scan will not differ from the sensitivity at a deflection of 25 % of the useful scan by more than the indicated value.
- 5. The tube is adjusted by internal permanent magnetic elements for optimum geometry (orthogonality,trapezium and barrel/pin-cushion), brightness uniformity, eccentricity of undeflected spot, and astigmatism.
- 6. A graticule consisting of concentric rectangles of 68 x 54.4 mm and 66.8 x 53.2 mm is aligned with the internal graticule. With optimum trace rotation correction the edges of a raster will fall between these rectangles.
- 7. The tube has a trace rotation coil, fixed onto the lower cone part. The coil has a maximum resistance of 235 Ω at 80° C. The maximum required voltage is approx. 8 V for tube tolerances (± 5°) and earth magnetic field with reasonable shielding (± 2°).
- 8. Measured with the shrinking raster method in the centre of the screen under typical operating conditions, adjusted for optimum spot size.

© 1996 CRT Heerlen B.V. All rights reserved. Printed in the Netherlands.

The information presented in this document may be changed without notice. It is advisable to contact the supplier for availability and latest data before designing this product into equipment.

Publication of this document does not convey nor imply any license under patent- or other industrial or intellectual property rights.